



# Industrial Router Pro Series

## UR35

### User Guide



## Preface

Thanks for choosing Milesight UR35 industrial cellular router. The UR35 industrial cellular router delivers tenacious connection over network with full-featured design such as automated failover/failback, extended operating temperature, dual SIM cards, hardware watchdog, VPN, Fast Ethernet and beyond.

This guide describes how to configure and operate the UR35 industrial cellular router. You can refer to it for detailed functionality and router configuration.

## Readers

This guide is mainly intended for the following users:

- Network Planners
- On-site technical support and maintenance personnel
- Network administrators responsible for network configuration and maintenance

© 2011-2026 Xiamen Milesight IoT Co., Ltd.

**All rights reserved.**

All information in this user guide is protected by copyright law. Whereby, no organization or individual shall copy or reproduce the whole or part of this user guide by any means without written authorization from Xiamen Milesight IoT Co., Ltd.


## Safety Precautions

Milesight will not shoulder responsibility for any loss or damage resulting from not following the instructions of this operating guide.

- ❖ The device must not be disassembled or remodeled in any way.
- ❖ To avoid risk of fire and electric shock, do keep the product away from rain and moisture before installation.
- ❖ Do not place the device where the temperature or humidity is below/above the operating range.
- ❖ The device must never be subjected to drops, shocks or impacts.
- ❖ Make sure the device is firmly fixed when installing.
- ❖ Make sure the plug is firmly inserted into the power socket.
- ❖ Do not pull the antenna or power supply cable, detach them by holding the connectors.

## Declaration of Conformity

UR35 is in conformity with the essential requirements and other relevant provisions of the CE, FCC, and RoHS.

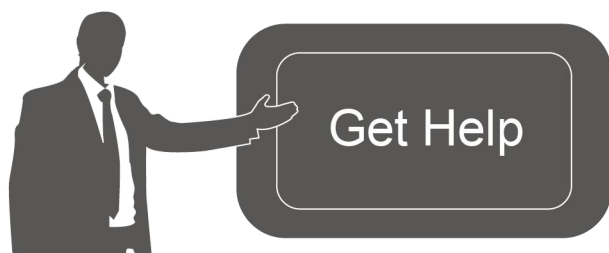

For assistance, please contact

Milesight technical support:

Email: [iot.support@milesight.com](mailto:iot.support@milesight.com)

Support Portal: [support.milesight-iot.com](https://support.milesight-iot.com)

Tel: 86-592-5085280

Fax: 86-592-5023065

Address: Building C09, Software Park III,  
Xiamen 361024, China

## Revision History

| Date           | Doc Version | Description                                                                                                                                                                                                                                                                                                                     |
|----------------|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| July 19, 2019  | V 1.1       | Initial version                                                                                                                                                                                                                                                                                                                 |
| Sept. 23, 2019 | V 1.2       | Support voice call                                                                                                                                                                                                                                                                                                              |
| Nov.14, 2019   | V 1.3       | Add Python, SMS, IP passthrough functions                                                                                                                                                                                                                                                                                       |
| May 11, 2020   | V 1.4       | Web interfaces upgrade                                                                                                                                                                                                                                                                                                          |
| Dec. 9, 2020   | V 2.0       | Layout replace                                                                                                                                                                                                                                                                                                                  |
| Sept. 17, 2021 | V 2.1       | 1. Cellular and ping detection support IPv6;<br>2. Add WAN connection type: DHCPv6 client, DS-Lite<br>3. Add DHCPv6 Server feature;<br>4. Add IPv6 static routing feature;<br>5. Add Expert Option box in IPsec settings;<br>6. Support SMS inbox and outbox record clear.                                                      |
| June 30, 2023  | V 2.2       | 1. Add high priority link revert feature;<br>2. Add MQTT and TR069 feature;<br>3. Support customized cellular MTU and IMS;<br>4. Support to import openVPN file configurations, add tls-crypt mode and authentication mode;<br>5. Update Modbus Master/Slave to Modbus Client/Server;<br>6. Support to configure L2TP hostname. |
| July 5, 2024   | V 2.3       | 1. Add WireGuard VPN feature;<br>2. Add cellular band selection and subnet mask customization;<br>3. Support to sync time with cellular operator;<br>4. Support to show Ethernet port connection status and configure PoE settings;<br>5. Support MQTT feature on DI and serial DTU mode downlink;                              |

|                |       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|----------------|-------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                |       | <ul style="list-style-type: none"> <li>6. Update default secondary ICMP and DNS server address;</li> <li>7. Add WPA/WPA2-Enterprise encryption mode of WLAN client mode;</li> <li>8. IPsec setting web GUI optimization.</li> </ul>                                                                                                                                                                                                                                                                                                                         |
| April 11, 2025 | V 2.4 | <ul style="list-style-type: none"> <li>1. Add ZeroTier VPN.</li> <li>2. Compatible with DeviceHub 2.0 and Milesight Development Platform.</li> <li>3. Support 802.1x protocol to connect to Radius servers.</li> <li>4. Add cellular custom DNS server option.</li> <li>5. Optimize the configuration modes of Email groups and phone groups.</li> <li>6. Support to configure username, test email address in SMTP client settings.</li> <li>7. Add byte order on Modbus channel settings.</li> </ul>                                                      |
| Sep.22, 2025   | V 2.5 | <ul style="list-style-type: none"> <li>1. Add DLMS feature.</li> <li>2. Support cellular interface IP passthrough.</li> <li>3. Support multiple APN.</li> <li>4. Support policy routing function.</li> <li>5. Switch setting web GUI optimization.</li> <li>6. Support to configure IP, reporting interval in DDNS settings.</li> <li>7. Support to configure service name, VLAN ID in PPPoE client settings.</li> <li>8. Support to configure IPv6 address in Switch setting.</li> <li>9. Support multiple local &amp; remote subnets on IPsec.</li> </ul> |
| Dec. 30, 2025  | V 2.6 | <ul style="list-style-type: none"> <li>1. Modbus Client function optimization.</li> <li>2. Add web password limitation and change prompt.</li> <li>3. Add partial backup.</li> <li>4. Add auto APN.</li> <li>5. Add level change trigger mode and SNMP Trap reporting in DI setting.</li> <li>6. Add Autp DST function in system time setting.</li> <li>7. Support automatic IP address acquisition via interface in DMVPN setting.</li> <li>8. Add multiple encryption and authentication algorithms for DMVPN.</li> </ul>                                 |
| April 30, 2026 | V 2.7 | <ul style="list-style-type: none"> <li>1. Add real-time network speed display and historical accumulated traffic statistics.</li> <li>2. Add cellular signal strength and mobile data usage display.</li> <li>3. Support switching the WAN port to LAN mode.</li> </ul>                                                                                                                                                                                                                                                                                     |



|  |  |                                                                                                                                                                                                                                                                                                                                                                         |
|--|--|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |  | <ul style="list-style-type: none"><li>4. Optimized VLAN configuration.</li><li>5. Add support for specifying PLMN.</li><li>6. Add monthly SMS statistics and monthly SMS limit.</li><li>7. Optimized the link failover priority interaction.</li><li>8. Add configurable HTTP to HTTPS redirection.</li><li>9. Optimized DoS/DDoS attack protection strategy.</li></ul> |
|--|--|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

# Contents

|                                                  |    |
|--------------------------------------------------|----|
| Chapter 1 Product Introduction .....             | 10 |
| 1.1 Overview .....                               | 10 |
| 1.2 Advantages .....                             | 10 |
| Chapter 2 Access to Web GUI .....                | 12 |
| Chapter 3 Web Configuration .....                | 14 |
| 3.1 Status .....                                 | 14 |
| 3.1.1 Overview .....                             | 14 |
| 3.1.2 Cellular .....                             | 15 |
| 3.1.3 Network .....                              | 18 |
| 3.1.4 WLAN .....                                 | 19 |
| 3.1.5 VPN .....                                  | 20 |
| 3.1.6 Routing .....                              | 20 |
| 3.1.7 Host List .....                            | 21 |
| 3.1.8 GPS (Only Applicable to GPS Version) ..... | 22 |
| 3.2 Network .....                                | 23 |
| 3.2.1 Interface .....                            | 23 |
| 3.2.1.1 Link Failover .....                      | 23 |
| 3.2.1.2 Cellular .....                           | 25 |
| 3.2.1.3 Port .....                               | 29 |
| 3.2.1.4 WAN .....                                | 33 |
| 3.2.1.5 Bridge .....                             | 38 |
| 3.2.1.6 WLAN .....                               | 39 |
| 3.2.1.7 VLAN .....                               | 43 |
| 3.2.1.8 Loopback .....                           | 44 |
| 3.2.2 DHCP .....                                 | 45 |
| 3.2.2.1 DHCP Server/DHCPv6 Server .....          | 45 |
| 3.2.2.2 DHCP Relay .....                         | 47 |
| 3.2.3 Firewall .....                             | 48 |
| 3.2.3.1 Security .....                           | 48 |
| 3.2.3.2 ACL .....                                | 49 |
| 3.2.3.3 Port Mapping (DNAT) .....                | 51 |
| 3.2.3.4 DMZ .....                                | 51 |
| 3.2.3.5 MAC Binding .....                        | 52 |
| 3.2.3.6 Custom Rules .....                       | 52 |
| 3.2.3.7 SPI .....                                | 53 |
| 3.2.4 QoS .....                                  | 54 |
| 3.2.5 VPN .....                                  | 55 |
| 3.2.5.1 DMVPN .....                              | 55 |
| 3.2.5.2 IPSec Server .....                       | 57 |
| 3.2.5.3 IPSec .....                              | 60 |
| 3.2.5.4 GRE .....                                | 63 |
| 3.2.5.5 L2TP .....                               | 65 |

|                                      |     |
|--------------------------------------|-----|
| 3.2.5.6 PPTP .....                   | 67  |
| 3.2.5.7 OpenVPN Client .....         | 69  |
| 3.2.5.8 OpenVPN Server .....         | 71  |
| 3.2.5.9 WireGuard .....              | 74  |
| 3.2.5.10 Certifications .....        | 76  |
| 3.2.5.11 ZeroTier .....              | 78  |
| 3.2.6 IP Passthrough .....           | 79  |
| 3.2.7 Routing .....                  | 80  |
| 3.2.7.1 Static Routing .....         | 80  |
| 3.2.7.2 Priority Based Routing ..... | 81  |
| 3.2.7.3 RIP .....                    | 82  |
| 3.2.7.4 OSPF .....                   | 85  |
| 3.2.8 VRRP .....                     | 91  |
| 3.2.9 DDNS .....                     | 93  |
| 3.3 System .....                     | 95  |
| 3.3.1 General Settings .....         | 95  |
| 3.3.1.1 General .....                | 95  |
| 3.3.1.2 System Time .....            | 95  |
| 3.3.1.3 Email .....                  | 96  |
| 3.3.1.4 Storage .....                | 98  |
| 3.3.2 Phone&SMS .....                | 99  |
| 3.3.2.1 Phone .....                  | 99  |
| 3.3.2.2 SMS .....                    | 99  |
| 3.3.3 User Management .....          | 101 |
| 3.3.3.1 Account .....                | 101 |
| 3.3.3.2 User Management .....        | 102 |
| 3.3.4 AAA .....                      | 103 |
| 3.3.4.1 Radius .....                 | 103 |
| 3.3.4.2 TACACS+ .....                | 103 |
| 3.3.4.3 LDAP .....                   | 104 |
| 3.3.4.4 Authentication .....         | 105 |
| 3.3.5 Device Management .....        | 106 |
| 3.3.5.1 Auto Provision .....         | 106 |
| 3.3.5.2 Device Management .....      | 106 |
| 3.3.5.3 Milesight VPN .....          | 107 |
| 3.3.6 Events .....                   | 108 |
| 3.3.6.1 Events .....                 | 108 |
| 3.3.6.2 Events Settings .....        | 109 |
| 3.4 Service .....                    | 111 |
| 3.4.1 I/O .....                      | 111 |
| 3.4.1.1 DI .....                     | 111 |
| 3.4.1.2 DO .....                     | 112 |
| 3.4.2 Serial Port .....              | 113 |
| 3.4.3 Modbus Server (Slave) .....    | 117 |

|                                                  |     |
|--------------------------------------------------|-----|
| 3.4.3.1 Modbus TCP .....                         | 117 |
| 3.4.3.2 Modbus RTU .....                         | 117 |
| 3.4.3.3 Modbus RTU Over TCP .....                | 118 |
| 3.4.4 Modbus Client (Master) .....               | 119 |
| 3.4.4.1 Modbus Client .....                      | 119 |
| 3.4.4.2 Channel Settings .....                   | 120 |
| 3.4.4.3 Alarm Settings .....                     | 121 |
| 3.4.4.4 Data Forwarding .....                    | 123 |
| 3.4.5 GPS (Only Applicable to GPS Version) ..... | 125 |
| 3.4.5.1 GPS IP Forwarding .....                  | 125 |
| 3.4.5.2 GPS Serial Forwarding .....              | 126 |
| 3.4.5.3 GPS MQTT Forward .....                   | 127 |
| 3.4.6 MQTT .....                                 | 128 |
| 3.4.7 SNMP .....                                 | 132 |
| 3.4.7.1 SNMP .....                               | 132 |
| 3.4.7.2 MIB View .....                           | 133 |
| 3.4.7.3 VACM .....                               | 133 |
| 3.4.7.4 Trap .....                               | 134 |
| 3.4.7.5 MIB .....                                | 135 |
| 3.4.8 TR069 .....                                | 135 |
| 3.4.9 DLMS .....                                 | 137 |
| 3.4.9.1 Physical Device Settings .....           | 137 |
| 3.4.9.2 COSEM Group Settings .....               | 139 |
| 3.4.9.3 Platform Connection Settings .....       | 140 |
| 3.5 Maintenance .....                            | 142 |
| 3.5.1 Tools .....                                | 142 |
| 3.5.1.1 Ping .....                               | 142 |
| 3.5.1.2 Traceroute .....                         | 143 |
| 3.5.1.3 Packet Analyzer .....                    | 143 |
| 3.5.1.4 Qxdmlog .....                            | 143 |
| 3.5.2 Debugger .....                             | 144 |
| 3.5.2.1 Cellular Debugger .....                  | 144 |
| 3.5.2.2 Firewall Debugger .....                  | 144 |
| 3.5.3 Log .....                                  | 145 |
| 3.5.3.1 System Log .....                         | 145 |
| 3.5.3.2 Log Download .....                       | 146 |
| 3.5.3.3 Log Settings .....                       | 147 |
| 3.5.4 Upgrade .....                              | 148 |
| 3.5.5 Backup and Restore .....                   | 148 |
| 3.5.6 Reboot .....                               | 149 |
| 3.6 APP .....                                    | 150 |
| 3.6.1 Python .....                               | 150 |
| 3.6.1.1 Python .....                             | 150 |
| 3.6.1.2 App Manager Configuration .....          | 151 |

|                                              |     |
|----------------------------------------------|-----|
| 3.6.1.3 Python App .....                     | 151 |
| Chapter 4 Application Examples .....         | 152 |
| 4.1 Network Connection .....                 | 152 |
| 4.1.1 Cellular Connection .....              | 152 |
| 4.1.2 Ethernet WAN Connection .....          | 154 |
| 4.2 Wi-Fi Application Example .....          | 155 |
| 4.2.1 AP Mode .....                          | 155 |
| 4.2.2 Client Mode .....                      | 156 |
| 4.3 OpenVPN Client Application Example ..... | 157 |
| 4.4 NAT Application Example .....            | 159 |
| 4.5 DTU Application Example .....            | 160 |
| 4.6 Restore Factory Defaults .....           | 163 |
| 4.7 Firmware Upgrade .....                   | 164 |
| 4.8 SNMP Application Example .....           | 165 |
| 4.9 VRRP Application Example .....           | 168 |
| 4.10 QoS Application Example .....           | 171 |
| 4.11 DLMS Client Example .....               | 172 |

## Chapter 1 Product Introduction

### 1.1 Overview

UR35 is an industrial cellular router with embedded intelligent software features that are designed for multifarious M2M/IoT applications. Supporting global WCDMA and 4G LTE, UR35 provides drop-in connectivity for operators and makes a giant leap in maximizing uptime.

Adopting high-performance and low-power consumption industrial grade CPU and wireless module, the UR35 is capable of providing wire-speed network with low power consumption and ultra-small package to ensure the extremely safe and reliable connection to the wireless network.

Meanwhile, the UR35 also supports Fast Ethernet ports, serial port (RS232/RS485) and I/O (input/output), which enables you to scale up M2M application combining data and video in limited time and budget.

UR35 is particularly ideal for smart grid, digital media installations, industrial automation, telemetry equipment, medical device, digital factory, finance, payment device, environment protection, water conservancy and so on.

For details of hardware and installation, please check UR35 Quick Start Guide.

### 1.2 Advantages

#### Benefits

- Built-in industrial strong NXP CPU, big memory
- Fast Ethernet for fast data transmission
- Dual SIM cards for backup between multiple carriers networking and global 2G/3G/LTE options make it easy to get connected
- Multiple APN interfaces for simultaneous access to different network services
- Equipped with Ethernet, I/O, serial port, Wi-Fi, GPS for connecting diverse field assets
- Embedded Python SDK for second development
- Rugged enclosure, optimized for DIN rail or shelf mounting
- 3-year warranty included

#### Security & Reliability

- Automated failover/failback between Ethernet and Cellular (dual SIM)
- Enable unit with security frameworks like IPsec/OpenVPN/GRE/L2TP/PPTP/DMVPN/WirGuard/ZeroTier VPN
- Embed hardware watchdog, automatically recovering from various failure, and ensuring highest level of availability

- Establish a secured mechanism on centralized authentication and authorization of device access by supporting AAA (TACACS+, Radius, LDAP, local authentication) and multiple levels of user authority

### **Easy Maintenance**

- Milesight DeviceHub/Development Platform provide easy setup, mass configuration, and centralized management of remote devices
- The user-friendly web interface design and more than one option of upgrade help administrator to manage the device as easy as pie
- Web GUI and CLI enable the admin to achieve simple management and quick configuration among a large quantity of devices
- Efficiently manage the remote routers on the existing platform through the industrial standard SNMP and TR069

### **Capabilities**

- Link remote devices in an environment where communication technologies are constantly changing
- Industrial 32-bit ARM Cortex-A7 processor, high-performance operating up to 528MHz and 128 MB memory available to support more applications
- Support rich protocols like SNMP, TR069, MQTT, Modbus bridging, RIP, OSPF, etc
- Support wide operating temperature ranging from -40°C to 70°C/-40°F to 158°F

## Chapter 2 Access to Web GUI


This chapter explains how to access to Web GUI of the UR35 router. Connect PC to LAN port of UR35 router directly. The following steps are based on Windows 10 operating system for your reference.

Username: **admin**



Password: **password**

IP Address: **192.168.1.1**

1. Go to “Control Panel” → “Network and Internet” → “Network and Sharing Center”, then click “Ethernet” (May have different names).

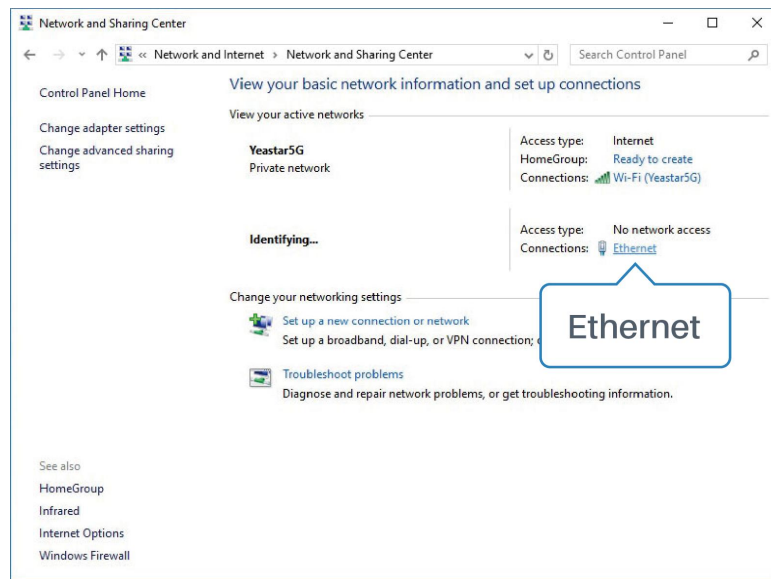


2. Go to “Properties” → “Internet Protocol Version 4(TCP/IPv4)”, select “Obtain an IP address automatically” or “Use the following IP address”, then assign a static IP manually within the same subnet of the device.

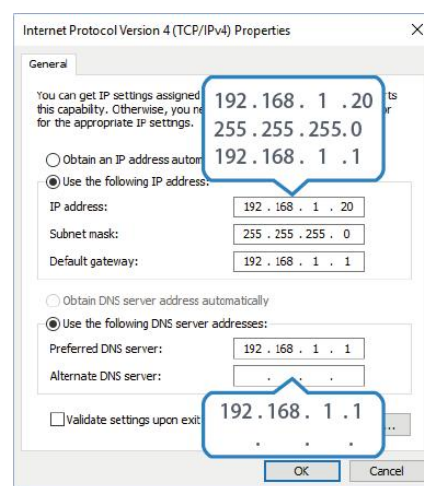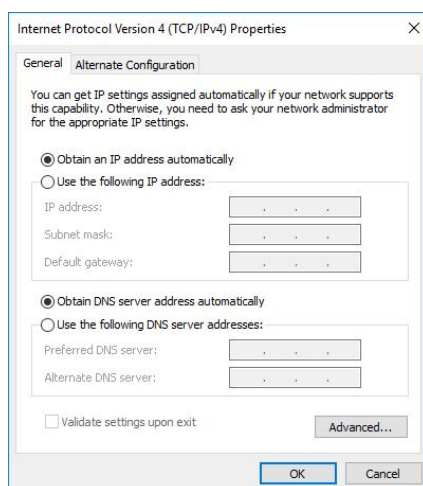


3. Open a Web browser on your PC (Chrome is recommended), type in the IP address <https://192.168.1.1>, and press Enter on your keyboard.
4. Enter the username, password, and click "Login".



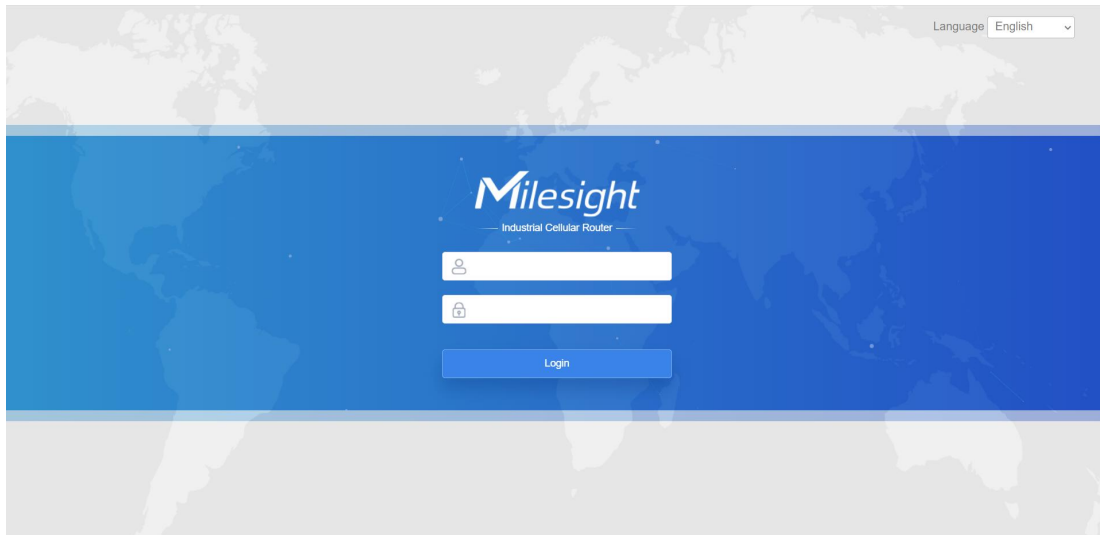

**!** If you enter the username or password incorrectly more than 5 times, the login page will be locked for 10 minutes.

5. After logging the web GUI, it is necessary to change the web GUI password for the first time. The password must contain at least one letter and one number.

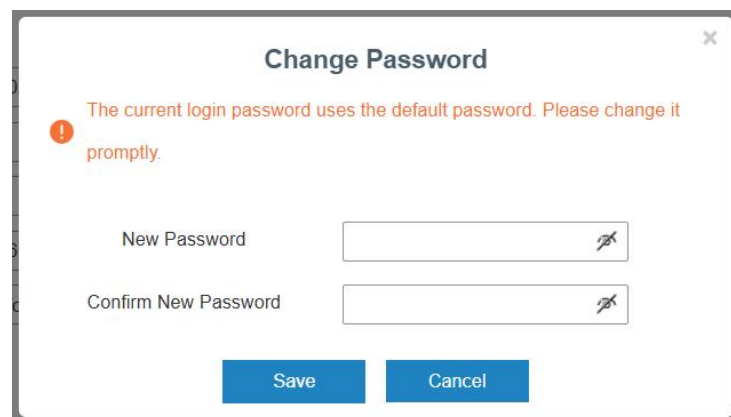The image shows a "Change Password" dialog box. At the top, it says "Change Password" with a close button (X) in the top right corner. Below this, there is a warning message in orange text: "The current login password uses the default password. Please change it promptly." with an orange exclamation mark icon. There are two input fields: "New Password" and "Confirm New Password". Each field has a small icon of a key with a slash, indicating password strength or requirements. At the bottom, there are two buttons: "Save" and "Cancel".

6. Use the new password to log in to the web GUI again. After logging the web GUI, you can view system information.

## Chapter 3 Web Configuration

### 3.1 Status

#### 3.1.1 Overview

You can view the system information of the router on this page.

| System Information     |                                                                                                   | System Status                  |                              |
|------------------------|---------------------------------------------------------------------------------------------------|--------------------------------|------------------------------|
| Model                  | UR35-L04EU-G-P-W                                                                                  | Local Time                     | 2026-05-07 02:10:08 Thursday |
| Serial Number          | 6219F4232746                                                                                      | Uptime                         | 9days, 18:38:33              |
| Firmware Version       | 32.3.0.12                                                                                         | CPU Load                       | 23%                          |
| Hardware Version       | V3.0                                                                                              | CPU Temperature                | 67°C                         |
|                        |                                                                                                   | RAM (Available/Capacity)       | 23MB/128MB(17.97%)           |
|                        |                                                                                                   | Flash (Available/Capacity)     | 79MB/128MB(61.72%)           |
|                        |                                                                                                   | SD Card(Available/Capacity)    | Not Inserted                 |
| Cellular               |                                                                                                   | WAN <span>● Link in use</span> |                              |
| Status                 | Ready, FDD LTE,  | Status                         | Online                       |
| Current Cellular Link  | SIM1-APN1                                                                                         | IPv4                           | 192.168.50.39/24             |
| IPv4                   | 10.157.203.198/16                                                                                 | IPv6                           | fe80::26e1:24ff:fe0b:6445/64 |
| IPv6                   | fe80::2422:55ff:fe59:b424/64                                                                      | MAC                            | 24:e1:24:0b:64:45            |
| Connection Duration    | 9 days, 15:55:48                                                                                  | Connection Duration            | 9 days, 15:56:41             |
| SIM Data Usage Monthly | 0.00 KB                                                                                           |                                |                              |
| SIM SMS Usage Monthly  | 0                                                                                                 |                                |                              |
| WLAN                   |                                                                                                   | LAN                            |                              |
| Status                 | Error                                                                                             | IPv4                           | 192.168.1.1/24               |
|                        |                                                                                                   | IPv6                           | fe80::26e1:24ff:fe0b:6443/64 |
|                        |                                                                                                   | Connected Devices              | 0                            |

Figure 3-1-1

| System Information |                                                |
|--------------------|------------------------------------------------|
| Item               | Description                                    |
| Model              | Show the model name of router.                 |
| Serial Number      | Show the serial number of router.              |
| Firmware Version   | Show the currently firmware version of router. |
| Hardware Version   | Show the currently hardware version of router. |

Table 3-1-1-1 System Information

| System Status              |                                                               |
|----------------------------|---------------------------------------------------------------|
| Item                       | Description                                                   |
| Local Time                 | Show the currently local time of system.                      |
| Uptime                     | Show the information on how long the router has been running. |
| CPU Load                   | Show the current CPU utilization of the router.               |
| CPU Temperature            | Show current CPU temperature.                                 |
| RAM (Available/Capacity)   | Show the RAM capacity and the available RAM memory.           |
| Flash (Available/Capacity) | Show the Flash capacity and the available Flash memory.       |

|                                 |                                                                                |
|---------------------------------|--------------------------------------------------------------------------------|
| SD Card<br>(Available/Capacity) | Show the capacity and the available memory of micro SD card if it is inserted. |
|---------------------------------|--------------------------------------------------------------------------------|

Table 3-1-1-2 System Status

| Cellular               |                                                                                                             |
|------------------------|-------------------------------------------------------------------------------------------------------------|
| Item                   | Description                                                                                                 |
| Status                 | Show the real-time status of the currently SIM card                                                         |
| Current Cellular Link  | Show the cellular network currently used for the data connection.                                           |
| IPv4/IPv6              | Show the IPv4/IPv6 address obtained from the mobile carrier.<br><b>Note:</b> UR3x-LOGEU only supports IPv4. |
| Connection Duration    | Show the connection duration of the currently SIM card.                                                     |
| SIM Data Usage Monthly | Show the monthly data usage statistics of currently used SIM card.                                          |
| SIM Data Usage Monthly | Show the monthly SMS usage statistics of currently used SIM card.                                           |
| SIM SMS Usage Monthly  | Show the monthly SMS messages sent of currently used SIM card.                                              |

Table 3-1-1-3 Cellular Status

| WAN                 |                                               |
|---------------------|-----------------------------------------------|
| Item                | Description                                   |
| Status              | Show the currently status of WAN port.        |
| IPv4/IPv6           | The IPv4/IPv6 address configured WAN port.    |
| MAC                 | The MAC address of the Ethernet port.         |
| Connection Duration | Show the connection duration of the WAN port. |

Table 3-1-1-4 WAN Status

| WLAN              |                                                       |
|-------------------|-------------------------------------------------------|
| Item              | Description                                           |
| Status            | Show the currently status of WLAN.                    |
| IP                | Show the WLAN mode (AP or client).                    |
| SSID              | Show the SSID of the WLAN AP or client.               |
| Connected Clients | Show the amount of connected devices when mode is AP. |

Table 3-1-1-5 WLAN Status

| LAN               |                                                       |
|-------------------|-------------------------------------------------------|
| Item              | Description                                           |
| IP4/IPv6          | Show the IP4/IPv6 address of the LAN port.            |
| Connected Devices | Number of devices that connected to the router's LAN. |

Table 3-1-1-6 LAN Status

### 3.1.2 Cellular

You can view the cellular network status and data usage of router on this page.

Basic Information

|                         |                                  |                         |           |
|-------------------------|----------------------------------|-------------------------|-----------|
| Model                   | EC25                             | Signal Quality          | Excellent |
| Version                 | EC25AUXGAR08A05M1G_01.004.01.004 | RSRP                    | -76 dBm   |
| Current SIM             | SIM1                             | SINR                    | 30 dB     |
| Register Status         | Registered (Home network)        | SIM1 Data Usage Monthly | 0.00 KB   |
| IMEI                    | 862708048925791                  | SIM1 SMS Usage Monthly  | 0         |
| IMSI                    | 460115211257157                  | SIM2 Data Usage Monthly | 0.00 KB   |
| ICCID                   | 89860324245920231421             | SIM2 SMS Usage Monthly  | 0         |
| ISP                     | CHN-CT                           |                         |           |
| Network Type            | FDD LTE                          |                         |           |
| Cellular Frequency Band | 4G(B1)                           |                         |           |
| PLMN ID                 | 46011                            |                         |           |
| LAC                     | 5f0c                             |                         |           |
| Cell ID                 | e0b70b                           |                         |           |

SIM1-APN

| Name | Status    | IPv4 Address      | IPv4 Gateway   | IPv4 DNS                     | IPv6 Address                 | IPv6 Gateway | IPv6 DNS | Connection Duration |
|------|-----------|-------------------|----------------|------------------------------|------------------------------|--------------|----------|---------------------|
| APN1 | Connected | 10.157.203.198/16 | 10.157.203.197 | 218.85.157.99, 218.85.152.99 | fe80::2422:55ff:fe59:b424/64 | -            | -, -     | 9 days, 16:11:04    |
| APN2 | Connected | 10.144.150.145/16 | 10.144.150.146 | 218.85.157.99, 218.85.152.99 | fe80::2422:55ff:fe59:b424/64 | -            | -, -     | 9 days, 16:10:56    |
| APN3 | Connected | 10.103.56.229/16  | 10.103.56.230  | 218.85.157.99, 218.85.152.99 | fe80::2422:55ff:fe59:b424/64 | -            | -, -     | 9 days, 16:10:59    |

Figure 3-1-2-1

| Basic Information      |                                                                |
|------------------------|----------------------------------------------------------------|
| Item                   | Description                                                    |
| Status                 | Show corresponding detection status of module and SIM card.    |
| Version                | Show the cellular module firmware version.                     |
| Current SIM            | Show the current SIM card used.                                |
| Register Status        | Show the registration status of SIM card.                      |
| IMEI                   | Show the IMEI of the module.                                   |
| IMSI                   | Show IMSI of the SIM card.                                     |
| ICCID                  | Show ICCID of the SIM card.                                    |
| ISP                    | Show the network provider which the SIM card registers on.     |
| Network Type           | Show the connected network type, such as LTE, 3G, etc.         |
| PLMN ID                | Show the current PLMN ID, including MCC, MNC, LAC and Cell ID. |
| LAC                    | Show the location area code of the SIM card.                   |
| Cell ID                | Show the Cell ID of the SIM card location.                     |
| Signal Quality         | Show the cellular signal level.                                |
| RSSI                   | Show RSSI of the signal.                                       |
| RSCP                   | Show RSCP of the signal.                                       |
| RSRP                   | Show RSRP of the signal.                                       |
| SINR                   | Show SINR of the signal.                                       |
| SIM Data Usage Monthly | Show the monthly data usage of the SIM card.                   |
| SIM SMS Usage Monthly  | Show the monthly SMS usage of the SIM card.                    |

Table 3-1-2-1 Basic Information

| SIM-APN           |                                                             |
|-------------------|-------------------------------------------------------------|
| Item              | Description                                                 |
| Status            | Show the connection status of cellular network.             |
| IPv4/IPv6 Address | Show the IPv4/IPv6 address and netmask of cellular network. |

|                     |                                                                                                            |
|---------------------|------------------------------------------------------------------------------------------------------------|
|                     | <b>Note:</b> UR3x-L0GEU only supports IPv4.                                                                |
| IPv4/IPv6 Gateway   | Show the IPv4/IPv6 gateway and netmask of cellular network.<br><b>Note:</b> UR3x-L0GEU only supports IPv4. |
| IPv4/IPv6 DNS       | Show the IPv4/IPv6 DNS of cellular network.<br><b>Note:</b> UR3x-L0GEU only supports IPv4.                 |
| Connection Duration | Show information on how long the cellular network has been connected.                                      |

Table 3-1-2-2 Network Status

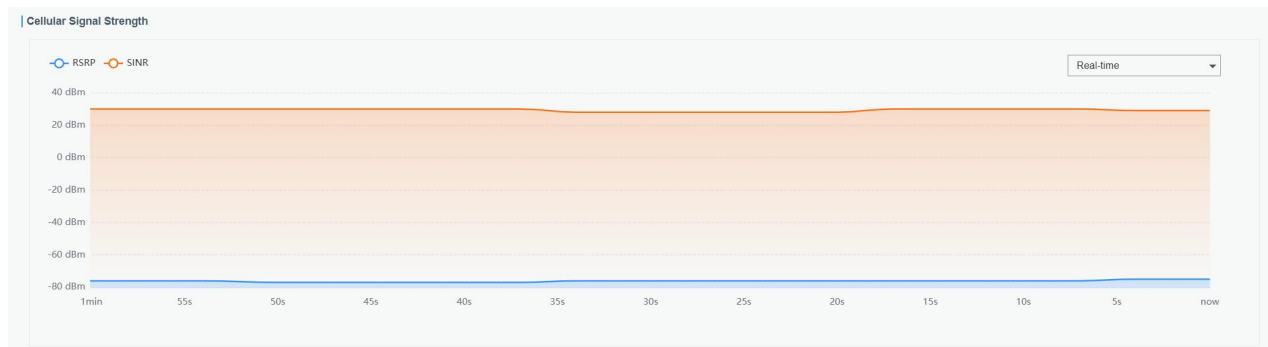


Figure 3-1-2-2

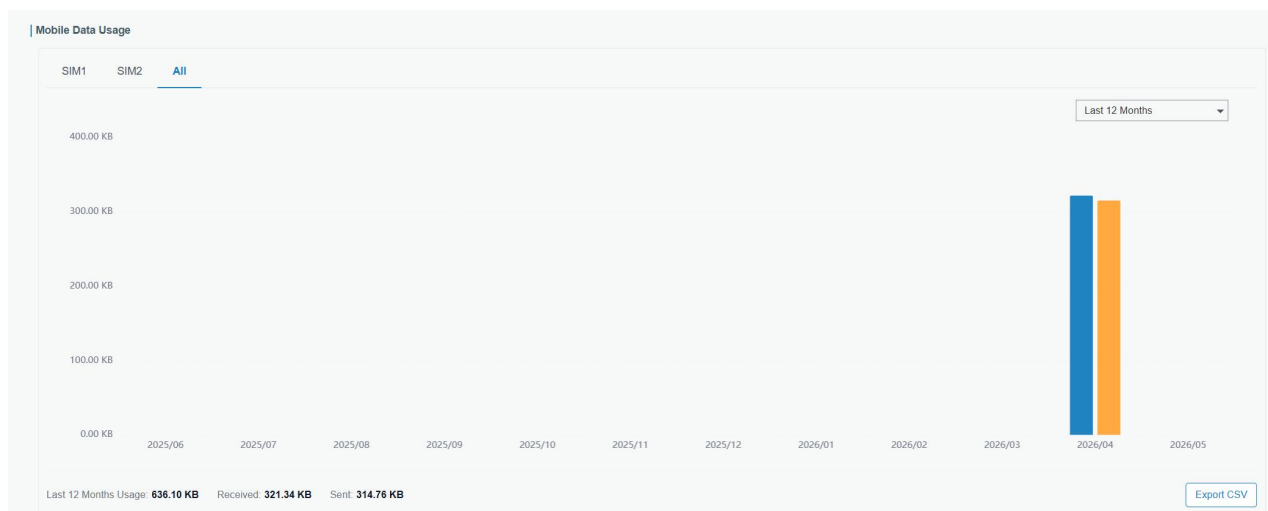


Figure 3-1-2-3

| Item                            | Description                                                            |
|---------------------------------|------------------------------------------------------------------------|
| <b>Cellular Signal Strength</b> |                                                                        |
| Time                            | Select from "Real Time", "Last Hour", "Last 24 Hours" and "Last Week". |
| RSSI                            | Show RSSI of the sign.                                                 |
| RSCP                            | Show RSCP of the sign.                                                 |
| RSRP                            | Show RSRP of the sign.                                                 |
| SINR                            | Show SINR of the sign.                                                 |
| <b>Mobile Data Usage</b>        |                                                                        |
| Time                            | Select from "Today", "This Month" and "Last 12 Months".                |

|            |                                                               |
|------------|---------------------------------------------------------------|
| SIM-1      | Show the data usage statistics of SIM-1.                      |
| SIM-2      | Show the data usage statistics of SIM-2.                      |
| ALL        | Shows the total data usage statistics for both SIM cards.     |
| Export CSV | Export the data usage statistics for the selected time frame. |

Table 3-1-2-3 Signal Strength &amp; Data Usage Information

### 3.1.3 Network

On this page you can check the network interface real-time speed and data usage of the router.

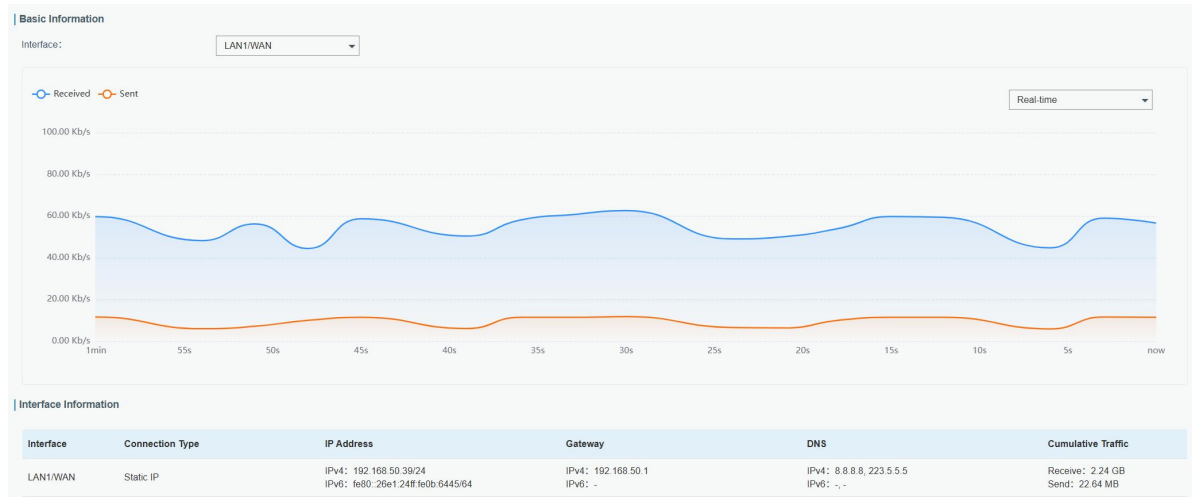


Figure 3-1-3-1

| Basic Information |                                                                              |
|-------------------|------------------------------------------------------------------------------|
| Item              | Description                                                                  |
| Interface         | Select the interface for which display network statistics.                   |
| Time              | Select from "Real Time", "Last 24 Hours", "Last Month" and "Last 12 Months". |
| Received/Sent     | Shows the received/send traffic for this interface.                          |

Table 3-1-3-1 Basic Information

| Interface Information |                                                                                         |
|-----------------------|-----------------------------------------------------------------------------------------|
| Item                  | Description                                                                             |
| Interface             | Show the name of the interface .                                                        |
| Connection Type       | Show the dial-up connection type of the interface.                                      |
| IP Address            | Show the IPv4 address with netmask or IPv6 address with prefix-length of the interface. |
| Gateway               | Show the gateway of the interface.                                                      |
| DNS                   | Show the DNS of the interface.                                                          |
| Cumulative Traffic    | Shows the total received and send traffic for the interface since it became active.     |

Table 3-1-3-2 Interface Information

### 3.1.4 WLAN

You can check Wi-Fi status on this page, including the information of access point and client.

| WLAN Status |         |      |               |             |               |
|-------------|---------|------|---------------|-------------|---------------|
| Name        | Status  | Type | SSID          | IP Address  | Netmask       |
| WLAN        | Running | AP   | Router_F02FEB | 192.168.1.1 | 255.255.255.0 |

| Associated Stations |             |            |                     |
|---------------------|-------------|------------|---------------------|
| SSID                | MAC Address | IP Address | Connection Duration |

Figure 3-1-4-1

| WLAN Status         |                                                                                                                                                                                                 |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item                | Description                                                                                                                                                                                     |
| WLAN Status         |                                                                                                                                                                                                 |
| Name                | Show the name of the Wi-Fi interface .                                                                                                                                                          |
| Status              | Show the status of the Wi-Fi interface.                                                                                                                                                         |
| Type                | Show the Wi-Fi interface type.                                                                                                                                                                  |
| SSID                | Show the SSID of the router when the interface type is AP.<br>Show the SSID of AP which the router connected to when the interface type is Client.                                              |
| IP Address          | Show the IP address of the router when the interface type is AP. Show the IP address of AP which the router connected to when the interface type is Client.                                     |
| Netmask             | Show the netmask of the router when the interface type is AP. Show the netmask of AP which the router connected to when the interface type is Client.                                           |
| Associated Stations |                                                                                                                                                                                                 |
| SSID                | Show the SSID of the router when the interface type is AP.<br>Show the SSID of AP which the router connected to when the interface type is Client.                                              |
| MAC Address         | Show the MAC address of the client which connected to the router when the interface type is AP. Show the MAC address of the AP which the router connected to when the interface type is Client. |
| IP Address          | Show the IP address of the client which connected to the router when the interface type is AP. Show the IP address of the AP which the router connected to when the interface type is Client.   |
| Connection Duration | Show the connection duration between client device and router when the interface type is AP. Show the connection duration between router and the AP when the interface type is Client.          |

Table 3-1-4-1 WLAN Status





| Routing Table        |                       |                                       |            |        |
|----------------------|-----------------------|---------------------------------------|------------|--------|
| Destination          | Netmask/Prefix Length | Gateway                               | Interface  | Metric |
| 0.0.0.0              | 0.0.0.0               | 192.168.22.1                          | WAN        | 1      |
| 127.0.0.0            | 255.0.0.0             | -                                     | Loopback   | -      |
| 192.168.1.0          | 255.255.255.0         | -                                     | Bridge0    | -      |
| 192.168.22.0         | 255.255.255.0         | -                                     | WAN        | -      |
| ::                   | 0                     | 2408:844b:1a20:fc0:1d0a:9a67:4a3:3b5a | Cellular 0 | -      |
| :::1                 | 128                   | -                                     | Loopback   | -      |
| 2001:4860:4860::8888 | 128                   | 2408:844b:1a20:fc0:1d0a:9a67:4a3:3b5a | Cellular 0 | 1      |
| 2004::               | 64                    | -                                     | Bridge0    | -      |
| 2400:3200::1         | 128                   | 2408:844b:1a20:fc0:1d0a:9a67:4a3:3b5a | Cellular 0 | 1      |
| 2408:844b:1a20:fc0:: | 64                    | -                                     | Cellular 0 | -      |
| ARP Cache            |                       |                                       |            |        |
| IP                   | MAC                   | Interface                             |            |        |
| 192.168.1.113        | c8:5b:76:b2:56:1f     | Bridge0                               |            |        |
| 192.168.22.127       | 24:e1:24:10:47:e1     | WAN                                   |            |        |
| 192.168.22.1         | 5c:dd:70:6c:46:3d     | WAN                                   |            |        |
| 192.168.22.6         | f4:b5:49:f1:1b:1f     | WAN                                   |            |        |
| 192.168.23.77        | 24:4b:fe:8d:95:ab     | WAN                                   |            |        |

Figure 3-1-6-1

| Item                  | Description                                                                   |
|-----------------------|-------------------------------------------------------------------------------|
| Routing Table         |                                                                               |
| Destination           | Show the IP address of destination host or destination network.               |
| Netmask/Prefix Length | Show the netmask or prefix length of destination host or destination network. |
| Gateway               | Show the IP address of the gateway.                                           |
| Interface             | Show the outbound interface of the route.                                     |
| Metric                | Show the metric of the route.                                                 |
| ARP Cache             |                                                                               |
| IP                    | Show the IP address of ARP pool.                                              |
| MAC                   | Show the IP address's corresponding MAC address.                              |
| Interface             | Show the binding interface of ARP.                                            |

Table 3-1-6-1 Routing Information

### 3.1.7 Host List

You can view the host information on this page.

| DHCP Leases   |                                           |                      |
|---------------|-------------------------------------------|----------------------|
| IP            | MAC/DUID                                  | Lease Remaining Time |
| 192.168.1.113 | c8:5b:76:b2:56:1f                         | 23h 07m 24s          |
| 2004::200     | 00:01:00:01:27:cc:cf:61:c8:5b:76:b2:56:1f | 23h 09m 22s          |
| MAC Binding   |                                           |                      |
| IP            | MAC/DUID                                  |                      |

Figure 3-1-7-1

| Host List            |                                                                                |
|----------------------|--------------------------------------------------------------------------------|
| Item                 | Description                                                                    |
| DHCP Leases          |                                                                                |
| IP Address           | Show IP address of DHCP client                                                 |
| MAC/DUID             | Show MAC address of DHCPv4 client or DUID of DHCPv6 client.                    |
| Lease Time Remaining | Show the remaining lease time of DHCP client.                                  |
| MAC Binding          |                                                                                |
| IP & MAC             | Show the IP address and MAC address set in the Static IP list of DHCP service. |

Table 3-1-7-1 Host List Description

### 3.1.8 GPS (Only Applicable to GPS Version)

When GPS function is enabled and the GPS information is obtained successfully, you can view the latest GPS information including GPS Time, Latitude, Longitude and Speed on this page.

| GPS Status         |             |
|--------------------|-------------|
| Status             | Weak Signal |
| Time for Locating  | -           |
| Satellites In Use  | -           |
| Satellites In View | -           |
| Latitude           | -           |
| Longitude          | -           |
| Altitude           | -           |
| Speed              | -           |

Figure 3-1-8-1

| GPS Status         |                                          |
|--------------------|------------------------------------------|
| Item               | Description                              |
| Status             | Show the status of GPS.                  |
| Time for Locating  | Show the time for locating.              |
| Satellites In Use  | Show the quantity of satellites in use.  |
| Satellites In View | Show the quantity of satellites in view. |
| Latitude           | Show the Latitude of the location.       |
| Longitude          | Show the Longitude of the location.      |
| Altitude           | Show the Altitude of the location.       |
| Speed              | Show the speed of movement.              |

Table 3-1-8-1 GPS Status Description

## 3.2 Network

### 3.2.1 Interface

#### 3.2.1.1 Link Failover

This section describes how to configure link failover strategies, their priority and the ping settings, each rule owns its own ping rules by default. Router will follow the priority to choose the next available interface to access the internet, make sure you have enable the full interface that you need to use here. If priority 1 can only use IPv4, UR35 will select a second link which IPv6 works as main IPv6 link and vice versa.

**Note:** If the priority of one SIM is higher than the other, the device will switch the APN links among the high priority SIM first. **Example:** The configuration order is SIM1-APN1, SIM2-APN1, SIM1-APN2, the real switch order is SIM1-APN1, SIM1-APN2, SIM2-APN1.

Link Priority

|  | Priority | Enable Rule                         | Link in use                          | Interface | Connection Type | IP             | Operation |
|--|----------|-------------------------------------|--------------------------------------|-----------|-----------------|----------------|-----------|
|  | 1        | <input checked="" type="checkbox"/> | <span style="color: green;">●</span> | WAN       | Static          | 192.168.50.39  |           |
|  | 2        | <input checked="" type="checkbox"/> | <span style="color: gray;">●</span>  | SIM1-APN1 | DHCP            | 10.157.203.198 |           |
|  | 3        | <input checked="" type="checkbox"/> | <span style="color: gray;">●</span>  | SIM2-APN1 | DHCP            | -              |           |
|  | 4        | <input checked="" type="checkbox"/> | <span style="color: gray;">●</span>  | SIM1-APN2 | DHCP            | 10.144.150.145 |           |
|  | 5        | <input checked="" type="checkbox"/> | <span style="color: gray;">●</span>  | SIM1-APN3 | DHCP            | 10.103.56.229  |           |

Settings

Revert to High Priority Link

☒

Revert Interval

s

Dual-card Switch Delay

s

Dual-card Recovery

☐

Emergency Reboot

☐

Save

Figure 3-2-1-1

| Link Failover   |                                                                                                                                                                       |
|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item            | Description                                                                                                                                                           |
| Link Priority   |                                                                                                                                                                       |
| Priority        | Display the priority of each interface, you can modify it by the operation's up and down button.                                                                      |
| Enable Rule     | If enabled, the router will put this interface into its switching rule. For the Cellular interface, if it's not enabled here, the interface will be disabled as well. |
| Link In Use     | Mark whether this interface is in use with Green color                                                                                                                |
| Interface       | Display the name of the interface.                                                                                                                                    |
| Connection type | Display how to obtain the IP address in this interface, like static IP or DHCP.                                                                                       |
| IP              | Display the IP address of the interface.                                                                                                                              |
| Operation       | You can change the priority of the rules and configure the ping detection rules here.                                                                                 |
| Settings        |                                                                                                                                                                       |

|                              |                                                                                                                                        |
|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| Revert to High Priority Link | When the connection of high priority link returns back, reverting back to high priority link.                                          |
| Revert Interval              | Specify the number of seconds to waiting for switching to the link with higher priority, 0 means disable the function.                 |
| Dual-card Switch Delay       | The delay time to switch to low priority card when high priority cellular connection is failed. 0 means switching immediately.         |
| Dual-card Recovery           | Enable the dual-card recovery.                                                                                                         |
| Dual-card Recovery Interval  | The interval to detect high priority cellular connection. If the connection is recover, switching back to high priority cellular link. |
| Emergency Reboot             | Enable to reboot the device if no link is available.                                                                                   |

Table 3-2-1-1 Link Failover Parameters

**Ping Detection**

Enable ☒

IPv4 Primary Server

IPv4 Secondary Server

IPv6 Primary Server

IPv6 Secondary Server

Interval  s

Retry Interval  s

Timeout  s

Max Ping Retries

Figure 3-2-1-2

| Ping Detection             |                                                                                                                                                                                                                       |
|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item                       | Description                                                                                                                                                                                                           |
| Enable                     | If enabled, the router will periodically detect the connection status of the link.                                                                                                                                    |
| IPv4/IPv6 Primary Server   | The router will send ICMP packet to the IPv4/IPv6 address or hostname to determine whether the Internet connection is still available or not.                                                                         |
| IPv4/IPv6 Secondary Server | The router will try to ping the secondary server name if primary server is not available.                                                                                                                             |
| Interval                   | Time interval (in seconds) between two Pings.                                                                                                                                                                         |
| Retry Interval             | Set the ping retry interval. When ping failed, the router will ping again in every retry interval.                                                                                                                    |
| Timeout                    | The maximum amount of time the router will wait for a response to a ping request. If it does not receive a response for the amount of time defined in this field, the ping request will be considered to have failed. |

|                  |                                                                                                      |
|------------------|------------------------------------------------------------------------------------------------------|
| Max Ping Retries | The retry times of the router sending ping request until determining that the connection has failed. |
|------------------|------------------------------------------------------------------------------------------------------|

Table 3-2-1-2 Ping Detection Parameters

### 3.2.1.2 Cellular

This section explains how to set the related parameters for the cellular network. The UR35 cellular router has two cellular interfaces, namely SIM1 and SIM2. Each cellular interface is configured to establish three cellular network sub-interfaces, each supporting the configuration of one APN. The three sub-cellular network interfaces under the same cellular network interface can be active at one time, enabling different network services to be accessed simultaneously through multiple APNs when the cellular network is registered. Only one cellular interface is active at one time.. If both cellular interfaces are enabled, it will follow the priority rule configured in the Link Failover page.

#### Note:

- To use the multi-APN feature for the first time, a device reboot is required.
- After enabling multi-APN, different sub-interfaces on the same SIM card cannot add the same APN.

The screenshot displays the 'Cellular Setting' interface for a Milesight router. It is divided into two main sections: SIM1 and SIM2. Each section contains a table of sub-interfaces (SIM1-APN1 to SIM1-APN3 and SIM2-APN1 to SIM2-APN3) with columns for Interface Name, Status, Network Type, IP, APN, Enable Status, and Operation. Below these tables is a 'Connection Setting' section with various options: Connection Mode (set to 'Connect on Demand'), Re-dial Interval (5s), Max Idle Time (60s), and checkboxes for 'Triggered by Call', 'Triggered by SMS', and 'Triggered by IO'.

Figure 3-2-1-3

| Cellular Setting |                                                                                                                                                                                         |
|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item             | Description                                                                                                                                                                             |
| Interface Name   | Display cellular network interface names.                                                                                                                                               |
| Status           | Show the cellular network connection status.                                                                                                                                            |
| Network Type     | Select from "Auto", "4G Only", "3G Only", and "2G Only".<br>Auto: connect to the network with the strongest signal automatically.<br>4G Only: connect to 4G network only.<br>And so on. |
| IP               | IP address corresponding to this cellular network interface.                                                                                                                            |

|                           |                                                                                                                                                                                             |
|---------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| APN                       | Enter the Access Point Name for the cellular dial-up connection provided by the local ISP.                                                                                                  |
| Enable Status             | Show the enable status of this interface.                                                                                                                                                   |
| Operation                 | You can edit the configuration items for this cellular network interface.                                                                                                                   |
| <b>Connection Setting</b> |                                                                                                                                                                                             |
| <b>Item</b>               | <b>Description</b>                                                                                                                                                                          |
| Connection Mode           | Select "Always Online" and "Connect on Demand".                                                                                                                                             |
| Re-dial Interval(s)       | Set the interval to dial into ISP when it loses connection. The default value is 5s.                                                                                                        |
| Max Idle Times            | Set the maximum duration of the router when the current link is under idle status. Range: 10-3600                                                                                           |
| Triggered by Call         | The router will automatically switch from offline mode to cellular network mode upon receiving a call from a specific phone number.                                                         |
| Call Group                | Select a call group for the call trigger. Go to <b>System &gt; Phone&amp;SMS &gt; Phone</b> to set up phone group.                                                                          |
| Triggered by SMS          | The router will switch from offline mode to cellular network mode automatically when it receives a specific SMS from the specific mobile phone.                                             |
| SMS Group                 | Select an SMS group for the trigger. Go to <b>System &gt; Phone&amp;SMS &gt; SMS</b> to set up an SMS group.                                                                                |
| SMS Text                  | Fill in the SMS content for triggering.                                                                                                                                                     |
| Triggered by IO           | The router will switch from offline mode to cellular network mode automatically when the DI status is changed. Go to <b>Industrial &gt; I/O &gt; DI</b> to configure the trigger condition. |

Table 3-2-1-3 Cellular Parameters

|                                                                         |                                                                                               |
|-------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|
| PIN Code                                                                | ****     |
| PLMN                                                                    | <input type="text"/>                                                                          |
| Access Number                                                           | <input type="text"/>                                                                          |
| Network Type                                                            | 4G Only  |
| Cellular Frequency Band                                                 | B1                                                                                            |
| IMS Enable                                                              | <input type="checkbox"/>                                                                      |
| SMS Center                                                              | <input type="text"/>                                                                          |
| Roaming                                                                 | <input checked="" type="checkbox"/>                                                           |
| IPv4 Subnet Mask                                                        | 255.255.0.0                                                                                   |
| Monthly Data Usage Limit                                                | <input type="checkbox"/>                                                                      |
| Monthly SMS Limit                                                       | <input type="checkbox"/>                                                                      |
| Billing Day (Usage Data & SMS)                                          | Day <input type="text" value="1"/> of The Month                                               |
| Switch SIM When Link Failover Priority Change                           | <input checked="" type="checkbox"/>                                                           |
| Switch SIM When Dial Failure                                            | <input checked="" type="checkbox"/>                                                           |
| <input type="button" value="OK"/> <input type="button" value="Cancel"/> |                                                                                               |

Figure 3-2-1-4

| SIM Setting                                   |                                                                                                                                                                                         |
|-----------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item                                          | Description                                                                                                                                                                             |
| PIN Code                                      | Enter a 4-8 characters PIN code to unlock the SIM.                                                                                                                                      |
| PLMN                                          | Enter a 3-digit country code and a 2- or 3-digit network code to specify the PLMN.                                                                                                      |
| Access Number                                 | Enter the dial-up center NO. For cellular dial-up connection provided by local ISP.                                                                                                     |
| Network Type                                  | Select from "Auto", "4G Only", "3G Only", and "2G Only".<br>Auto: connect to the network with the strongest signal automatically.<br>4G Only: connect to 4G network only.<br>And so on. |
| Cellular Frequency Band                       | Select the cellular bands used to register the cellular network. It can be used to optimize cellular speeds by selecting specific bands.                                                |
| IMS Enable                                    | Enable or disable IMS function.                                                                                                                                                         |
| SMS Center                                    | Enter the local SMS center number for storing, forwarding, converting and delivering SMS message.                                                                                       |
| Roaming                                       | Enable or disable roaming.                                                                                                                                                              |
| Monthly Data Usage Limit                      | When you reach the specified data usage limit, the data connection of the currently used SIM card will be disabled.                                                                     |
| Data Limit                                    | Enter the max available data limit.                                                                                                                                                     |
| Switch SIM When Data Limit Reached            | When you reach the specified data usage limit, the device will switch the current SIM card.                                                                                             |
| Monthly SMS Limit                             | When you reach the specified SMS usage limit, the SMS function of the currently used SIM will be disabled.                                                                              |
| Max SMS                                       | Enter the max available SMS limit.                                                                                                                                                      |
| Switch SIM When SMS Limit Reached             | When you reach the specified SMS usage limit, the device will switch the current SIM card.                                                                                              |
| Billing Day (Usage Data & SMS)                | Choose the billing day of the SIM card, then the router will reset the data used to 0.                                                                                                  |
| Switch SIM When Link Failover Priority Change | Switch the SIM card if the signal is weak.                                                                                                                                              |
| Switch SIM When Dial Failure                  | Switch the SIM card if there is no network, network registration fails, or dialing fails.                                                                                               |
| Switch SIM When Ping Detection Failure        | Switch the SIM card if the PING detection fails.                                                                                                                                        |

Table 3-2-1-4 SIM Parameters

**SIM1-APN1**

|                     |                                     |
|---------------------|-------------------------------------|
| Interface Name      | <b>SIM1-APN1</b>                    |
| Protocol Type       | IPv4                                |
| APN                 |                                     |
| Username            |                                     |
| Password            |                                     |
| Authentication Type | None                                |
| PPP Preferred       | <input type="checkbox"/>            |
| Enable NAT          | <input checked="" type="checkbox"/> |
| IPv4 Primary DNS    |                                     |
| IPv4 Secondary DNS  |                                     |
| Customize MTU       | <input type="checkbox"/>            |
| MTU                 | 1500                                |

OK Cancel

Figure 3-2-1-5

| SIM-APN             |                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item                | Description                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Interface Name      | Display the name of the currently configured interface.                                                                                                                                                                                                                                                                                                                                                                                          |
| Auto APN            | <p>Enable to automatically detect the carrier and use the built-in APN database for automatic connection. When using Auto APN, there is no need to fill in protocol type, APN, username, password, and authentication method.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Only the APN1 of each SIM card can use Auto APN.</li> <li>On the same SIM card, Auto APN and Multi-APN cannot be enabled simultaneously.</li> </ul> |
| Protocol Type       | <p>Select from "IPv4", "IPv6" and "IPv4/IPv6".</p> <p><b>Note:</b> UR3x-L0GEU only supports IPv4.</p>                                                                                                                                                                                                                                                                                                                                            |
| APN                 | Enter the Access Point Name for the cellular dial-up connection provided by the local ISP.                                                                                                                                                                                                                                                                                                                                                       |
| Username            | Enter the username for the cellular dial-up connection provided by the local ISP.                                                                                                                                                                                                                                                                                                                                                                |
| Password            | Enter the password for the cellular dial-up connection provided by the local ISP.                                                                                                                                                                                                                                                                                                                                                                |
| Authentication Type | Select from "None", "PAP", or "CHAP".                                                                                                                                                                                                                                                                                                                                                                                                            |
| PPP Preferred       | The PPP dial-up method is preferred.                                                                                                                                                                                                                                                                                                                                                                                                             |
| Enable NAT          | Enable or disable NAT function.                                                                                                                                                                                                                                                                                                                                                                                                                  |
| IPv4 Primary DNS    | IPv4 address of the preferred DNS server.                                                                                                                                                                                                                                                                                                                                                                                                        |
| IPv4 Secondary DNS  | IPv4 address of the secondary DNS server.                                                                                                                                                                                                                                                                                                                                                                                                        |
| Customize MTU       | Enable or disable to customize the maximum transmission units.                                                                                                                                                                                                                                                                                                                                                                                   |



|     |                                                                 |
|-----|-----------------------------------------------------------------|
|     | When disabled, the device will use the operator's MTU settings. |
| MTU | Customize the maximum transmission units.                       |

Table 3-2-1-5 APN Parameters

## Related Topics

[Cellular Network Connection](#)

[Phone Group](#)

[DI Setting](#)

### 3.2.1.3 Port

This section describes how to configure the Ethernet port parameters.

UR35 cellular router supports 5 Fast Ethernet ports.

| Port Setting |                   |        |          |       |        |
|--------------|-------------------|--------|----------|-------|--------|
| Port         | Connection Status | Status | Property | Speed | Duplex |
| LAN1         | Connected         | up     | lan      | auto  | auto   |
| LAN2         | Disconnected      | up     | lan      | auto  | auto   |
| LAN3         | Disconnected      | up     | lan      | auto  | auto   |
| LAN4         | Disconnected      | up     | lan      | auto  | auto   |
| WAN/LAN5     | Connected         | up     | wan      | auto  | auto   |

Figure 3-2-1-6

| Port Setting      |                                                                                                                                                                                                                    |
|-------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item              | Description                                                                                                                                                                                                        |
| Port              | Users can define the Ethernet ports according to their needs.                                                                                                                                                      |
| Connection Status | Show the connection status of this Ethernet port.                                                                                                                                                                  |
| Status            | Set the status of the Ethernet port; select "up" to enable and "down" to disable.                                                                                                                                  |
| Property          | Show the Ethernet port's type, as a WAN port or a LAN port.<br>The WAN port supports switching to LAN mode.<br><b>Note:</b> When the WAN port is being used by other functions, it cannot be switched to LAN mode. |
| Speed             | Set the Ethernet port's speed. The options are "auto", "100 Mbps", and "10 Mbps".                                                                                                                                  |
| Duplex            | Set the Ethernet port's mode. The options are "auto", "full", and "half".                                                                                                                                          |

Table 3-2-1-6 Port Parameters

#### Note:

- Only the PoE version (model name included "-P") supports the below settings.
- These settings only work when this router is powered by 48V.
- Only the devices with hardware version 3.0 and later support these features.

| PoE  |        |              |             |              |           |          |                   |                                                                                                                                                                                                                                                             |
|------|--------|--------------|-------------|--------------|-----------|----------|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Port | PoE    | Power Supply | Voltage (V) | Current (mA) | Power (W) | Describe | PING detection IP | Operation                                                                                                                                                                                                                                                   |
| LAN1 | Enable | Power On     | 47          | 79           | 3.745     |          | 1.2.3.4           |    |
| LAN2 | Enable | Power On     | 47          | 120          | 5.688     |          | 1.2.3.4           |    |
| LAN4 | Enable | Power Off    | 47          | 0            | 0.000     |          | -                 |    |
| LAN3 | Enable | Power Off    | 47          | 0            | 0.000     |          | -                 |    |

Figure 3-2-1-7

| PoE Setting       |                                                                                                    |
|-------------------|----------------------------------------------------------------------------------------------------|
| Item              | Description                                                                                        |
| Port              | Users can define the Ethernet ports according to their needs.                                      |
| PoE               | Enable or disable this Ethernet port to supply power.                                              |
| Power Supply      | Show the power supply status of this Ethernet port.                                                |
| Voltage           | Show the current output voltage of this Ethernet port.                                             |
| Current           | Show the current output current of this Ethernet port.                                             |
| Power             | Show the current output power of this Ethernet port.                                               |
| Describe          | Add the description of this Ethernet port.                                                         |
| Ping Detection IP | Show the IP address to send ICMP packet to detect the connection status.                           |
| Operation         | You can change the power supply priority of the ports and configure the ping detection rules here. |

Table 3-2-1-7 PoE Parameters

**PING detection reboot**

Enable ☐

Destination IP

Ping Interval  mins

Ping Retry Interval  s

Overtime Period  s

Max Retry Times

Reboot Interval  s

Max Reboot Times

Figure 3-2-1-8

| Ping Detection reboot |                                                                                                                                    |
|-----------------------|------------------------------------------------------------------------------------------------------------------------------------|
| Item                  | Description                                                                                                                        |
| Enable                | If enabled, the router will periodically detect the connection status of the port. If detection fails, the router will reboot this |

|                     |                                                                                                                                                                                                                       |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                     | port.                                                                                                                                                                                                                 |
| Destination IP      | The router will send an ICMP packet to the IPv4 address to determine whether the connection is still available or not.                                                                                                |
| Interval            | Time interval (in seconds) between two Pings.                                                                                                                                                                         |
| Ping Retry Interval | Set the ping retry interval. When ping fails, the router will ping again in every retry interval.                                                                                                                     |
| Overtime Period     | The maximum amount of time the router will wait for a response to a ping request. If it does not receive a response for the amount of time defined in this field, the ping request will be considered to have failed. |
| Max Ping Retries    | The retry times of the router sending ping request until determining that the connection has failed.                                                                                                                  |
| Reboot Interval     | The power-off interval of this Ethernet port.                                                                                                                                                                         |
| Max Reboot Times    | The retry times of the router rebooting this port. 0 means no limits.                                                                                                                                                 |

Table 3-2-1-8 Ping Detection Parameters

**Radius Authentication**

Enable ☒

Radius-Authentication-Server

Radius-Authentication-Port

Radius-Authentication-Secret

NAS Identifier



Figure 3-2-1-9

| Radius Authentication        |                                                                                                                                                      |
|------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item                         | Description                                                                                                                                          |
| Enable                       | Enable or disable Radius authentication for the wired portion of the LAN port.                                                                       |
| Radius-Authentication-Server | Enter the IP address of the Radius authentication server.                                                                                            |
| Radius-Authentication-Port   | Enter the port of the Radius authentication server. Default: 1812                                                                                    |
| Radius-Authentication-Secret | Enter the shared secret for the Radius authentication server.                                                                                        |
| NAS Identifier               | Unique identifier, used to identify the access device, can help the RADIUS server distinguish authentication requests from different access devices. |


Table 3-2-1-9


**Note:** Please refer to below steps to turn on the 802.1x authentication on a Windows computer:

1. Enable the **Wired Autoconfig** and set it to start automatically.

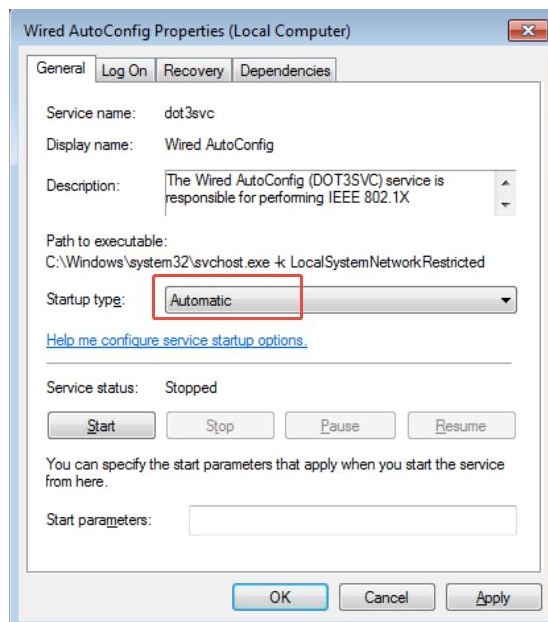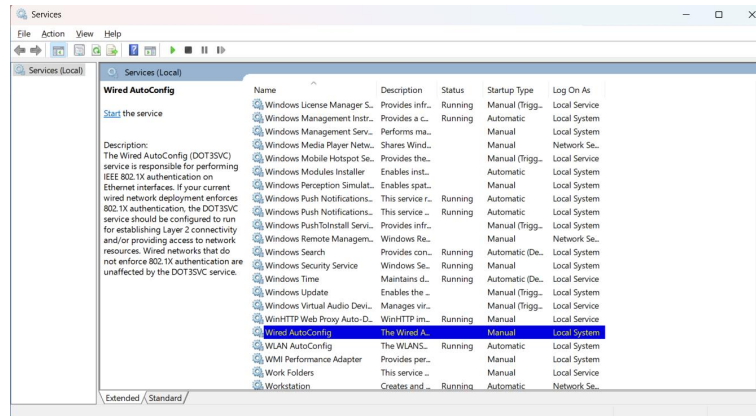

2. Go to **Control Panel > Network and Internet > Network and Sharing Center** to select **Ethernet** connection to enable 802.1x authentication, and configure according to the authentication method provided by the authentication server.



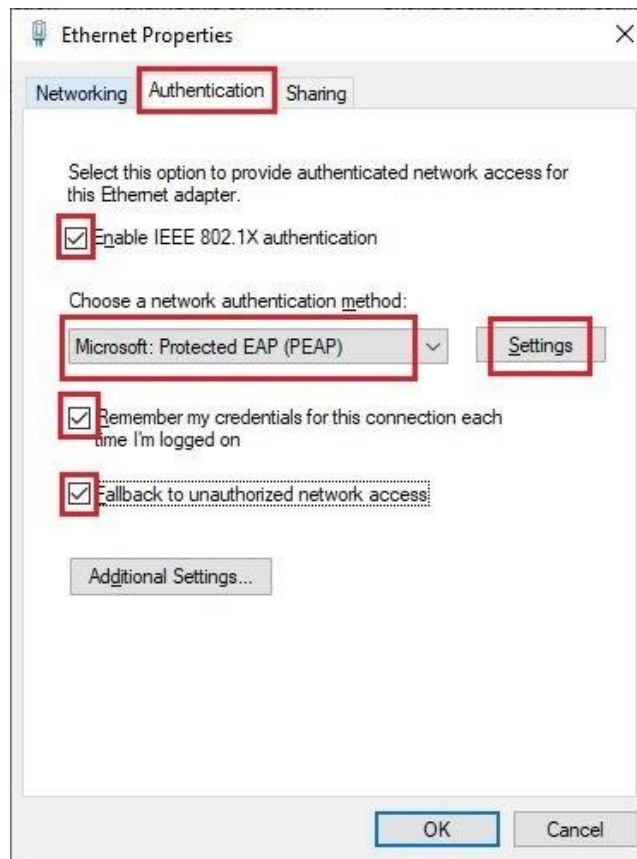

#### 3.2.1.4 WAN

The WAN port can be connected with an Ethernet cable to get Internet access.

**Note:** When WAN/LAN 5 is set to LAN mode, this page cannot be configured.

**WAN Settings**

— WAN\_1

|                    |                                     |
|--------------------|-------------------------------------|
| Enable             | <input checked="" type="checkbox"/> |
| Port               | WAN/LAN5                            |
| Connection Type    | Static IP                           |
| IPv4 Address       | 192.168.50.188                      |
| Netmask            | 255.255.255.0                       |
| IPv4 Gateway       |                                     |
| IPv6 Address       | fe80::26e1:24ff:feff:28ed           |
| Prefix Length      | 64                                  |
| IPv6 Gateway       |                                     |
| MTU                | 1500                                |
| IPv4 Primary DNS   | 223.5.5.5                           |
| IPv4 Secondary DNS | 114.114.114.114                     |
| IPv6 Primary DNS   |                                     |
| IPv6 Secondary DNS |                                     |
| Enable NAT         | <input checked="" type="checkbox"/> |

Figure 3-2-1-10

| WAN Setting     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |           |
|-----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|
| Item            | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Default   |
| Enable          | Enable WAN function.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | Enable    |
| Port            | The port that is currently set as a WAN port.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | WAN       |
| Connection Type | <p>Select connection type as required.</p> <p><b>Static IP:</b> assign a static IP address, netmask and gateway for Ethernet WAN interface.</p> <p><b>DHCP Client:</b> configure Ethernet WAN interface as DHCP Client to obtain an IP address automatically.</p> <p><b>PPPoE:</b> configure Ethernet WAN interface as PPPoE Client.</p> <p><b>-DHCPv6 Client:</b> configure Ethernet WAN interface as DHCP Client to obtain IPv6 address automatically.</p> <p><b>Dual-Stack Lite:</b> use IPv4-in-IPv6 tunneling to send</p> | Static IP |

|                    |                                                                                              |         |
|--------------------|----------------------------------------------------------------------------------------------|---------|
|                    | terminal device's IPv4 packet through a tunnel on the IPv6 access network to the ISP.        |         |
| MTU                | Set the maximum transmission unit.                                                           | 1500    |
| IPv4 Primary DNS   | Set the primary IPv4 DNS server.                                                             | 8.8.8.8 |
| IPv4 Secondary DNS | Set the secondary IPv4 DNS server.                                                           | -- --   |
| IPv6 Primary DNS   | Set the primary IPv6 DNS server.                                                             | -- --   |
| IPv6 Secondary DNS | Set the secondary IPv6 DNS server.                                                           | -- --   |
| Enable NAT         | Enable or disable NAT function. When enabled, a private IP can be translated to a public IP. | Enable  |

Table 3-2-1-10 WAN Parameters

## 1. Static IP Configuration

If the external network assigns a fixed IP for the WAN interface, select Static IP mode.

Figure 3-2-1-11

| Static IP    |                                              |               |
|--------------|----------------------------------------------|---------------|
| Item         | Description                                  | Default       |
| IPv4 Address | Set the IPv4 address of the WAN port.        | 192.168.0.1   |
| Netmask      | Set the Netmask for WAN port.                | 255.255.255.0 |
| IPv4         | Set the gateway for WAN port's IPv4 address. | 192.168.0.2   |

|                     |                                                                                                                                                                                                                                              |                            |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------|
| Gateway             |                                                                                                                                                                                                                                              |                            |
| IPv6 Address        | Set the IPv6 address which can access the Internet.                                                                                                                                                                                          | Generated from Mac address |
| Prefix-length       | Set the IPv6 prefix length to identify how many bits of a Global Unicast IPv6 address are there in the network part. For example, in 2001:0DB8:0000:000b::/64, the number 64 is used to identify that the first 64 bits are in network part. | 64                         |
| IPv6 Gateway        | Set the gateway for WAN port's IPv6 address.<br>E.g.2001:DB8:ACAD:4::2.                                                                                                                                                                      | --                         |
| Multiple IP Address | Set the multiple IP addresses for WAN port.                                                                                                                                                                                                  | Null                       |

Table 3-2-1-11 Static Parameters

## 2. DHCP Client/DHCPv6 Client

If the external network has DHCP server enabled and has assigned IP addresses to the Ethernet WAN interface, select DHCP/DHCPv6 client mode to obtain IP address automatically.

|                    |                                     |
|--------------------|-------------------------------------|
| Enable             | <input checked="" type="checkbox"/> |
| Port               | WAN                                 |
| Connection Type    | DHCP Client                         |
| MTU                | 1500                                |
| Use Peer DNS       | <input type="checkbox"/>            |
| IPv4 Primary DNS   | 8.8.8.8                             |
| IPv4 Secondary DNS | 223.5.5.5                           |
| Enable NAT         | <input checked="" type="checkbox"/> |

Figure 3-2-1-12

|                               |                                     |
|-------------------------------|-------------------------------------|
| Enable                        | <input checked="" type="checkbox"/> |
| Port                          | WAN                                 |
| Connection Type               | DHCPv6 Client                       |
| Request IPv6-address          | None                                |
| Request IPv6-prefix of length | 0-64                                |
| MTU                           | 1500                                |
| IPv6 Primary DNS              |                                     |
| IPv6 Secondary DNS            |                                     |
| Enable NAT                    | <input checked="" type="checkbox"/> |

Figure 3-2-1-13

### DHCP Client

| Item | Description |
|------|-------------|
|------|-------------|



|                               |                                                                                                                                                                                                                                                                                                                                                                 |
|-------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Use Peer DNS                  | Obtain peer DNS automatically during PPP dialing. DNS is necessary when visiting domain name.                                                                                                                                                                                                                                                                   |
| <b>DHCPv6 Client</b>          |                                                                                                                                                                                                                                                                                                                                                                 |
| Request IPv6-address          | Choose the ways to obtain the IPv6 address from the DHCP Server. Select from try, force, none.<br>Try: The DHCP Server will assign specific address in priority.<br>Force: The DHCP Server assigns specific address only.<br>None: The DHCP Server will randomly assign address. The specific address is relevant to the prefix length of IPv6 address you set. |
| Request prefix length of IPv6 | Set the prefix length of IPv6 address which router is expected to obtain from DHCP Server.                                                                                                                                                                                                                                                                      |

Table 3-2-1-12 DHCP Client Parameters

### 3. PPPoE

PPPoE refers to a point to point protocol over Ethernet. User has to install a PPPoE client on the basis of the original connection way. With PPPoE, remote access devices can get control of each user.

|                            |                                     |
|----------------------------|-------------------------------------|
| Enable                     | <input checked="" type="checkbox"/> |
| Port                       | WAN/LAN5                            |
| Connection Type            | PPPoE                               |
| Username                   | <input type="text"/>                |
| Password                   | <input type="password"/>            |
| Service Name               | <input type="text"/>                |
| Link Detection Interval(s) | 60                                  |
| Max Retries                | 0                                   |
| MTU                        | 1500                                |
| Use Peer DNS               | <input type="checkbox"/>            |
| IPv4 Primary DNS           | 223.5.5.5                           |
| IPv4 Secondary DNS         | 114.114.114.114                     |
| Enable NAT                 | <input checked="" type="checkbox"/> |

Figure 3-2-1-14

| PPPoE        |                                                                      |
|--------------|----------------------------------------------------------------------|
| Item         | Description                                                          |
| Username     | Enter the username provided by your Internet Service Provider (ISP). |
| Password     | Enter the password provided by your Internet Service Provider (ISP). |
| Service Name | Configure the service name that the client will request.             |

|                             |                                                                                                   |
|-----------------------------|---------------------------------------------------------------------------------------------------|
| Link Detection Interval (s) | Set the heartbeat interval for link detection. Range: 1-600.                                      |
| Max Retries                 | Set the maximum retry times after it fails to dial up. Range: 0-9.                                |
| Use Peer DNS                | Obtain peer DNS automatically during PPP dialing.<br>DNS is required when accessing domain names. |

Table 3-2-1-13 PPPoE Parameters

#### 4. Dual-Stack Lite

Dual-Stack Lite (DS-Lite) uses IPv4-in-IPv6 tunneling to send a subscriber's IPv4 packet through a tunnel on the IPv6 access network to the ISP. The IPv6 packet is decapsulated to recover the subscriber's IPv4 packet and is then sent to the Internet after NAT address and port translation and other LSN-related processing. The response packets traverse through the same path to the subscriber.

|                      |                                     |
|----------------------|-------------------------------------|
| Enable               | <input checked="" type="checkbox"/> |
| Port                 | WAN                                 |
| Connection Type      | Dual-Stack Lite                     |
| IPv6 Gateway         |                                     |
| DS-Lite AFTR Address |                                     |
| Local IPv6 Address   |                                     |
| MTU                  | 1500                                |
| IPv4 Primary DNS     | 8.8.8.8                             |
| IPv4 Secondary DNS   | 223.5.5.5                           |
| IPv6 Primary DNS     |                                     |
| IPv6 Secondary DNS   |                                     |
| Enable NAT           | <input checked="" type="checkbox"/> |

Figure 3-2-1-15

| Dual-Stack Lite      |                                                                          |
|----------------------|--------------------------------------------------------------------------|
| Item                 | Description                                                              |
| IPv6 Gateway         | Set the gateway for WAN port's IPv6 address.                             |
| DS-Lite AFTR Address | Set the DS-Lite AFTR server address.                                     |
| Local IPv6 Address   | Set the WAN port IPv6 address which use the same subnet as IPv6 gateway. |

Table 3-2-1-14 Dual-Stack Lite Parameters

#### Related Configuration Example

[Ethernet WAN Connection](#)

##### 3.2.1.5 Bridge

Bridge setting is used for managing local area network devices which are connected to LAN ports of

the UR35, allowing each of them to access the Internet.

The image shows a 'Bridge Setting' configuration window. It includes the following fields and options:

- Name:** Bridge0
- STP:** ☐
- IP Address:** 192.168.1.1
- Netmask:** 255.255.255.0
- IPv6 Address:** (empty field)
- MTU:** 1500
- Multiple IP Address:** A table with columns for IP Address, Netmask, and Operation. The table is currently empty, and there is a '+' button to add new entries.

Figure 3-2-1-16

| Bridge              |                                                                             |               |
|---------------------|-----------------------------------------------------------------------------|---------------|
| Item                | Description                                                                 | Default       |
| Name                | Show the name of bridge. "Bridge0" is set by default and cannot be changed. | Bridge0       |
| STP                 | Enable/disable STP.                                                         | Disable       |
| IP Address          | Set the IP address for bridge.                                              | 192.168.1.1   |
| Netmask             | Set the Netmask for bridge.                                                 | 255.255.255.0 |
| IPv6 Address        | Set the IPv6 address for bridge.                                            | 2004::1/64    |
| MTU                 | Set the maximum transmission unit. Range: 68-1500.                          | 1500          |
| Multiple IP Address | Set the multiple IP addresses for bridge.                                   | Null          |

Table 3-2-1-15 Bridge Settings

### 3.2.1.6 WLAN

This section explains how to set the related parameters for Wi-Fi network. UR35 supports 802.11 b/g/n, as AP or client mode.

The image shows a 'WLAN' configuration window with the following settings:

- Enable:** ☒
- Work Mode:** AP
- BSSID:** 24:e1:24:f9:19:2a
- Radio Type:** 802.11n(2.4GHz)
- Channel:** Auto
- Bandwidth:** 20MHz
- SSID:** Router\_F9192A
- Encryption Mode:** WPA-PSK
- Cipher:** Auto
- Key:** (masked with asterisks)
- SSID Broadcast:** ☒
- AP Isolation:** ☐
- Guest Mode:** ☐
- Max Client Number:** 10
- MAC Filtering:**
  - Type: Disabled

Figure 3-2-1-17

| Item                         | Description                                                                                                                                                                                                                              |
|------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Enable                       | Enable/disable WLAN.                                                                                                                                                                                                                     |
| Work Mode                    | Select router's work mode. The options are "Client" or "AP".                                                                                                                                                                             |
| <b>AP Mode</b>               |                                                                                                                                                                                                                                          |
| BSSID                        | Show the MAC address of this WLAN interface.                                                                                                                                                                                             |
| Radio Type                   | Select Radio type. The options are "802.11b (2.4 GHz)", "802.11g (2.4 GHz)", "802.11n (2.4 GHz)".                                                                                                                                        |
| Channel                      | Select wireless channel. The options are "Auto", "1", "2" ..... "11".                                                                                                                                                                    |
| Bandwidth                    | Select bandwidth. The options are "20MHz" and "40MHz".                                                                                                                                                                                   |
| SSID                         | Fill in the SSID of the access point.                                                                                                                                                                                                    |
| Encryption Mode              | Select encryption mode. The options are "No Encryption", "WEP Open System", "WEP Shared Key", "WPA-PSK", "WPA2-PSK", "WPA-PSK/WPA2-PSK", "WPA-EAP" and "WPA2-EAP".                                                                       |
| Cipher                       | Select cipher of WPA encryption. The options are "Auto", "AES", "TKIP" and "AES/TKIP".                                                                                                                                                   |
| Key                          | Fill the key to connect to this access point. The default key is <b>iotpassword</b> .                                                                                                                                                    |
| Radius-Authentication-Server | Enter the IP address of the Radius authentication server.                                                                                                                                                                                |
| Radius-Authentication-Port   | Enter the Radius authentication server port number.                                                                                                                                                                                      |
| Radius-Authentication-Secret | Enter the shared key for the Radius Authentication Server.                                                                                                                                                                               |
| Radius-Accounting-Server     | Enter the IP address of the Radius accounting server.                                                                                                                                                                                    |
| Radius-Accounting-Port       | Enter the port number of the Radius accounting server.                                                                                                                                                                                   |
| Radius-Accounting-Secret     | Enter the shared key for the Radius accounting server.                                                                                                                                                                                   |
| NAS Identifier               | Unique identifier, used to identify the access device, can help the RADIUS server distinguish authentication requests from different access devices.                                                                                     |
| SSID Broadcast               | When SSID broadcast is disabled, other wireless devices can't find the SSID, and users have to enter the SSID manually to access to the wireless network.                                                                                |
| AP Isolation                 | When AP isolation is enabled, all users who access to the AP are isolated without communication with each other.                                                                                                                         |
| Guest Mode                   | The internal network is not allowed to visit if the guest mode is enabled.                                                                                                                                                               |
| Max Client Number            | Set the maximum number of clients to access when the router is configured as AP.                                                                                                                                                         |
| <b>MAC Filtering</b>         |                                                                                                                                                                                                                                          |
| Type                         | Choose the filter type of devices connected to this router's wireless access point.<br><b>Disable:</b> allow all users to connect to this access point.<br><b>Allow and Block the Rest:</b> Only the listed MAC addresses are allowed to |

|                        |                                                                                                                                                                                                                    |
|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                        | connect to the router's wireless access point.<br><b>Block and allow the rest:</b> The listed MAC addresses are not allowed to connect to the router's wireless access point.                                      |
| MAC Address            | The device MAC addresses which need to block or allow.                                                                                                                                                             |
| Description            | The description of this MAC address.                                                                                                                                                                               |
| <b>Client Mode</b>     |                                                                                                                                                                                                                    |
| Scan                   | Click to scan the access points around this device.                                                                                                                                                                |
| SSID                   | Fill in the SSID of the access point.                                                                                                                                                                              |
| BSSID                  | Fill in the MAC address of the access point. Either SSID or BSSID can be filled to join the network.                                                                                                               |
| Encryption Mode        | Select encryption mode. The options are "No Encryption", "WEP Open System", "WEP Shared Key", "WPA-PSK", "WPA2-PSK", "WPA-PSK/WPA2-PSK", "WPA-Enterprise", "WPA2-Enterprise" and "WPA-Enterprise/WPA2-Enterprise". |
| Cipher                 | Select cipher of WPA encryption. The options are "Auto", "AES", "TKIP" and "AES/TKIP".                                                                                                                             |
| Key                    | Fill the key to connect to this access point.                                                                                                                                                                      |
| Xsupplicant Type       | Select from "Peap", "Leap", "TLS" and "TTLS".                                                                                                                                                                      |
| Username               | Fill the username of WPA/WPA2-Enterprise.                                                                                                                                                                          |
| Password               | Fill the password of WPA/WPA2-Enterprise.                                                                                                                                                                          |
| Anonymous Identity     | Fill the anonymous identity of WPA/WPA2-Enterprise.                                                                                                                                                                |
| Phase 1/2              | Fill the phase of WPA/WPA2-Enterprise.                                                                                                                                                                             |
| CA Certificate         | The public server certificate used for verifying with WPA/WPA2-Enterprise access point.                                                                                                                            |
| Public Key             | When Xsupplicant type is "TLS", import the public key used for verifying with WPA/WPA2-Enterprise access point.                                                                                                    |
| Private Key            | When Xsupplicant type is "TLS", import the private key used for verifying with WPA/WPA2-Enterprise access point.                                                                                                   |
| Private Key Decryption | Set the decryption password of private key.                                                                                                                                                                        |
| <b>IP Setting</b>      |                                                                                                                                                                                                                    |
| Protocol               | Set the protocol to get the WLAN IP address.                                                                                                                                                                       |
| IP Address             | Set the IP address in wireless network when protocol is Static IP.                                                                                                                                                 |
| Netmask                | Set the netmask in wireless network when protocol is Static IP.                                                                                                                                                    |
| Gateway                | Set the gateway in wireless network when protocol is Static IP.                                                                                                                                                    |

Table 3-2-1-16 WLAN Parameters

< GoBack

| SSID                    | Channel | Signal | Cipher | BSSID             | Security      | Frequency |              |
|-------------------------|---------|--------|--------|-------------------|---------------|-----------|--------------|
| People Counter_F9CBC1   | Auto    | -70dBm | Auto   | 24:e1:24:f9:cb:c1 | No Encryption | 2462MHz   | Join Network |
| Workplace Sensor_F778C6 | Auto    | -66dBm | Auto   | 24:e1:24:f7:78:c6 | No Encryption | 2462MHz   | Join Network |


Figure 3-2-1-18

| WLAN-Scan    |                                                |
|--------------|------------------------------------------------|
| Item         | Description                                    |
| SSID         | Show SSID.                                     |
| Channel      | Show wireless channel.                         |
| Signal       | Show wireless signal.                          |
| BSSID        | Show the MAC address of the access point.      |
| Cipher       | Show the cipher of the access point.           |
| Security     | Show the encryption mode.                      |
| Frequency    | Show the frequency of radio.                   |
| Join Network | Click the button to join the wireless network. |


Table 3-2-1-17 WLAN-Scan Parameters


**Note:** Please refer to below steps to turn on the 802.1x authentication on a Windows computer:

1. Set up a wireless network.

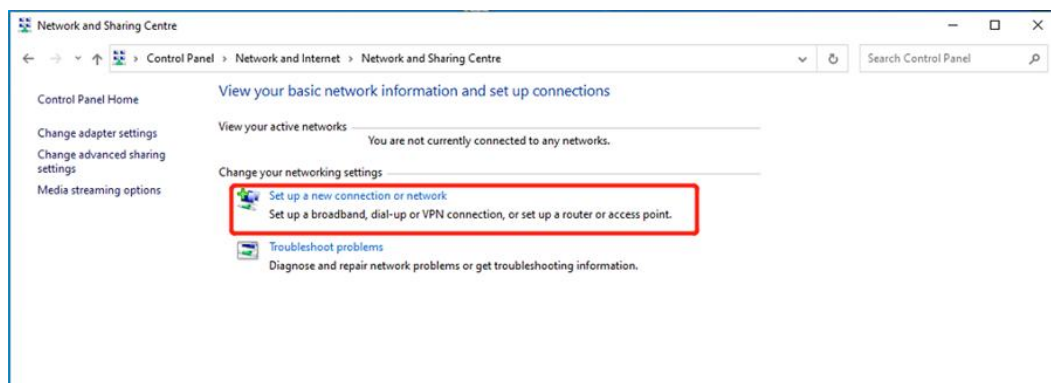


2. Manually add the wireless network and select the security type. Choose a network authentication method in **Security** by the authentication server.

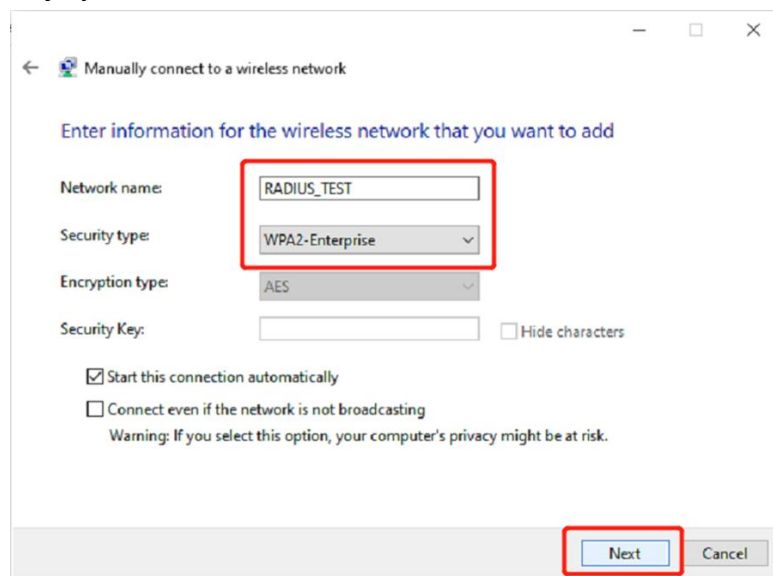

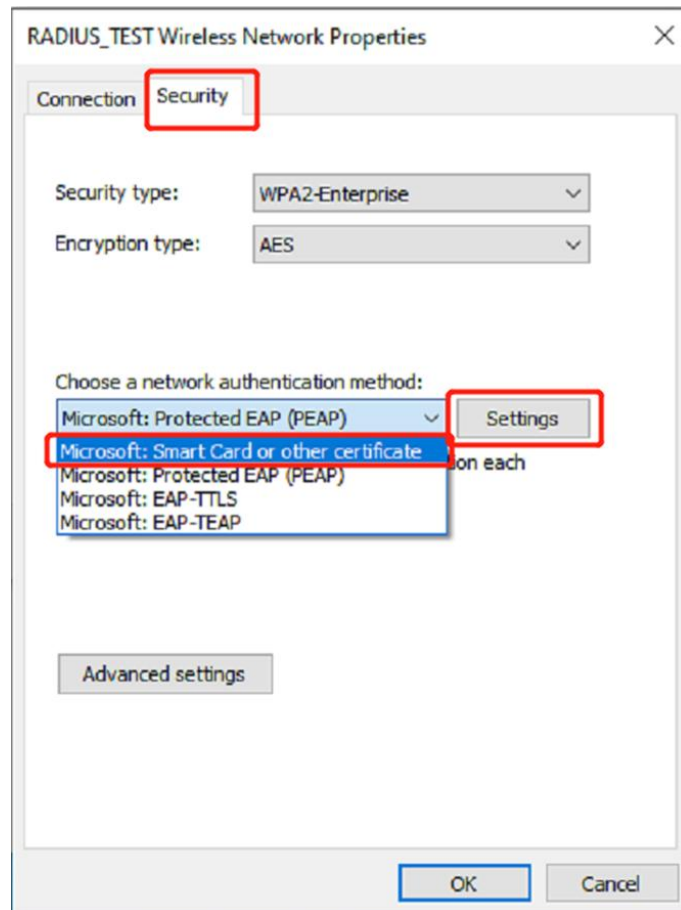

3. Connect to Wi-Fi.

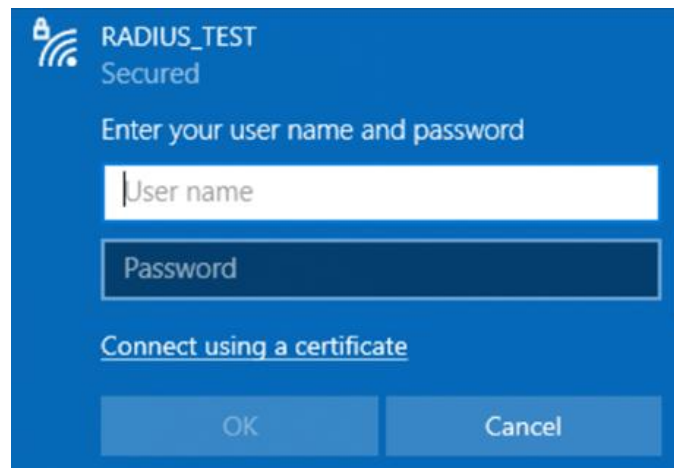

## Related Topic

[Wi-Fi Application Example](#)

### 3.2.1.7 VLAN

VLAN is a kind of new data exchange technology that realizes virtual work groups by logically dividing

the LAN device into network segments.

The screenshot displays the Milesight web interface for configuring VLANs. It is divided into three main sections:

- VLAN Settings:** A table with columns for VLAN ID, LAN 1, LAN 2, LAN 3, LAN 4, CPU, and Operation. Two rows are shown: VLAN 1 (Untagged on all LANs, Tagged on CPU) and VLAN 4093 (Tagged on all LANs, Tagged on CPU). A plus icon is at the bottom right.
- Interfaces Settings:** A table with columns for Name, VLAN ID, IPv4 Address, Netmask, IPv6 Address, Prefix Length, MTU, and Operation. One row is shown for 'vlan1' (VLAN 1, IPv4: 192.168.1.1, Netmask: 255.255.255.0, MTU: 1500). A plus icon is at the bottom right.
- Custom VLAN for WAN:** Fields for VLAN ID (4094) and Property (Untagged). A 'Save & Apply' button is at the bottom.

Figure 3-2-1-19

| VLAN                       |                                                                                                                                           |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| Item                       | Description                                                                                                                               |
| <b>VLAN Settings</b>       |                                                                                                                                           |
| VLAN ID                    | Set the label ID of the VLAN. Range: 1-4094.                                                                                              |
| LAN 1/2/3/4/5              | Make the VLAN bind with the corresponding ports and select status from "Tagged", "Untagged" and "Close" for Ethernet frame on trunk link. |
| CPU                        | Control communication between VLAN and other networks.                                                                                    |
| <b>Interfaces Settings</b> |                                                                                                                                           |
| Name                       | Set interface name of VLAN.                                                                                                               |
| VLAN ID                    | Select VLAN ID of the interface.                                                                                                          |
| IPv4 Address               | Set IPv4 address of LAN port.                                                                                                             |
| Netmask                    | Set Netmask of LAN port.                                                                                                                  |
| IPv6 Address               | Set IPv6 address of LAN port.                                                                                                             |
| Prefix Length              | Set the IPv6 prefix length of VLAN.                                                                                                       |
| MTU                        | Set the maximum transmission unit of LAN port. Range: 68-1500.                                                                            |
| <b>Custom VLAN for WAN</b> |                                                                                                                                           |
| VLAN ID                    | Set the label ID of the VLAN. Range: 1-4094.                                                                                              |
| Property                   | Make the VLAN bind with the corresponding ports and select status from "Tagged", "Untagged" and "Close" for Ethernet frame on trunk link. |

Table 3-2-1-18 VLAN Trunk Parameters

### 3.2.1.8 Loopback

Loopback interface is used for replacing router's ID as long as it is activated. When the interface is DOWN, the ID of the router has to be selected again which leads to long convergence time of OSPF. Therefore, Loopback interface is generally recommended as the ID of the router.

Loopback interface is a logic and virtual interface on router. Under default conditions, there's no



loopback interface on router, but it can be created as required.

The screenshot shows a configuration page for a loopback address. Under the 'Loopback Address' section, there are two input fields: 'IP Address' with the value '127.0.0.1' and 'Netmask' with the value '255.0.0.0'. Below this is a section titled 'Multiple IP Addresses' which contains a table with three columns: 'IP Address', 'Netmask', and 'Operation'. The table is currently empty, and there is a blue plus button in the bottom right corner of the table area to add new entries.

Figure 3-2-1-20

| Loopback              |                                                                 |           |
|-----------------------|-----------------------------------------------------------------|-----------|
| Item                  | Description                                                     | Default   |
| IP Address            | Unalterable                                                     | 127.0.0.1 |
| Netmask               | Unalterable                                                     | 255.0.0.0 |
| Multiple IP Addresses | Apart from the IP above, user can configure other IP addresses. | Null      |

Table 3-2-1-19 Loopback Parameters

### 3.2.2 DHCP

DHCP adopts Client/Server communication mode. The Client sends configuration request to the Server which feeds back corresponding configuration information and distributes IP address to the Client so as to achieve the dynamic configuration of IP address and other information.

#### 3.2.2.1 DHCP Server/DHCPv6 Server

UR35 can be set as a DHCP server or DHCPv6 server to distribute IP address when a host logs on and ensures each host is supplied with different IP addresses. DHCP Server has simplified some previous network management tasks requiring manual operations to the largest extent. UR35 only supports stateful DHCPv6 when working as DHCPv6 server.

— DHCP Server\_1

Enable ☒

Interface Bridge0

Start Address 192.168.1.100

End Address 192.168.1.199

Netmask 255.255.255.0

Lease Time(Min) 1440

Primary DNS Server 192.168.1.1

Secondary DNS Server 8.8.8.8

Windows Name Server

Static IP

| MAC Address | IP Address | Operation         |
|-------------|------------|-------------------|
|             |            | <a href="#">+</a> |

Figure 3-2-2-1

— DHCPv6 Server\_1

Enable ☒

Interface Bridge0

Start Address 2001:D0B0:3000:3001::100

End Address 2001:D0B0:3000:3001::199

Prefix Length 64

Lease Time(Min) 1440

Primary DNS Server 2001:D0B0:3000:3001::1

Secondary DNS Server 2001:4860:4860::8888

Static IP

| DUID | IPv6 Address | Operation         |
|------|--------------|-------------------|
|      |              | <a href="#">+</a> |

Figure 3-2-2-2

| DHCP/DHCPv6 Server |                                                                                        |               |
|--------------------|----------------------------------------------------------------------------------------|---------------|
| Item               | Description                                                                            | Default       |
| Enable             | Enable or disable DHCP server.                                                         | Enable        |
| Interface          | Select interface.                                                                      | Bridge0       |
| Start Address      | Define the beginning of the pool of IP addresses which will be leased to DHCP clients. | 192.168.1.0   |
| End Address        | Define the end of the pool of IP addresses which will be leased to DHCP clients.       | 192.168.1.9   |
| Netmask            | Define the subnet mask of IPv4 address obtained by DHCP clients from DHCP server.      | 255.255.255.0 |

|                      |                                                                                                                             |             |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------|-------------|
| Prefix Length        | Set the IPv6 prefix length of IPv6 address obtained by DHCP clients from DHCP server.                                       | 64          |
| Lease Time (Min)     | Set the lease time on which the client can use the IP address obtained from DHCP server. Range: 1-10080.                    | 1440        |
| Primary DNS Server   | Set the primary DNS server.                                                                                                 | 192.168.1.1 |
| Secondary DNS Server | Set the secondary DNS server.                                                                                               | Null        |
| Windows Name Server  | Define the Windows Internet Naming Service obtained by DHCP clients from DHCP sever. Generally you can leave it blank.      | Null        |
| <b>Static IP</b>     |                                                                                                                             |             |
| MAC Address          | Set a static and specific MAC address for the DHCP client (it should be different from other MACs so as to avoid conflict). | Null        |
| DUID                 | Set a static and specific DUID for the DHCPv6 client (it should be different from other DUID so as to avoid conflict).      | Null        |
| IP Address           | Set a static and specific IP address for the DHCP client (it should be outside of the DHCP range).                          | Null        |

Table 3-2-2-1 DHCP Server Parameters

### 3.2.2.2 DHCP Relay

UR35 can be set as DHCP Relay to provide a relay tunnel to solve the problem that DHCP Client and DHCP Server are not in the same subnet.

Figure 3-2-2-3

| DHCP Relay  |                                                                                           |
|-------------|-------------------------------------------------------------------------------------------|
| Item        | Description                                                                               |
| Enable      | Enable or disable DHCP relay.                                                             |
| DHCP Server | Set DHCP server, up to 10 servers can be configured; separate them by blank space or ",". |

Table 3-2-2-2 DHCP Relay Parameters

### 3.2.3 Firewall

This section describes how to set the firewall parameters, including security, ACL, DMZ, Port Mapping, MAC Binding and SPI.

The firewall implements corresponding control of data flow at entry direction (from Internet to local area network) and exit direction (from local area network to Internet) according to the content features of packets, such as protocol style, source/destination IP address, etc. It ensures that the router operate in a safe environment and host in local area network.

#### 3.2.3.1 Security

Prevent Attack

DoS/DDoS Protection

☒

HTTP Redirect to HTTPS

☒

Access Service Control

| Service | Port | Local                               | Remote                              |
|---------|------|-------------------------------------|-------------------------------------|
| HTTP    | 80   | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| HTTPS   | 443  | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| TELNET  | 23   | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| SSH     | 22   | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| FTP     | 21   | <input type="checkbox"/>            | <input type="checkbox"/>            |

Website Blocking

URL Blocking

http://

×

+

Keyword Blocking

×

+

Figure 3-2-3-1

| Item                          | Description                                                                             | Default |
|-------------------------------|-----------------------------------------------------------------------------------------|---------|
| <b>Prevent Attack</b>         |                                                                                         |         |
| DoS/DDoS Protection           | Enable/disable Prevent DoS/DDoS Attack.                                                 | Enable  |
| HTTP Redirect to HTTPS        | When HTTPS access service is enabled, HTTP access will automatically redirect to HTTPS. | Enable  |
| <b>Access Service Control</b> |                                                                                         |         |

|                         |                                                                                                                          |         |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------|---------|
| Port                    | Set port number of the services. Range: 1-65535.                                                                         | --      |
| Local                   | Access the router locally.                                                                                               | Enable  |
| Remote                  | Access the router remotely.                                                                                              | Disable |
| HTTP                    | Users can log in the device locally via HTTP to access and control it through Web after the option is checked.           | 80      |
| HTTPS                   | Users can log in the device locally and remotely via HTTPS to access and control it through Web after option is checked. | 443     |
| TELNET                  | Users can log in the device locally and remotely via Telnet after the option is checked.                                 | 23      |
| SSH                     | Users can log in the device locally and remotely via SSH after the option is checked.                                    | 22      |
| FTP                     | Users can log in the device locally and remotely via FTP after the option is checked.                                    | 21      |
| <b>Website Blocking</b> |                                                                                                                          |         |
| URL Blocking            | Enter the HTTP address which you want to block.                                                                          |         |
| Keyword Blocking        | You can block specific website by entering keyword. The maximum number of character allowed is 64.                       |         |

Table 3-2-3-1 Security Parameters

### 3.2.3.2 ACL

Access control list, also called ACL, implements permission or prohibition of access for specified network traffic (such as the source IP address) by configuring a series of matching rules so as to filter the network interface traffic. When router receives packet, the field will be analyzed according to the ACL rule applied to the current interface. After the special packet is identified, the permission or prohibition of corresponding packet will be implemented according to preset strategy.

The data package matching rules defined by ACL can also be used by other functions requiring flow distinction.

The screenshot displays the ACL configuration page. The 'ACL Setting' section shows the 'Default Filter Policy' set to 'Accept'. The 'Access Control List' section contains a table with columns: ID, Action, Protocol, Source IP, Destination IP, More Detail, Description, and Operation. A '+' button is present to add a new rule. The 'Interface List' section contains a table with columns: Interface, In ACL, Out ACL, and Operation. A '+' button is present to add a new interface. A 'Save' button is located at the bottom left of the page.

Figure 3-2-3-2

|                                   |          |
|-----------------------------------|----------|
| Type                              | extended |
| ID                                |          |
| Action                            | permit   |
| Protocol                          | ip       |
| Source IP                         |          |
| Source Wildcard Mask              | 0.0.0.0  |
| Destination IP                    |          |
| Destination Wildcard Mask         | 0.0.0.0  |
| Description                       |          |
| <div>Save</div> <div>Cancel</div> |          |

Figure 3-2-3-3

| Item                       | Description                                                                                                                                       |
|----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>ACL Setting</b>         |                                                                                                                                                   |
| Default Filter Policy      | Select from "Accept" and "Deny".<br>The packets which are not included in the access control list will be processed by the default filter policy. |
| <b>Access Control List</b> |                                                                                                                                                   |
| Type                       | Select type from "Extended" and "Standard".                                                                                                       |
| ID                         | User-defined ACL number. Range: 1-199.                                                                                                            |
| Action                     | Select from "Permit" and "Deny".                                                                                                                  |
| Protocol                   | Select protocol from "ip", "icmp", "tcp", "udp", and "1-255".                                                                                     |
| Source IP                  | Source network address (leaving it blank means all).                                                                                              |
| Source Wildcard Mask       | Wildcard mask of the source network address.                                                                                                      |
| Destination IP             | Destination network address (0.0.0.0 means all).                                                                                                  |
| Destination Wildcard Mask  | Wildcard mask of destination address.                                                                                                             |
| Description                | Fill in a description for the groups with the same ID.                                                                                            |
| ICMP Type                  | Enter the type of ICMP packet. Range: 0-255.                                                                                                      |
| ICMP Code                  | Enter the code of ICMP packet. Range: 0-255.                                                                                                      |
| Source Port Type           | Select source port type, such as specified port, port range, etc.                                                                                 |
| Source Port                | Set source port number. Range: 1-65535.                                                                                                           |
| Start Source Port          | Set start source port number. Range: 1-65535.                                                                                                     |
| End Source Port            | Set end source port number. Range: 1-65535.                                                                                                       |
| Destination Port Type      | Select destination port type, such as specified port, port range, etc.                                                                            |
| Destination Port           | Set destination port number. Range: 1-65535.                                                                                                      |
| Start Destination Port     | Set start destination port number. Range: 1-65535.                                                                                                |
| End Destination Port       | Set end destination port number. Range: 1-65535.                                                                                                  |
| More Details               | Show information of the port.                                                                                                                     |

| Interface List |                                                 |
|----------------|-------------------------------------------------|
| Interface      | Select network interface for access control.    |
| In ACL         | Select a rule for incoming traffic from ACL ID. |
| Out ACL        | Select a rule for outgoing traffic from ACL ID. |

Table 3-2-3-2 ACL Parameters

### 3.2.3.3 Port Mapping (DNAT)

When external services are needed internally (for example, when a website is published externally), the external address initiates an active connection. And, the router or the gateway on the firewall receives the connection. Then it will convert the connection into the an internal connection. This conversion is called DNAT, which is mainly used for external and internal services.

| Source IP | Source Port | Destination IP | Destination Port | Protocol | Description | Operation |
|-----------|-------------|----------------|------------------|----------|-------------|-----------|
| 0.0.0.0/0 |             |                |                  | TCP      |             | X         |
|           |             |                |                  |          |             | +         |

Figure 3-2-3-3

| Port Mapping     |                                                                                                                       |
|------------------|-----------------------------------------------------------------------------------------------------------------------|
| Item             | Description                                                                                                           |
| Source IP        | Specify the host or network which can access local IP address. 0.0.0.0/0 means all.                                   |
| Source Port      | Enter the TCP or UDP port from which incoming packets are forwarded. Range: 1-65535.                                  |
| Destination IP   | Enter the IP address that packets are forwarded to after being received on the incoming interface.                    |
| Destination Port | Enter the TCP or UDP port that packets are forwarded to after being received on the incoming port(s). Range: 1-65535. |
| Protocol         | Select from "TCP" and "UDP" as your application required.                                                             |
| Description      | The description of this rule.                                                                                         |


Table 3-2-3-3 Port Mapping Parameters

### Related Configuration Example

[NAT Application Example](#)

### 3.2.3.4 DMZ

DMZ is a host within the internal network that has all ports exposed, except those forwarded ports in port mapping.

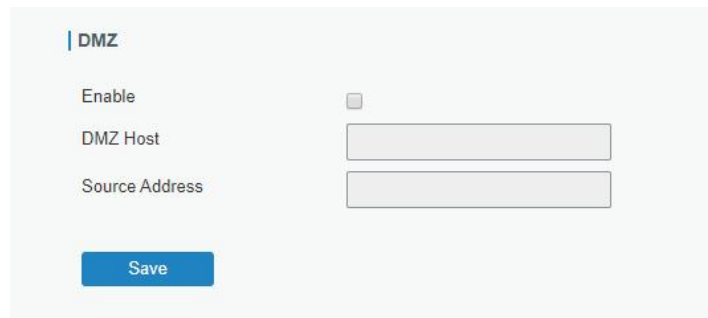

DMZ

Enable ☐

DMZ Host

Source Address

Save


Figure 3-2-3-4

| DMZ            |                                                                                           |
|----------------|-------------------------------------------------------------------------------------------|
| Item           | Description                                                                               |
| Enable         | Enable or disable DMZ.                                                                    |
| DMZ Host       | Enter the IP address of the DMZ host on the internal network.                             |
| Source Address | Set the source IP address which can access to DMZ host.<br>"0.0.0.0/0" means any address. |

Table 3-2-3-4 DMZ Parameters

### 3.2.3.5 MAC Binding

MAC Binding is used for specifying hosts by matching MAC addresses and IP addresses that are in the list of allowed outer network access.

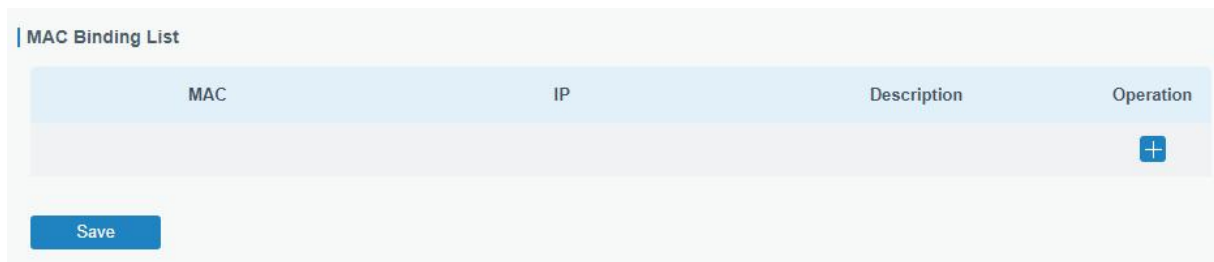

MAC Binding List

| MAC | IP | Description | Operation |
|-----|----|-------------|-----------|
|     |    |             | +         |

Save

Figure 3-2-3-5

| MAC Binding List |                                                                                                              |
|------------------|--------------------------------------------------------------------------------------------------------------|
| Item             | Description                                                                                                  |
| MAC Address      | Set the binding MAC address.                                                                                 |
| IP Address       | Set the binding IP address.                                                                                  |
| Description      | Fill in a description for convenience of recording the meaning of the binding rule for each piece of MAC-IP. |

Table 3-2-3-5 MAC Binding Parameters

### 3.2.3.6 Custom Rules

In this page, you can configure your own custom firewall iptables rules.



Custom Rules

| Rule                                            | Description | Operation                                                                           |
|-------------------------------------------------|-------------|-------------------------------------------------------------------------------------|
| Eg: -t filter -I INPUT -s 192.168.3.240 -j DROP |             |  |
|                                                 |             |  |

Save

Figure 3-2-3-6

| Custom Rules |                                                                                                                                                     |
|--------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| Item         | Description                                                                                                                                         |
| Rule         | Specify an iptables rule like the example shows.<br>Tips: You must reboot the device to take effect after modifying or deleting the iptables rules. |
| Description  | Enter the description of the rule.                                                                                                                  |

Table 3-2-3-6 Custom Rules Parameters

### 3.2.3.7 SPI

SPI Firewall

- ☐ Enable
- ☐ Filter Proxy
- ☐ Filter Cookies
- ☐ Filter Activex
- ☐ Filter Java Applets
- ☒ Filter Multicast
- ☐ Filter IDENT(port 113)
- ☒ Block Wan SNMP access
- ☒ Filter WAN NAT Redirection
- ☒ Block Anonymous Wan Request

Save

Figure 3-2-3-7

| SPI Firewall |                                                     |
|--------------|-----------------------------------------------------|
| Item         | Description                                         |
| Enable       | Enable/disable SPI firewall.                        |
| Filter Proxy | Blocks HTTP requests containing the "Host": string. |

|                              |                                                                                                                                          |
|------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| Filter Cookies               | Identifies HTTP requests that contain "Cookie": String and mangle the cookie. Attempts to stop cookies from being used.                  |
| Filter ActiveX               | Blocks HTTP requests of the URL that ends in ".ocx" or ".cab".                                                                           |
| Filter Java Applets          | Blocks HTTP requests of the URL that ends in ".js" or ".class".                                                                          |
| Filter Multicast             | Prevent multicast packets from reaching the LAN.                                                                                         |
| Filter IDENT(port 113)       | Prevent WAN access to Port 113.                                                                                                          |
| Block WAN SNMP access        | Block SNMP requests from the WAN.                                                                                                        |
| Filter WAN NAT Redirection   | Prevent hosts on LAN from using WAN address of router to connect servers on the LAN (which have been configured using port redirection). |
| Block Anonymous WAN Requests | Stop the router from responding to "pings" from the WAN.                                                                                 |

Table 3-2-3-7 SPI Parameters

### 3.2.4 QoS

Quality of service (QoS) refers to traffic prioritization and resource reservation control mechanisms rather than the achieved service quality. QoS is engineered to provide different priority for different applications, users, data flows, or to guarantee a certain level of performance to a data flow.

QoS(Download)

QoS(Upload)

Download Bandwidth

Enable

☐

Default Category

Download Bandwidth

0

kbits/s

Capacity

Service Category

| Name | Percent(%) | Max BW(kbps) | Min BW(kbps) | Operation         |
|------|------------|--------------|--------------|-------------------|
|      |            |              |              | <a href="#">+</a> |

Service Category Rules

| Name | Source IP | Source Port | Destination IP | Destination Port | Protocol | Service Category | Operation         |
|------|-----------|-------------|----------------|------------------|----------|------------------|-------------------|
|      |           |             |                |                  |          |                  | <a href="#">+</a> |

Save

Figure 3-2-4-1

| QoS             |                        |
|-----------------|------------------------|
| Item            | Description            |
| Download/Upload |                        |
| Enable          | Enable or disable QoS. |

|                                    |                                                                                                                                                                              |
|------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Default Category                   | Select the default category from Service Category list.                                                                                                                      |
| Download/Upload Bandwidth Capacity | The download/upload bandwidth capacity of the network that the router is connected with, in kbps. Range: 1-8000000.                                                          |
| <b>Service Category</b>            |                                                                                                                                                                              |
| Name                               | You can use characters such digits, letters and "-".                                                                                                                         |
| Percent (%)                        | Set percent for the service category. Range: 0-100.                                                                                                                          |
| Max BW(kbps)                       | The maximum bandwidth that this category is allowed to consume, in kbps. The value should be less than the "Download/Upload Bandwidth Capacity" when the traffic is blocked. |
| Min BW(kbps)                       | The minimum bandwidth that can be guaranteed for the category, in kbps. The value should be less than the "MAX BW" value.                                                    |
| <b>Service Category Rules</b>      |                                                                                                                                                                              |
| <b>Item</b>                        | <b>Description</b>                                                                                                                                                           |
| Name                               | Give the rule a descriptive name.                                                                                                                                            |
| Source IP                          | Source address of flow control (leaving it blank means any).                                                                                                                 |
| Source Port                        | Source port of flow control. Range: 0-65535 (leaving it blank means any).                                                                                                    |
| Destination IP                     | Destination address of flow control (leaving it blank means any).                                                                                                            |
| Destination Port                   | Destination port of flow control. Range: 0-65535 (leaving it blank means any).                                                                                               |
| Protocol                           | Select protocol from "ANY", "TCP", "UDP", "ICMP", and "GRE".                                                                                                                 |
| Service Category                   | Set service category for the rule.                                                                                                                                           |

Table 3-2-4-1 QoS (Download/Upload) Parameters

## Related Configuration Example

### [QoS Application Example](#)

## 3.2.5 VPN

Virtual Private Networks, also called VPNs, are used to securely connect two private networks together so that devices can connect from one network to the other network via secure channels. The UR35 supports DMVPN, IPsec, GRE, L2TP, PPTP, OpenVPN, as well as GRE over IPsec and L2TP over IPsec.

### 3.2.5.1 DMVPN

A dynamic multi-point virtual private network (DMVPN), combining mGRE and IPsec, is a secure network that exchanges data between sites without passing traffic through an organization's headquarter VPN server or router.

DMVPN Settings

Enable

☒

Hub Address

Local IP Address Type

Interface Get

Interface

SIM1-APN1

GRE HUB IP Address

GRE Local IP Address

GRE Mask

255.255.255.0

GRE Key

Negotiation Mode

Main

Authentication Algorithm

AES128

Encryption Algorithm

MD5

DH Group

MODP768-1

Key

Local ID Type

Default

IKE Life Time(s)

10800

SAAlgorithm

AES128-MD5

PFS Group

NULL

Life Time(s)

3600

DPD Time Interval(s)

30

DPD Timeout(s)

150

Cisco Secret

NHRP Holdtime(s)

7200

Save

Figure 3-2-5-1

| DMVPN                 |                                                                                    |
|-----------------------|------------------------------------------------------------------------------------|
| Item                  | Description                                                                        |
| Enable                | Enable or disable DMVPN.                                                           |
| Hub Address           | The IP address or domain name of DMVPN Hub.                                        |
| Local IP Address Type | Local IP address obtaining method. Select from "Manual Input" and "Interface Get". |
| Local IP address      | DMVPN local tunnel IP address.                                                     |
| Interface             | Select the interface IP address to be used.                                        |

|                          |                                                                                                                                                                                                          |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| GRE Hub IP Address       | GRE Hub tunnel IP address.                                                                                                                                                                               |
| GRE Local IP Address     | GRE local tunnel IP address.                                                                                                                                                                             |
| GRE Netmask              | GRE local tunnel netmask.                                                                                                                                                                                |
| GRE Key                  | GRE tunnel key.                                                                                                                                                                                          |
| Negotiation Mode         | Select from "Main" and "Aggressive".                                                                                                                                                                     |
| Authentication Algorithm | Select from "DES", "3DES", "AES128", "AES192" and "AES256".                                                                                                                                              |
| Encryption Algorithm     | Select from "MD5", "SHA1" and "SHA2-256".                                                                                                                                                                |
| DH Group                 | Select from "MODP768_1", "MODP1024_2", "MODP1536_5", "MODP2048-14" and "MODP3072-15".                                                                                                                    |
| Key                      | Enter the preshared key.                                                                                                                                                                                 |
| Local ID Type            | Select from "Default", "ID", "FQDN", and "User FQDN"                                                                                                                                                     |
| IKE Life Time (s)        | Set the lifetime in IKE negotiation. Range: 60-86400.                                                                                                                                                    |
| SA Algorithm             | Select from "DES_MD5", "DES_SHA1", "AES128-SHA256", "3DES_MD5", "3DES_SHA1", "AES128_MD5", "AES128_SHA1", "AES192_MD5", "AES192_SHA1", "AES192-SHA256", "AES256_MD5", "AES256-SHA256" and "AES256_SHA1". |
| PFS Group                | Select from "NULL", "MODP768_1", "MODP1024_2" and "MODP1536-5".                                                                                                                                          |
| Life Time (s)            | Set the lifetime of IPsec SA. Range: 60-86400.                                                                                                                                                           |
| DPD Interval Time (s)    | Set DPD interval time                                                                                                                                                                                    |
| DPD Timeout (s)          | Set DPD timeout.                                                                                                                                                                                         |
| Cisco Secret             | Cisco Nhrp key.                                                                                                                                                                                          |
| NHRP Holdtime (s)        | The holdtime of NHRP protocol.                                                                                                                                                                           |

Table 3-2-5-1 DMVPN Parameters

### 3.2.5.2 IPSec Server

IPsec is especially useful for implementing virtual private networks and for remote user access through dial-up connection to private networks. A big advantage of IPsec is that security arrangements can be handled without requiring changes to individual user computers.

IPsec provides three choices of security service: Authentication Header (AH), Encapsulating Security Payload (ESP), and Internet Key Exchange (IKE). AH essentially allows authentication of the senders' data. ESP supports both authentication of the sender and data encryption. IKE is used for cipher code exchange. All of them can protect one and more data flows between hosts, between host and gateway, and between gateways.

IPsec Server

Enable

☒

IPsec Mode

Tunnel

IPsec Protocol

ESP

Local Subnet

+

Local ID Type

Default

Remote Subnet

+

Remote ID Type

Default

Figure 3-2-5-2

| IPsec Server   |                                                                                                                                                                                                                                                                                                                          |
|----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item           | Description                                                                                                                                                                                                                                                                                                              |
| Enable         | Enable or disable IPsec server mode.                                                                                                                                                                                                                                                                                     |
| IPsec Mode     | Select Tunnel or Transport.                                                                                                                                                                                                                                                                                              |
| IPsec Protocol | Select from ESP or AH.                                                                                                                                                                                                                                                                                                   |
| Local Subnet   | Enter the local LAN subnet IP address on the IPsec tunnel.<br><b>Note:</b> Only when IKE version = IKEv2, is it supported to add multiple local subnets.                                                                                                                                                                 |
| Local ID Type  | Select the identifier type, and send it to remote peer.<br><b>Default:</b> None<br><b>ID:</b> use local subnet IP address as ID<br><b>FQDN:</b> fully qualified domain name, example: test.user.com<br><b>User FQDN:</b> fully qualified username string with email address format, example: test@user.com               |
| Remote Subnet  | Set the remote LAN subnet on the IPsec tunnel.<br><b>Note:</b> Only when IKE version = IKEv2, is it supported to add multiple remote subnets.                                                                                                                                                                            |
| Remote ID type | Select the identifier type that is the same as remote peer local ID.<br><b>Default:</b> None<br><b>ID:</b> use remote subnet IP address as ID<br><b>FQDN:</b> fully qualified domain name, example: test.user.com<br><b>User FQDN:</b> fully qualified username string with email address format, example: test@user.com |

Table 3-2-5-2 IPsec Server Parameters

**IKE Parameter** ⌵ Collapse

IKE Version IKEv1

Negotiation Mode Main

Encryption Algorithm DES

Authentication Algorithm MD5

DH Group MODP768-1

Local Authentication PSK

XAUTH ☐

Lifetime(s) 10800

**PSK List**

| Selector       | PSK | Operation |
|----------------|-----|-----------|
| <span>+</span> |     |           |

Figure 3-2-5-3

**SA Parameter** ⌵ Collapse

SA Encryption Algorithm DES

SA Authentication Algorithm MD5

PFS Group NULL

Lifetime(s) 3600

DPD Time Interval(s) 30

DPD Timeout(s) 150

**IPsec Advanced** ⌵ Collapse

Enable Compression ☐

Margintime(s) 100

VPN Over IPsec Type NONE

Expert Options

Figure 3-2-5-4

| IKE Parameter            |                                                                                                                                                                                                                                                                                                                                    |
|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item                     | Description                                                                                                                                                                                                                                                                                                                        |
| IKE Version              | Select the method of key exchange from IKEv1 and IKEv2.                                                                                                                                                                                                                                                                            |
| Negotiation Mode         | When using IKEv1, select Main or Aggressive.                                                                                                                                                                                                                                                                                       |
| Encryption Algorithm     | Select DES, 3DES, AES128, AES192 or AES256.                                                                                                                                                                                                                                                                                        |
| Authentication Algorithm | Select MD5, SHA1 or SHA2-256.                                                                                                                                                                                                                                                                                                      |
| DH Group                 | Select MODP768-1, MODP1024-2, MODP1536-5, MODP2048-14 or MODP3072-15.                                                                                                                                                                                                                                                              |
| Local Authentication     | <p>Select PSK or CA.</p> <p><b>PSK:</b> use pre-shared key to complete the authentication.</p> <p><b>CA:</b> use certificate to complete the authentication. After selecting, go to <b>Network &gt; VPN &gt; &gt; Certifications</b> page to import CA certificate, local certificate and private key to corresponding fields.</p> |
| Remote Authentication    | <p>When using IKEv2, select PSK or CA.</p> <p><b>PSK:</b> use pre-shared key to complete the authentication.</p> <p><b>CA:</b> use certificate to complete the authentication. After selecting, go to <b>Network &gt; VPN &gt; &gt; Certifications</b> page to import remote certificate to corresponding fields.</p>              |

|                             |                                                                                                         |
|-----------------------------|---------------------------------------------------------------------------------------------------------|
| XAUTH                       | When using IKEv1, define XAUTH username and password after XAUTH is enabled.                            |
| Lifetime (s)                | Set the lifetime in IKE negotiation. Range: 60-86400.                                                   |
| <b>XAUTH List</b>           |                                                                                                         |
| Username                    | Enter the username used for the xauth authentication.                                                   |
| Password                    | Enter the password used for the xauth authentication.                                                   |
| <b>PSK List</b>             |                                                                                                         |
| Selector                    | Enter the corresponding identification number for PSK authentication.                                   |
| PSK                         | Enter the pre-shared key.                                                                               |
| <b>SA Parameter</b>         |                                                                                                         |
| SA Encryption Algorithm     | Select DES, 3DES, AES128, AES192 or AES256.                                                             |
| SA Authentication Algorithm | Select MD5, SHA1 or SHA2-256.                                                                           |
| PFS Group                   | Select NULL, MODP768-1 , MODP1024-2 or MODP1536-5.                                                      |
| Lifetime (s)                | Set the lifetime of IPsec SA. Range: 60-86400 s.                                                        |
| DPD Time Interval(s)        | Set DPD retry interval to send DPD requests. Range: 1-86400 s                                           |
| DPD Timeout(s)              | Set DPD timeout to detect the remote side fails. Range: 10-86400 s.                                     |
| <b>IPsec Advanced</b>       |                                                                                                         |
| Enable Compression          | The head of IP packet will be compressed after it's enabled.                                            |
| Margintime                  | Set advanced time before the lifetime expires to begin the re-negotiation.                              |
| VPN Over IPsec Type         | Select from NONE, GRE and L2TP.                                                                         |
| Expert Options              | User can enter some other initialization strings in this field and separate the strings with semicolon. |

Table 3-2-5-3 IPsec Server Parameters

### 3.2.5.3 IPSec

UR35 supports running at most 3 IPsec clients at the same time.

IPsec\_1

Enable

☒

IPsec Gateway Address

IPsec Mode

Tunnel

IPsec Protocol

ESP

Local Subnet

+

Local ID Type

Default

Remote Subnet

+

Remote ID Type

Default

Figure 3-2-5-5



| IPsec              |                                                                                                                                                                                                                                                                                                                          |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item               | Description                                                                                                                                                                                                                                                                                                              |
| Enable             | Enable or disable IPsec client mode. A maximum of 3 tunnels is allowed.                                                                                                                                                                                                                                                  |
| IP Gateway Address | Enter the remote IPsec server address.                                                                                                                                                                                                                                                                                   |
| IPsec Mode         | Select Tunnel or Transport.                                                                                                                                                                                                                                                                                              |
| IPsec Protocol     | Select from ESP or AH.                                                                                                                                                                                                                                                                                                   |
| Local Subnet       | Enter the local LAN subnet IP address on the IPsec tunnel.<br><b>Note:</b> Only when IKE version = IKEv2, is it supported to add multiple local subnets.                                                                                                                                                                 |
| Local ID Type      | Select the identifier type, and send it to remote peer.<br><b>Default:</b> None<br><b>ID:</b> use local subnet IP address as ID<br><b>FQDN:</b> fully qualified domain name, example: test.user.com<br><b>User FQDN:</b> fully qualified username string with email address format, example: test@user.com               |
| Remote Subnet      | Set the remote LAN subnet on the IPsec tunnel.<br><b>Note:</b> Only when IKE version = IKEv2, is it supported to add multiple remote subnets.                                                                                                                                                                            |
| Remote ID type     | Select the identifier type that is the same as remote peer local ID.<br><b>Default:</b> None<br><b>ID:</b> use remote subnet IP address as ID<br><b>FQDN:</b> fully qualified domain name, example: test.user.com<br><b>User FQDN:</b> fully qualified username string with email address format, example: test@user.com |

Table 3-2-5-4 IPsec Parameters

|                             |                          |                          |
|-----------------------------|--------------------------|--------------------------|
| IKE Parameter               |                          | <a href="#">Collapse</a> |
| IKE Version                 | IKEv1                    |                          |
| Negotiation Mode            | Main                     |                          |
| Encryption Algorithm        | DES                      |                          |
| Authentication Algorithm    | MD5                      |                          |
| DH Group                    | MODP768-1                |                          |
| Local Authentication        | PSK                      |                          |
| Local Secrets               | <input type="text"/>     |                          |
| XAUTH                       | <input type="checkbox"/> |                          |
| Lifetime(s)                 | 10800                    |                          |
| SA Parameter                |                          | <a href="#">Collapse</a> |
| SA Encryption Algorithm     | DES                      |                          |
| SA Authentication Algorithm | MD5                      |                          |
| PFS Group                   | NULL                     |                          |
| Lifetime(s)                 | 3600                     |                          |
| DPD Time Interval(s)        | 30                       |                          |
| DPD Timeout(s)              | 150                      |                          |
| IPsec Advanced              |                          | <a href="#">Collapse</a> |
| Enable Compression          | <input type="checkbox"/> |                          |
| Margintime(s)               | 100                      |                          |
| VPN Over IPsec Type         | NONE                     |                          |
| Expert Options              | <input type="text"/>     |                          |

Figure 3-2-5-6

| IKE Parameter            |                                                                                                                                                                                                                                                                                                                     |
|--------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item                     | Description                                                                                                                                                                                                                                                                                                         |
| IKE Version              | Select the method of key exchange from IKEv1 and IKEv2.                                                                                                                                                                                                                                                             |
| Negotiation Mode         | When using IKEv1, select Main or Aggressive.                                                                                                                                                                                                                                                                        |
| Encryption Algorithm     | Select DES, 3DES, AES128, AES192 or AES256.                                                                                                                                                                                                                                                                         |
| Authentication Algorithm | Select MD5, SHA1 or SHA2-256.                                                                                                                                                                                                                                                                                       |
| DH Group                 | Select MODP768-1, MODP1024-2, MODP1536-5, MODP2048-14 or MODP3072-15.                                                                                                                                                                                                                                               |
| Local Authentication     | Select PSK or CA.<br><b>PSK:</b> use pre-shared key to complete the authentication.<br><b>CA:</b> use certificate to complete the authentication. After selecting, go to <b>Network &gt; VPN &gt; &gt; Certifications</b> page to import CA certificate, local certificate and private key to corresponding fields. |
| Local Secrets            | Enter the pre-shared key which is defined on server side.                                                                                                                                                                                                                                                           |
| Remote Authentication    | When using IKEv2, select PSK or CA.                                                                                                                                                                                                                                                                                 |

|                             |                                                                                                                                                                                                                                                                 |
|-----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                             | <b>PSK:</b> use pre-shared key to complete the authentication.<br><b>CA:</b> use certificate to complete the authentication. After selecting, go to <b>Network &gt; VPN &gt; &gt; Certifications</b> page to import remote certificate to corresponding fields. |
| Remote Secrets              | Enter the pre-shared key which is defined on server side.                                                                                                                                                                                                       |
| XAUTH                       | Enter XAUTH username and password which is defined on server side.                                                                                                                                                                                              |
| Lifetime (s)                | Set the lifetime in IKE negotiation. Range: 60-86400.                                                                                                                                                                                                           |
| <b>SA Parameter</b>         |                                                                                                                                                                                                                                                                 |
| SA Encryption Algorithm     | Select DES, 3DES, AES128, AES192 or AES256.                                                                                                                                                                                                                     |
| SA Authentication Algorithm | Select MD5, SHA1 or SHA2-256.                                                                                                                                                                                                                                   |
| PFS Group                   | Select NULL, MODP768-1 , MODP1024-2 or MODP1536-5.                                                                                                                                                                                                              |
| Lifetime (s)                | Set the lifetime of IPsec SA. Range: 60-86400 s.                                                                                                                                                                                                                |
| DPD Time Interval(s)        | Set DPD retry interval to send DPD requests. Range: 1-86400 s                                                                                                                                                                                                   |
| DPD Timeout(s)              | Set DPD timeout to detect the remote side fails. Range: 10-86400 s.                                                                                                                                                                                             |
| <b>IPsec Advanced</b>       |                                                                                                                                                                                                                                                                 |
| Enable Compression          | The head of IP packet will be compressed after it's enabled.                                                                                                                                                                                                    |
| Margintime                  | Set advanced time before the lifetime expires to begin the re-negotiation.                                                                                                                                                                                      |
| VPN Over IPsec Type         | Select from NONE, GRE and L2TP.                                                                                                                                                                                                                                 |
| Expert Options              | User can enter some other initialization strings in this field and separate the strings with semicolon.                                                                                                                                                         |

Table 3-2-5-5 IPsec Parameters

### 3.2.5.4 GRE

Generic Routing Encapsulation (GRE) is a protocol that encapsulates packets in order to route other protocols over IP networks. It's a tunneling technology that provides a channel through which encapsulated data message could be transmitted and encapsulation and decapsulation could be realized at both ends.

In the following circumstances the GRE tunnel transmission can be applied:

- GRE tunnel could transmit multicast data packets as if it were a true network interface. Single use of IPSec cannot achieve the encryption of multicast.
- A certain protocol adopted cannot be routed.
- A network of different IP addresses shall be required to connect other two similar networks.

GRE Settings

GRE\_1

Enable

☐

Remote IP Address

Local IP Address

Local Virtual IP Address

Netmask

255.255.255.0

Peer Virtual IP Address

Global Traffic Forwarding

☐

Remote Subnet

Remote Netmask

MTU

1500

Key

Enable NAT

☒

GRE\_2

GRE\_3

Figure 3-2-5-7

| GRE                       |                                                                                     |
|---------------------------|-------------------------------------------------------------------------------------|
| Item                      | Description                                                                         |
| Enable                    | Check to enable GRE function.                                                       |
| Remote IP Address         | Enter the real remote IP address of GRE tunnel.                                     |
| Local IP Address          | Set the local IP address.                                                           |
| Local Virtual IP Address  | Set the local tunnel IP address of GRE tunnel.                                      |
| Netmask                   | Set the local netmask.                                                              |
| Peer Virtual IP Address   | Enter remote tunnel IP address of GRE tunnel.                                       |
| Global Traffic Forwarding | All the data traffic will be sent out via GRE tunnel when this function is enabled. |
| Remote Subnet             | Enter the remote subnet IP address of GRE tunnel.                                   |
| Remote Netmask            | Enter the remote netmask of GRE tunnel.                                             |
| MTU                       | Enter the maximum transmission unit. Range: 64-1500.                                |
| Key                       | Set GRE tunnel key.                                                                 |
| Enable NAT                | Enable NAT traversal function.                                                      |

Table 3-2-5-6 GRE Parameters

### 3.2.5.5 L2TP

Layer Two Tunneling Protocol (L2TP) is an extension of the Point-to-Point Tunneling Protocol (PPTP) used by an Internet service provider (ISP) to enable the operation of a virtual private network (VPN) over the Internet.

L2TP Settings

L2TP\_1

Enable

☐

Remote IP Address

Hostname

Username

Password

Authentication

Auto

Global Traffic Forwarding

☐

Remote Subnet

Remote Subnet Mask

Key

Advanced Settings

>> Expand

+ L2TP\_2

+ L2TP\_3

Figure 3-2-5-8

| L2TP                      |                                                                                          |
|---------------------------|------------------------------------------------------------------------------------------|
| Item                      | Description                                                                              |
| Enable                    | Check to enable L2TP function.                                                           |
| Remote IP Address         | Enter the public IP address or domain name of L2TP server.                               |
| Hostname                  | Enter the hostname to verify with L2TP server.                                           |
| Username                  | Enter the username that L2TP server provides.                                            |
| Password                  | Enter the password that L2TP server provides.                                            |
| Authentication            | Select from "Auto", "PAP", "CHAP", "MS-CHAPv1" and "MS-CHAPv2".                          |
| Global Traffic Forwarding | All of the data traffic will be sent out via L2TP tunnel after this function is enabled. |

|                    |                                                 |
|--------------------|-------------------------------------------------|
| Remote Subnet      | Enter the remote IP address that L2TP protects. |
| Remote Subnet Mask | Enter the remote netmask that L2TP protects.    |
| Key                | Enter the password of L2TP tunnel.              |

Table 3-2-5-7 L2TP Parameters

Advanced Settings ⌵ Collapse

Local IP Address

Peer IP Address

Enable NAT

☒

Enable MPPE

☐

Address/Control Compression

☐

Protocol Field Compression

☐

Asyncmap Value

ffffff

MRU

1500

MTU

1500

Link Detection Interval(s)

60

Max Retries

0

Expert Options

Figure 3-2-5-9

| Advanced Settings           |                                                                                                                          |
|-----------------------------|--------------------------------------------------------------------------------------------------------------------------|
| Item                        | Description                                                                                                              |
| Local IP Address            | Set tunnel IP address of L2TP client. Client will obtain tunnel IP address automatically from the server when it's null. |
| Peer IP Address             | Enter tunnel IP address of L2TP server.                                                                                  |
| Enable NAT                  | Enable NAT traversal function.                                                                                           |
| Enable MPPE                 | Enable MPPE encryption.                                                                                                  |
| Address/Control Compression | For PPP initialization. User can keep the default option.                                                                |
| Protocol Field Compression  | For PPP initialization. User can keep the default option.                                                                |
| Asyncmap Value              | One of the PPP protocol initialization strings. User can keep the default value. Range: 0-ffffff.                        |

|                             |                                                                                                               |
|-----------------------------|---------------------------------------------------------------------------------------------------------------|
| MRU                         | Set the maximum receive unit. Range: 64-1500.                                                                 |
| MTU                         | Set the maximum transmission unit. Range: 64-1500                                                             |
| Link Detection Interval (s) | Set the link detection interval time to ensure tunnel connection. Range: 0-600.                               |
| Max Retries                 | Set the maximum times of retry to detect the L2TP connection failure. Range: 0-10.                            |
| Expert Options              | User can enter some other PPP initialization strings in this field and separate the strings with blank space. |

Table 3-2-5-8 L2TP Parameters

### 3.2.5.6 PPTP

Point-to-Point Tunneling Protocol (PPTP) is a protocol that allows corporations to extend their own corporate network through private "tunnels" over the public Internet. Effectively, a corporation uses a wide-area network as a single large local area network.

**PPTP Settings**

—

PPTP\_1

Enable

☐

Remote IP Address

Username

Password

Authentication

Auto

Global Traffic Forwarding

☐

Remote Subnet

Remote Subnet Mask

Advanced Settings

>> Expand

+ PPTP\_2

+ PPTP\_3

Save

Figure 3-2-5-10

| PPTP              |                                                            |
|-------------------|------------------------------------------------------------|
| Item              | Description                                                |
| Enable            | Enable PPTP client. A maximum of 3 tunnels is allowed.     |
| Remote IP Address | Enter the public IP address or domain name of PPTP server. |

|                           |                                                                                     |
|---------------------------|-------------------------------------------------------------------------------------|
| Username                  | Enter the username that PPTP server provides.                                       |
| Password                  | Enter the password that PPTP server provides.                                       |
| Authentication            | Select from "Auto", "PAP", "CHAP", "MS-CHAPv1", and "MS-CHAPv2".                    |
| Global Traffic Forwarding | All of the data traffic will be sent out via PPTP tunnel once enable this function. |
| Remote Subnet             | Set the peer subnet of PPTP.                                                        |
| Remote Subnet Mask        | Set the netmask of peer PPTP server.                                                |

Table 3-2-5-9 PPTP Parameters

Advanced Settings ⌵ Collapse

Local IP Address

Peer IP Address

Enable NAT

☒

Enable MPPE

☐

Address/Control Compression

☐

Protocol Field Compression

☐

Asyncmap Value

ffffff

MRU

1500

MTU

1500

Link Detection Interval(s)

60

Max Retries

0

Expert Options

Figure 3-2-5-11

| PPTP Advanced Settings      |                                                           |
|-----------------------------|-----------------------------------------------------------|
| Item                        | Description                                               |
| Local IP Address            | Set IP address of PPTP client.                            |
| Peer IP Address             | Enter tunnel IP address of PPTP server.                   |
| Enable NAT                  | Enable the NAT faction of PPTP.                           |
| Enable MPPE                 | Enable MPPE encryption.                                   |
| Address/Control Compression | For PPP initialization. User can keep the default option. |



|                             |                                                                                                               |
|-----------------------------|---------------------------------------------------------------------------------------------------------------|
| Protocol Field Compression  | For PPP initialization. User can keep the default option.                                                     |
| Asyncmap Value              | One of the PPP protocol initialization strings. User can keep the default value. Range: 0-ffffff.             |
| MRU                         | Enter the maximum receive unit. Range: 0-1500.                                                                |
| MTU                         | Enter the maximum transmission unit. Range: 0-1500.                                                           |
| Link Detection Interval (s) | Set the link detection interval time to ensure tunnel connection. Range: 0-600.                               |
| Max Retries                 | Set the maximum times of retrying to detect the PPTP connection failure. Range: 0-10.                         |
| Expert Options              | User can enter some other PPP initialization strings in this field and separate the strings with blank space. |

Table 3-2-5-10 PPTP Parameters

### 3.2.5.7 OpenVPN Client

OpenVPN is an open source virtual private network (VPN) product that offers a simplified security framework, modular network design, and cross-platform portability. The default OpenVPN version of UR35 is 2.4.9.

UR35 supports running at most 3 OpenVPN clients at the same time. You can import the ovpn file directly or configure the parameters on this page to set clients.

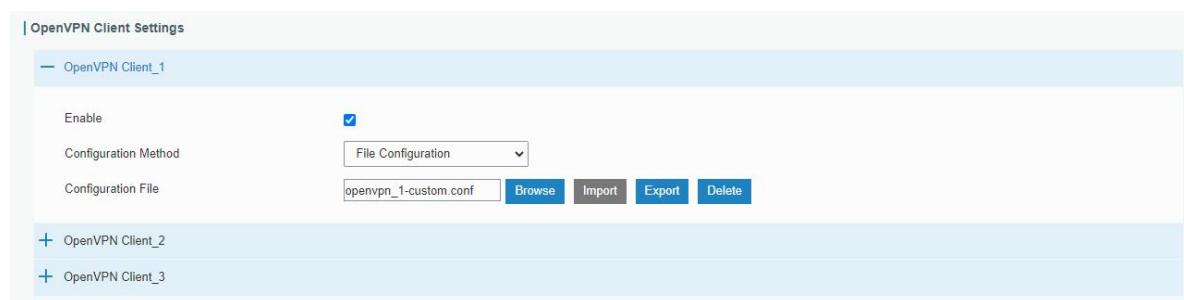


Figure 3-2-5-12

| OpenVPN Client - File Configuration |                                                                                                                                                                                                           |
|-------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item                                | Description                                                                                                                                                                                               |
| Browse                              | Click to browse the client configuration ovpn format file including the settings and certificate contents. Please refer to the client configuration file according to sample: <a href="#">client.conf</a> |
| Edit                                | Click to edit the imported file.                                                                                                                                                                          |
| Export                              | Export the server configuration file.                                                                                                                                                                     |
| Delete                              | Click to delete the configuration file.                                                                                                                                                                   |

Table 3-2-5-11 OpenVPN Client Parameters

|                            |                                     |
|----------------------------|-------------------------------------|
| Enable                     | <input checked="" type="checkbox"/> |
| Configuration Method       | Page Configuration                  |
| Protocol                   | UDP                                 |
| Remote IP Address          |                                     |
| Port                       | 1194                                |
| Interface                  | tun                                 |
| Authentication             | None                                |
| Local Tunnel IP            |                                     |
| Remote Tunnel IP           |                                     |
| Enable NAT                 | <input checked="" type="checkbox"/> |
| Compression                | LZO                                 |
| Link Detection Interval(s) | 60                                  |
| Link Detection Timeout(s)  | 300                                 |
| Cipher                     | None                                |
| Authentication Mode        | None                                |
| MTU                        | 1500                                |
| Max Frame Size             | 1500                                |
| Verbose Level              | ERROR                               |
| Expert Options             |                                     |
| Local Route                |                                     |

| Subnet | Subnet Mask | Operation                                                                           |
|--------|-------------|-------------------------------------------------------------------------------------|
|        |             |  |

Figure 3-2-5-13

| OpenVPN Client - Page Configuration |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item                                | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Protocol                            | Select a transport protocol used by connecting UDP and TCP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Remote IP Address                   | Enter remote OpenVPN server's IP address or domain name.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Port                                | Enter the TCP/UDP service number of remote OpenVPN server. Range: 1-65535.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Interface                           | Select virtual VPN network interface type from TUN and TAP. TUN devices encapsulate IPv4 or IPv6 (OSI Layer 3) while TAP devices encapsulate Ethernet 802.3 (OSI Layer 2).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Authentication Type                 | <p>Select authentication type used to secure data sessions.</p> <p><b>Pre-shared:</b> use the same secret key as server to complete the authentication. After selecting, go to <b>Network &gt; VPN &gt; Certifications</b> page to import a static.key to <b>PSK</b> field.</p> <p><b>Username/Password:</b> use username/password which is preset in server side to complete the authentication.</p> <p><b>X.509 cert:</b> use X.509 type certificate to complete the authentication. After selecting, go to <b>Network &gt; VPN &gt; Certifications</b> page to import CA certificate, client certificate and client private key to corresponding fields.</p> <p><b>X.509 cert + user:</b> use both username/password and X.509 cert authentication type.</p> |
| Local Virtual IP                    | Set local tunnel address when authentication type is <b>None</b> or <b>Pre-shared</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Remote Virtual IP                   | Set remote tunnel address when authentication type is <b>None</b> or <b>Pre-shared</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

|                             |                                                                                                                                                                                               |
|-----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Global Traffic Forwarding   | All the data traffic will be sent out via OpenVPN tunnel when this function is enabled.                                                                                                       |
| Enable TLS Authentication   | Select from None, TLS Auth and TLS Crypt. When selecting TLS Auth or TLS Crypt, go to <b>Network &gt; VPN &gt; Certifications</b> page to import a ta.key.                                    |
| Compression                 | Select to enable or disable LZO to compress data.                                                                                                                                             |
| Link Detection Interval (s) | Set link detection interval time to ensure tunnel connection. If this is set on both server and client, the value pushed from server will override the client local values. Range: 10-1800 s. |
| Link Detection Timeout (s)  | OpenVPN will be reestablished after timeout. If this is set on both server and client, the value pushed from server will override the client local values. Range: 60-3600 s.                  |
| Cipher                      | Select from NONE, BF-CBC, DES-CBC, DES-EDE3-CBC, AES-128-CBC, AES-192-CBC and AES-256-CBC.                                                                                                    |
| Authentication Mode         | Select from NONE, MD5, SHA1, SHA256, and SHA512.                                                                                                                                              |
| MTU                         | Enter the maximum transmission unit. Range: 128-1500.                                                                                                                                         |
| Max Frame Size              | Set the maximum frame size. Range: 128-1500.                                                                                                                                                  |
| Verbose Level               | Select from ERROR, WARING, NOTICE and DEBUG.                                                                                                                                                  |
| Expert Options              | User can enter some initialization strings in this field and separate the strings with semicolon.<br><b>Example:</b> ncp-ciphers AES-128-GCM; key direction 1                                 |
| <b>Local Route</b>          |                                                                                                                                                                                               |
| Subnet                      | Set the local route's IP address.                                                                                                                                                             |
| Subnet Mask                 | Set the local route's netmask.                                                                                                                                                                |

Table 3-2-5-12 OpenVPN Client Parameters

## Related Topic

[OpenVPN Client Application Example](#)

### 3.2.5.8 OpenVPN Server

The UR35 supports OpenVPN server to create secure point-to-point or site-to-site connections in routed or bridged configurations and remote access facilities. You can import the ovpn file directly or configure the parameters on this page to set this server. UR35 supports at most 20 openVPN clients connections.

**OpenVPN Server Settings**

Enable ☒

Configuration Method File Configuration

Configuration File  Browse Import Export Delete

Figure 3-2-5-14

| OpenVPN Server - File Configuration |                                                                                                                                                                                                           |
|-------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item                                | Description                                                                                                                                                                                               |
| Browse                              | Click to browse the server configuration ovpn format file including the settings and certificate contents. Please refer to the server configuration file according to sample: <a href="#">server.conf</a> |
| Edit                                | Click to edit the imported file.                                                                                                                                                                          |
| Export                              | Export the server configuration file.                                                                                                                                                                     |
| Delete                              | Click to delete the configuration file.                                                                                                                                                                   |

Table 3-2-5-13 OpenVPN Server Parameters

|                         |                                     |
|-------------------------|-------------------------------------|
| Enable                  | <input checked="" type="checkbox"/> |
| Configuration Method    | Page Configuration ▼                |
| Protocol                | UDP ▼                               |
| Port                    | 1194                                |
| Listening IP            |                                     |
| Interface               | tun ▼                               |
| Authentication          | None ▼                              |
| Local Virtual IP        |                                     |
| Remote Virtual IP       |                                     |
| Enable NAT              | <input checked="" type="checkbox"/> |
| Compression             | LZO ▼                               |
| Link Detection Interval | 60                                  |
| Link Detection Timeout  | 150                                 |
| Cipher                  | None ▼                              |
| Authentication Mode     | None ▼                              |
| MTU                     | 1500                                |
| Max Frame Size          | 1500                                |
| Verbose Level           | ERROR ▼                             |
| Expert Options          |                                     |

Figure 3-2-5-15

Account

| Username | Password | Operation |
|----------|----------|-----------|
|          |          |           |

Local Route

| Subnet | Netmask | Operation |
|--------|---------|-----------|
|        |         |           |

Client Subnet

| Name | Subnet | Netmask | Operation |
|------|--------|---------|-----------|
|      |        |         |           |

Figure 3-2-5-16

| OpenVPN Server - Page Configuration |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item                                | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Protocol                            | Select a transport protocol used by connection from UDP and TCP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Listening IP                        | Enter the local hostname or IP address for bind. If left blank, OpenVPN server will bind to all interfaces.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Port                                | Enter the TCP/UCP service number for OpenVPN client connection. Range: 1-65535.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Interface                           | Select virtual VPN network interface type from TUN and TAP. TUN devices encapsulate IPv4 or IPv6 (OSI Layer 3) while TAP devices encapsulate Ethernet 802.3 (OSI Layer 2).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Authentication Type                 | <p>Select authentication type used to secure data sessions.</p> <p><b>Pre-shared:</b> use the same secret key as server to complete the authentication. After select, go to <b>Network &gt; VPN &gt; Certifications</b> page to import a static.key to <b>PSK</b> field.</p> <p><b>Username/Password:</b> use username/password which is preset in server side to complete the authentication.</p> <p><b>X.509 cert:</b> use X.509 type certificate to complete the authentication. After select, go to <b>Network &gt; VPN &gt; Certifications</b> page to import CA certificate, client certificate and client private key to corresponding fields.</p> <p><b>X.509 cert + user:</b> use both username/password and X.509 cert authentication type.</p> |
| Local Virtual IP                    | Set local tunnel address when authentication type is <b>None</b> or <b>Pre-shared</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Remote Virtual IP                   | Set remote tunnel address when authentication type is <b>None</b> or <b>Pre-shared</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Client Subnet                       | Define an IP address pool for openVPN client.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Client Netmask                      | Set the client subnet netmask to limit the IP address range.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Renegotiation Interval              | Renegotiate data channel key after this interval. 0 means disable.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Max Clients                         | <p>Limit server to a maximum of concurrent clients, range: 1-20.</p> <p><b>Note:</b> please adjust log severity to Info if you need to connect many clients.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Enable CRL                          | Enable or disable CRL verify.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Enable Client to Client             | When enabled, openVPN clients can communicate with each other.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Enable Dup Client                   | Allow multiple clients to connect with the same common name or                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

|                             |                                                                                                                                                                                               |
|-----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                             | certification.                                                                                                                                                                                |
| Enable TLS Authentication   | Select from None, TLS Auth and TLS Crypt. When selecting TLS Auth or TLS Crypt, go to <b>Network &gt; VPN &gt; Certifications</b> page to import a ta.key.                                    |
| Compression                 | Select to enable or disable LZ0 to compress data.                                                                                                                                             |
| Link Detection Interval (s) | Set link detection interval time to ensure tunnel connection. If this is set on both server and client, the value pushed from server will override the client local values. Range: 10-1800 s. |
| Link Detection Timeout (s)  | OpenVPN will be reestablished after timeout. If this is set on both server and client, the value pushed from server will override the client local values. Range: 60-3600 s.                  |
| Cipher                      | Select from NONE, BF-CBC, DES-CBC, DES-EDE3-CBC, AES-128-CBC, AES-192-CBC and AES-256-CBC.                                                                                                    |
| Authentication Mode         | Select from NONE, MD5, SHA1, SHA256, and SHA512.                                                                                                                                              |
| MTU                         | Enter the maximum transmission unit. Range: 64-1500.                                                                                                                                          |
| Max Frame Size              | Set the maximum frame size. Range: 64-1500.                                                                                                                                                   |
| Verbose Level               | Select from ERROR, WARNING, NOTICE and DEBUG.                                                                                                                                                 |
| Expert Options              | User can enter some initialization strings in this field and separate the strings with semicolon.<br><b>Example:</b> ncp-ciphers AES-128-GCM; key direction 1                                 |
| <b>Account</b>              |                                                                                                                                                                                               |
| Username & Password         | Set username and password for OpenVPN client when authentication type is username/password.                                                                                                   |
| <b>Local Route</b>          |                                                                                                                                                                                               |
| Subnet                      | Set the local route's IP address.                                                                                                                                                             |
| Subnet Mask                 | Set the local route's netmask.                                                                                                                                                                |
| <b>Client Subnet</b>        |                                                                                                                                                                                               |
| Name                        | Set the name as OpenVPN client certificate common name.                                                                                                                                       |
| Subnet                      | Set the subnet of OpenVPN client.                                                                                                                                                             |
| Subnet Mask                 | Set the subnet netmask of OpenVPN client.                                                                                                                                                     |

Table 3-2-5-14 OpenVPN Server Parameters

### 3.2.5.9 WireGuard

WireGuard is an extremely simple yet fast and modern VPN that utilizes state-of-the-art cryptography. WireGuard passes traffic over UDP protocol.

WireGuard\_1

Enable

☒

Interface

wg0

Customized Private Key

☒

Private Key

Public Key

F8xRHUqMQ0fgJTw4V4M7gvr

IP Address

Listening Port

DNS

MTU

| Peer         | Public Key | Allowed IP | Endpoint Address | Operation |
|--------------|------------|------------|------------------|-----------|
| <div>+</div> |            |            |                  |           |

Figure 3-2-5-21

| WireGuard              |                                                                                                                                                                   |
|------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item                   | Description                                                                                                                                                       |
| Enable                 | Enable WireGuard interface. A maximum of 3 WireGaurd interfaces is allowed.                                                                                       |
| Interface              | Show the WireGuard interface name.                                                                                                                                |
| Customized Private Key | Enable or disable to customize the private key of this WireGuard interface. If disabled, the client will use the private key generated by this router.            |
| Public Key             | Show the public key generated by the private key.                                                                                                                 |
| IP Address             | Set the local virtual IP address and netmask. Example: 10.8.0.2/24                                                                                                |
| Listening Port         | Set the port to send or receive WireGuard packets. The port numbers of different WireGuard interfaces should be different.                                        |
| DNS                    | Set the DNS server address of this WireGuard interface. If left blank, the router will use DNS server address of common network interfaces (WAN, cellular, etc.). |
| MTU                    | Set the maximum transmission unit of this WireGuard interface. If left blank, the router will use MTU of common network interfaces (WAN, cellular, etc.).         |
| Peer Table             | Click “+” to add WireGuard peers of this WireGuard interface. One WireGuard interface can add 20 peers at most.                                                   |

Table 3-2-5-15 WireGuard Parameters

**Edit**

|                    |                                                                                                                                                                                              |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Peer               | <input type="text"/>                                                                                                                                                                         |
| Public Key         | <input type="text"/>                                                                                                                                                                         |
| Allowed IP         | <input type="text"/>   |
| Route Allowed IP   | <input checked="" type="checkbox"/>                                                                                                                                                          |
| Preshared Key      | <input type="text"/>                                                                                      |
| Endpoint Address   | <input type="text"/>                                                                                                                                                                         |
| Endpoint Port      | <input type="text"/>                                                                                                                                                                         |
| Keepalive Interval | <input type="text" value="25"/>                                                                                                                                                              |

**Save**

Figure 3-2-5-22

| WireGuard-Peer     |                                                                                                                                                            |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item               | Description                                                                                                                                                |
| Peer               | Set a WireGuard peer name. This name should be unique in this WireGuard client.                                                                            |
| Public Key         | Set the public key of WireGuard peer server/client.                                                                                                        |
| Allowed IP         | Set the real IP address and netmask of WireGuard peer's LAN network. Example: 192.168.1.0/24<br>One WireGuard peer supports to add 8 allowed IP addresses. |
| Route Allowed IP   | Enable or disable to add static routings of allowed IP addresses.                                                                                          |
| Preshared Key      | Set the presahred key and both this interface and peer interface should set the same key value.                                                            |
| Endpoint Address   | Set IP address or domain name of WireGuard peer server/client.                                                                                             |
| Endpoint Port      | Set the destination port of WireGuard peer server/client.                                                                                                  |
| Keepalive Interval | After the connection is established, this WireGuard interface will send heartbeat packet regularly to keep alive. 0 means disabled.                        |

Table 3-2-5-16 WireGuard-Peer Parameters

### 3.2.5.10 Certifications

User can import/export certificate and key files for OpenVPN and IPsec on this page.



**OpenVPN Client**

— OpenVPN Client\_1

|                    |                      |                        |                        |                        |                        |
|--------------------|----------------------|------------------------|------------------------|------------------------|------------------------|
| CA                 | <input type="text"/> | <a href="#">Browse</a> | <a href="#">Import</a> | <a href="#">Export</a> | <a href="#">Delete</a> |
| Public Certificate | <input type="text"/> | <a href="#">Browse</a> | <a href="#">Import</a> | <a href="#">Export</a> | <a href="#">Delete</a> |
| Private Key        | <input type="text"/> | <a href="#">Browse</a> | <a href="#">Import</a> | <a href="#">Export</a> | <a href="#">Delete</a> |
| TA                 | <input type="text"/> | <a href="#">Browse</a> | <a href="#">Import</a> | <a href="#">Export</a> | <a href="#">Delete</a> |
| TLS Crypt          | <input type="text"/> | <a href="#">Browse</a> | <a href="#">Import</a> | <a href="#">Export</a> | <a href="#">Delete</a> |
| Preshared Key      | <input type="text"/> | <a href="#">Browse</a> | <a href="#">Import</a> | <a href="#">Export</a> | <a href="#">Delete</a> |
| PKCS12             | <input type="text"/> | <a href="#">Browse</a> | <a href="#">Import</a> | <a href="#">Export</a> | <a href="#">Delete</a> |

+ OpenVPN Client\_2

+ OpenVPN Client\_3

Figure 3-2-5-17

— OpenVPN Server

|                    |                      |                        |                        |                        |                        |
|--------------------|----------------------|------------------------|------------------------|------------------------|------------------------|
| CA                 | <input type="text"/> | <a href="#">Browse</a> | <a href="#">Import</a> | <a href="#">Export</a> | <a href="#">Delete</a> |
| Public Certificate | <input type="text"/> | <a href="#">Browse</a> | <a href="#">Import</a> | <a href="#">Export</a> | <a href="#">Delete</a> |
| Private Key        | <input type="text"/> | <a href="#">Browse</a> | <a href="#">Import</a> | <a href="#">Export</a> | <a href="#">Delete</a> |
| DH                 | <input type="text"/> | <a href="#">Browse</a> | <a href="#">Import</a> | <a href="#">Export</a> | <a href="#">Delete</a> |
| TA                 | <input type="text"/> | <a href="#">Browse</a> | <a href="#">Import</a> | <a href="#">Export</a> | <a href="#">Delete</a> |
| TLS Crypt          | <input type="text"/> | <a href="#">Browse</a> | <a href="#">Import</a> | <a href="#">Export</a> | <a href="#">Delete</a> |
| CRL                | <input type="text"/> | <a href="#">Browse</a> | <a href="#">Import</a> | <a href="#">Export</a> | <a href="#">Delete</a> |
| Preshared Key      | <input type="text"/> | <a href="#">Browse</a> | <a href="#">Import</a> | <a href="#">Export</a> | <a href="#">Delete</a> |

Figure 3-2-5-18

**IPsec**

— IPsec\_1

|                    |                      |        |        |        |        |
|--------------------|----------------------|--------|--------|--------|--------|
| CA                 | <input type="text"/> | Browse | Import | Export | Delete |
| Local Certificate  | <input type="text"/> | Browse | Import | Export | Delete |
| Remote Certificate | <input type="text"/> | Browse | Import | Export | Delete |
| Private Key        | <input type="text"/> | Browse | Import | Export | Delete |
| CRL                | <input type="text"/> | Browse | Import | Export | Delete |

+ IPsec\_2

+ IPsec\_3

Figure 3-2-5-19

**IPsec Server**

— IPsec Server

|                   |                      |        |        |        |        |
|-------------------|----------------------|--------|--------|--------|--------|
| CA                | <input type="text"/> | Browse | Import | Export | Delete |
| Local Certificate | <input type="text"/> | Browse | Import | Export | Delete |
| Private Key       | <input type="text"/> | Browse | Import | Export | Delete |
| CRL               | <input type="text"/> | Browse | Import | Export | Delete |

Figure 3-2-5-20

### 3.2.5.11 ZeroTier

ZeroTier is a way to connect devices over your own private network anywhere in the world. You do this by creating a network and then joining two or more devices to that network.

**ZeroTier Client**

NodeID  [Refresh](#)

**ZeroTier Connection**

| Name | NetworkID | Status | Interface Name | Enable | Operation |
|------|-----------|--------|----------------|--------|-----------|
| +    |           |        |                |        |           |

Figure 3-2-5-23

| ZeroTier               |                                              |
|------------------------|----------------------------------------------|
| Item                   | Description                                  |
| <b>ZeroTier Client</b> |                                              |
| NodeID                 | The router's own automatically generated ID. |
| Refresh                | Click to regenerate a new Node ID.           |

| ZeroTier Connection |                                                                                                    |
|---------------------|----------------------------------------------------------------------------------------------------|
| Name                | Customize the name of the connection.                                                              |
| NetworkID           | The ZeroTier virtual Ethernet network that the router will join.                                   |
| Status              | Display the status of the connection between the router and the ZeroTier virtual Ethernet network. |
| Interface Name      | Display the name of the virtualized network interface to which the router is added.                |
| Enable              | Check to enable this function.                                                                     |

Table 3-2-5-17

**Add ZeroTier Connection**

Name

Enable ☐

NetworkID

Interface Name

Allow Managed Addresses ☒

Allow Assignment of Global IPs ☐

Allow Default Route Override ☐

**Save** **Cancel**

Figure 3-2-5-24

| Add ZeroTier Connection        |                                                                                                                                                  |
|--------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| Item                           | Description                                                                                                                                      |
| Name                           | Customize the name of the connection.                                                                                                            |
| Enable                         | Check to enable this function                                                                                                                    |
| NetworkID                      | The ZeroTier virtual Ethernet network that the device will join.                                                                                 |
| Interface Name                 | Displays the name of the virtualized network interface to which the router is added.                                                             |
| Allow Managed Addresses        | Allow or disable the ZeroTier controller to dynamically assign IP addresses and configure routing information when the router joins the network. |
| Allow Assignment of Global IPs | Allow or disallow ZeroTier network controllers to assign worldwide IPv6 addresses.                                                               |
| Allow Default Route Override   | Allow or disallow the router to override the default route settings when connecting to the ZeroTier network.                                     |

Table 3-2-5-18

### 3.2.6 IP Passthrough

IP Passthrough mode shares or "passes" the Internet providers assigned IP address to a single LAN client device connected to the router.

IP Passthrough

IP Passthrough

Enable

☒

Network interface

SIM1-APN1

Passthrough Mode

DHCPs-Fixed

MAC

Figure 3-2-6-1

| IP Passthrough    |                                                                                                    |
|-------------------|----------------------------------------------------------------------------------------------------|
| Item              | Description                                                                                        |
| Enable            | Enable or disable IP Passthrough.                                                                  |
| Network Interface | Select network interface from SIM1-APN1, SIM1-APN2, SIM1-APN3, SIM2-APN1, SIM2-APN2 and SIM2-APN3. |
| Passthrough Mode  | Select passthrough mode from DHCPs-Fixed and DHCPs-Dynamic.                                        |
| MAC               | Set MAC address when mode is DHCPs-Fixed.                                                          |

Table 3-2-6-1 IP Passthrough Parameters

### 3.2.7 Routing

#### 3.2.7.1 Static Routing

A static routing is a manually configured routing entry. Information about the routing is manually entered rather than obtained from dynamic routing traffic. After setting static routing, the package for the specified destination will be forwarded to the path designated by user.

Static Routing

| Destination          | Netmask/Prefix Length | Interface | Gateway                    | Distance | Operation |
|----------------------|-----------------------|-----------|----------------------------|----------|-----------|
| 2400:3200::1         | 128                   | Cellular  | 2408:844b:1a30:115a:b94b:: | 1        |           |
| 2001:4860:4860::8888 | 128                   | Cellular  | 2408:844b:1a30:115a:b94b:: | 1        |           |
| ::                   | 0                     | Cellular  | 2408:844b:1a30:115a:b94b:: | 1        |           |
| ::                   | 0                     |           | 2408:844b:1a30:126:a02f:6e | 1        |           |
| 0.0.0.0              | 0.0.0.0               | WAN       | 192.168.22.1               | 1        |           |
|                      |                       |           |                            |          |           |

Figure 3-2-7-1

| Static Routing |                                   |
|----------------|-----------------------------------|
| Item           | Description                       |
| Destination    | Enter the destination IP address. |

|                       |                                                                                                             |
|-----------------------|-------------------------------------------------------------------------------------------------------------|
| Netmask/Prefix Length | Enter the subnet mask or prefix length of destination address.                                              |
| Interface             | The interface through which the data can reach the destination address.                                     |
| Gateway               | IP address of the next router that will be passed by before the input data reaches the destination address. |
| Distance              | Priority, smaller value refers to higher priority. Range: 1-255.                                            |

Table 3-2-7-1 Static Routing Parameters

### 3.2.7.2 Priority Based Routing

Policy-based routing (PBR) is a technique used in computer networks to direct network packets based on defined criteria beyond the standard destination-based routing. Unlike traditional routing, which forwards packets solely based on their destination address, PBR allows to customize routing decisions according to various factors. **Policy-based routing takes precedence over static routing.**

With policy-based routing you can implement specific rules or policies to dictate the path that packets should take through the network. This flexibility enables organizations to optimize traffic flow, prioritize certain types of traffic, enforce security measures, and manage network resources more efficiently.

| Static Routing | Policy Based Routing | RIP                | OSPF               | Routing Filtering |
|----------------|----------------------|--------------------|--------------------|-------------------|
| Priority       | Source Subnet        | Outgoing Interface | Destination Subnet | Operation         |
| 1              | 192.168.33.1/24      | LAN1/WAN           | 192.168.34.2/24    |                   |
| 3              | 192.168.33.1/24      | LAN1/WAN           | 192.168.35.2/24    |                   |
| 4              | 192.168.35.2/24      | SIM1-APN1          | 192.168.45.2/24    |                   |
|                |                      |                    |                    |                   |

Figure 3-2-7-2

| Priority-Based Routing |                                                                                                                                                                        |
|------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item                   | Description                                                                                                                                                            |
| Priority               | Set the priority of this policy. The smaller the number, the higher the priority. Valid range: 1–255.                                                                  |
| Source Subnet          | Traffic that matches the specified source subnet will be applied to this policy. Leave blank if no source subnet matching is required.                                 |
| Outgoing Interface     | Traffic that matches both the source and destination subnets will be forwarded through the selected interface. Policy routing has higher priority than static routing. |
| Destination Subnet     | Traffic that matches the specified destination subnet will be applied to this policy.                                                                                  |
| Operation              | You can add or delete the policy routing configuration.                                                                                                                |

Table 3-2-7-2 Priority-Based Routing Parameters

### Related Topics

[Cellular](#)

### 3.2.7.3 RIP

RIP is mainly designed for small networks. RIP uses Hop Count to measure the distance to the destination address, which is called Metric. In RIP, the hop count from the router to its directly connected network is 0 and the hop count of network to be reached through a router is 1 and so on. In order to limit the convergence time, the specified metric of RIP is an integer in the range of 0 - 15 and the hop count larger than or equal to 16 is defined as infinity, which means that the destination network or host is unreachable. Because of this limitation, the RIP is not suitable for large-scale networks. To improve performance and prevent routing loops, RIP supports split horizon function. RIP also introduces routing obtained by other routing protocols.

Each router that runs RIP manages a routing database, which contains routing entries to reach all reachable destinations.

| Static Routing                | Policy Based Routing | RIP                                 | OSPF | Routing Filtering |
|-------------------------------|----------------------|-------------------------------------|------|-------------------|
| <b>RIP Settings</b>           |                      |                                     |      |                   |
| Enable                        |                      | <input checked="" type="checkbox"/> |      |                   |
| Update Timer                  |                      | 30                                  | s    |                   |
| Timeout Timer                 |                      | 180                                 | s    |                   |
| Garbage Collection Timer      |                      | 120                                 | s    |                   |
| Version                       |                      | v2                                  | ▼    |                   |
| Show Advanced Options         |                      | ▼ Collapse                          |      |                   |
| Default Information Originate |                      | <input type="checkbox"/>            |      |                   |
| Default Metric                |                      | 1                                   |      |                   |
| Redistribute Connected        |                      | <input type="checkbox"/>            |      |                   |
| Redistribute Static           |                      | <input type="checkbox"/>            |      |                   |
| Redistribute OSPF             |                      | <input type="checkbox"/>            |      |                   |

Figure 3-2-7-3

| RIP           |                                                                                                                                           |
|---------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| Item          | Description                                                                                                                               |
| Enable        | Enable or disable RIP.                                                                                                                    |
| Update Timer  | It defines the interval to send routing updates. Range: 5-2147483647, in seconds.                                                         |
| Timeout Timer | It defines the routing aging time. If no update package on a routing is received within the aging time, the routing's Routing Cost in the |

|                               |                                                                                                                                                                                                                                                                                                                                                                                          |
|-------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                               | routing table will be set to 16. Range: 5-2147483647, in seconds.                                                                                                                                                                                                                                                                                                                        |
| Garbage Collection Timer      | It defines the period from the routing cost of a routing becomes 16 to it is deleted from the routing table. In the time of Garbage-Collection, RIP uses 16 as the routing cost for sending routing updates. If Garbage Collection times out and the routing still has not been updated, the routing will be completely removed from the routing table. Range: 5-2147483647, in seconds. |
| Version                       | RIP version. The options are v1 and v2.                                                                                                                                                                                                                                                                                                                                                  |
| <b>Advanced Settings</b>      |                                                                                                                                                                                                                                                                                                                                                                                          |
| Default Information Originate | Default information will be released when this function is enabled.                                                                                                                                                                                                                                                                                                                      |
| Default Metric                | The default cost for the router to reach destination. Range: 0-16                                                                                                                                                                                                                                                                                                                        |
| Redistribute Connected        | Check to enable.                                                                                                                                                                                                                                                                                                                                                                         |
| Metric                        | Set metric after "Redistribute Connected" is enabled. Range: 0-16.                                                                                                                                                                                                                                                                                                                       |
| Redistribute Static           | Check to enable.                                                                                                                                                                                                                                                                                                                                                                         |
| Metric                        | Set metric after "Redistribute Static" is enabled. Range: 0-16.                                                                                                                                                                                                                                                                                                                          |
| Redistribute OSPF             | Check to enable.                                                                                                                                                                                                                                                                                                                                                                         |
| Metric                        | Set metric after "Redistribute OSPF" is enabled. Range: 0-16.                                                                                                                                                                                                                                                                                                                            |

Table 3-2-7-3 RIP Parameters

Distance/Metric Management

| Distance | IP Address | Netmask | ACL Name | Operation |
|----------|------------|---------|----------|-----------|
|          |            |         |          | +         |

| Metric | Policy In/Out | Interface | ACL Name | Operation |
|--------|---------------|-----------|----------|-----------|
|        |               |           |          | +         |

Filter Policy

| Policy Type | Policy Name | Policy In/Out | Interface | Operation |
|-------------|-------------|---------------|-----------|-----------|
|             |             |               |           | +         |

Passive Interface

| Passive Interface | Operation |
|-------------------|-----------|
|                   | +         |

Interface

| Interface | Send Version | Receive Version | Split-Horizon | Authentication Mode | Authentication String | Authentication Key-chain | Operation |
|-----------|--------------|-----------------|---------------|---------------------|-----------------------|--------------------------|-----------|
|           |              |                 |               |                     |                       |                          | +         |

Neighbor

| IP Address | Operation |
|------------|-----------|
|            | +         |

Network

| IP Address | Netmask | Operation |
|------------|---------|-----------|
|            |         | +         |

Figure 3-2-7-4

| Item                              | Description                                                                 |
|-----------------------------------|-----------------------------------------------------------------------------|
| <b>Distance/Metric Management</b> |                                                                             |
| Distance                          | Set the administrative distance that a RIP route learns. Range: 1-255.      |
| IP Address                        | Set the IP address of RIP route.                                            |
| Netmask                           | Set the netmask of RIP route.                                               |
| ACL Name                          | Set ACL name of RIP route.                                                  |
| Metric                            | The metric of received route or sent route from the interface. Range: 0-16. |
| Policy in/out                     | Select from "in" and "out".                                                 |



|                          |                                                                |
|--------------------------|----------------------------------------------------------------|
| Interface                | Select interface of the route.                                 |
| ACL Name                 | Access control list name of the route strategy.                |
| <b>Filter Policy</b>     |                                                                |
| Policy Type              | Select from "access-list" and "prefix-list".                   |
| Policy Name              | User-defined prefix-list name.                                 |
| Policy in/out            | Select from "in" and "out".                                    |
| Interface                | Select interface from "cellular0", "WAN" and "Bridge0".        |
| <b>Passive Interface</b> |                                                                |
| Passive Interface        | Select interface from "cellular0" and "WAN", "Bridge0".        |
| <b>Interface</b>         |                                                                |
| Interface                | Select interface from "cellular0", "WAN" and "Bridge0".        |
| Send Version             | Select from "default", "v1" and "v2".                          |
| Receive Version          | Select from "default", "v1" and "v2".                          |
| Split-Horizon            | Select from "enable" and "disable".                            |
| Authentication Mode      | Select from "text" and "md5".                                  |
| Authentication String    | The authentication key for package interaction in RIPV2.       |
| Authentication Key-chain | The authentication key-chain for package interaction in RIPV2. |
| <b>Neighbor</b>          |                                                                |
| IP Address               | Set RIP neighbor's IP address manually.                        |
| <b>Network</b>           |                                                                |
| IP Address               | The IP address of interface for RIP publishing.                |
| Netmask                  | The netmask of interface for RIP publishing.                   |

Table 3-2-7-4

### 3.2.7.4 OSPF

OSPF, short for Open Shortest Path First, is a link status based on interior gateway protocol developed by IETF.

If a router wants to run the OSPF protocol, there should be a Router ID that can be manually configured. If no Router ID configured, the system will automatically select an IP address of interface as the Router ID. The selection order is as follows:

- If a Loopback interface address is configured, then the last configured IP address of Loopback interface will be used as the Router ID;
- If no Loopback interface address is configured, the system will choose the interface with the biggest IP address as the Router ID.


#### Five types of packets of OSPF:

- **Hello packet**

- **DD packet** (Database Description Packet)
- **LSR packet** (Link-State Request Packet)
- **LSU packet** (Link-State Update Packet)
- **LSAck packet** (Link-State Acknowledgment Packet)

### Neighbor and Neighboring

After OSPF router starts up, it will send out Hello Packets through the OSPF interface. Upon receipt of Hello packet, OSPF router will check the parameters defined in the packet. If it's consistent, a neighbor relationship will be formed. Not all matched sides in neighbor relationship can form the adjacency relationship. It is determined by the network type. Only when both sides successfully exchange DD packets and LSDB synchronization is achieved, the adjacency in the true sense can be formed. LSA describes the network topology around a router, LSDB describes entire network topology.

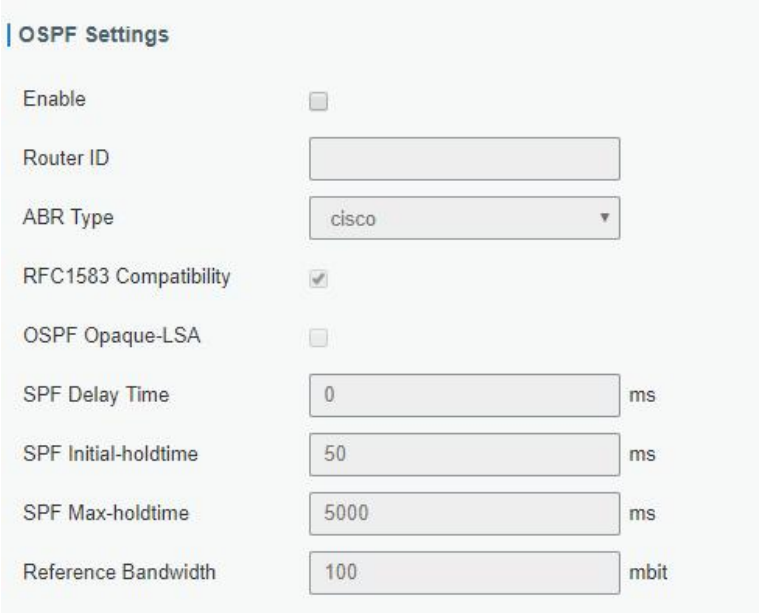

| OSPF Settings         |                                       |
|-----------------------|---------------------------------------|
| Enable                | <input type="checkbox"/>              |
| Router ID             | <input type="text"/>                  |
| ABR Type              | cisco ▼                               |
| RFC1583 Compatibility | <input checked="" type="checkbox"/>   |
| OSPF Opaque-LSA       | <input type="checkbox"/>              |
| SPF Delay Time        | <input type="text" value="0"/> ms     |
| SPF Initial-holdtime  | <input type="text" value="50"/> ms    |
| SPF Max-holdtime      | <input type="text" value="5000"/> ms  |
| Reference Bandwidth   | <input type="text" value="100"/> mbit |

Figure 3-2-7-5

| OSPF                  |                                                                                                                 |
|-----------------------|-----------------------------------------------------------------------------------------------------------------|
| Item                  | Description                                                                                                     |
| Enable                | Enable or disable OSPF.                                                                                         |
| Router ID             | Router ID (IP address) of the originating LSA.                                                                  |
| ABR Type              | Select from cisco, ibm, standard and shortcut.                                                                  |
| RFC1583 Compatibility | Enable/Disable.                                                                                                 |
| OSPF Opaque-LSA       | Enable/Disable<br>LSA: a basic communication means of the OSPF routing protocol for the Internet Protocol (IP). |
| SPF Delay Time        | Set the delay time for OSPF SPF calculations.<br>Range: 0-6000000, in milliseconds.                             |

|                      |                                                                                |
|----------------------|--------------------------------------------------------------------------------|
| SPF Initial-holdtime | Set the initialization time of OSPF SPF.<br>Range: 0-6000000, in milliseconds. |
| SPF Max-holdtime     | Set the maximum time of OSPF SPF.<br>Range: 0-6000000, in milliseconds.        |
| Reference Bandwidth  | Range: 1-4294967, in Mbit.                                                     |

Table 3-2-7-5 OSPF Parameters

| Interface                            |         |                   |                  |                        |                   |     |           |
|--------------------------------------|---------|-------------------|------------------|------------------------|-------------------|-----|-----------|
| Interface                            |         | Hello Interval(s) | Dead Interval(s) | Retransmit Interval(s) | Transmit Delay(s) |     | Operation |
|                                      |         |                   |                  |                        |                   |     |           |
| Interface Advanced Options  Collapse |         |                   |                  |                        |                   |     |           |
| Interface                            | Network | Cost              | Priority         | Authentication         | Key ID            | Key | Operation |
|                                      |         |                   |                  |                        |                   |     |           |

Figure 3-2-7-6

| Item                              | Description                                                                                                                                                                                                                                |
|-----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Interface</b>                  |                                                                                                                                                                                                                                            |
| Interface                         | Select interface from "cellular0","WAN"and "Bridge0".                                                                                                                                                                                      |
| Hello Interval (s)                | Send interval of Hello packet. If the Hello time between two adjacent routers is different, the neighbour relationship cannot be established.<br>Range: 1-65535.                                                                           |
| Dead Interval (s)                 | Dead Time. If no Hello packet is received from the neighbours within the dead time, then the neighbour is considered failed. If dead times of two adjacent routers are different, the neighbour relationship cannot be established.        |
| Retransmit Interval (s)           | When the router notifies an LSA to its neighbour, it is required to make acknowledgement. If no acknowledgement packet is received within the retransmission interval, this LSA will be retransmitted to the neighbour.<br>Range: 3-65535. |
| Transmit Delay (s)                | It will take time to transmit OSPF packets on the link. So a certain delay time should be increased before transmission the aging time of LSA. This configuration needs to be further considered on the low-speed link.<br>Range: 1-65535. |
| <b>Interface Advanced Options</b> |                                                                                                                                                                                                                                            |
| Interface                         | Select interface.                                                                                                                                                                                                                          |
| Network                           | Select OSPF network type.                                                                                                                                                                                                                  |
| Cost                              | Set the cost of running OSPF on an interface. Range: 1-65535.                                                                                                                                                                              |
| Priority                          | Set the OSPF priority of interface. Range: 0-255.                                                                                                                                                                                          |
| Authentication                    | Set the authentication mode that will be used by the OSPF area.<br>Simple: a simple authentication password should be configured and confirmed again.<br>MD5: MD5 key & password should be configured and confirmed again.                 |
| Key ID                            | It only takes effect when MD5 is selected. Range 1-255.                                                                                                                                                                                    |

|     |                                                     |
|-----|-----------------------------------------------------|
| Key | The authentication key for OSPF packet interaction. |
|-----|-----------------------------------------------------|

Table 3-2-7-6 OSPF Parameters

Passive Interface

| Passive Interface |  |  | Operation |
|-------------------|--|--|-----------|
|                   |  |  | +         |

Network

| IP Address | Netmask | Area ID | Operation |
|------------|---------|---------|-----------|
|            |         |         | +         |

Neighbor

| IP Address | Priority | Poll | Operation |
|------------|----------|------|-----------|
|            |          |      | +         |

Area

| Area ID | Area | No Summary | Authentication | Operation |
|---------|------|------------|----------------|-----------|
|         |      |            |                | +         |

Figure 3-2-7-7

| Item                     | Description                                                                                              |
|--------------------------|----------------------------------------------------------------------------------------------------------|
| <b>Passive Interface</b> |                                                                                                          |
| Passive Interface        | Select interface from "cellular0", "WAN" and "Bridge0".                                                  |
| <b>Network</b>           |                                                                                                          |
| IP Address               | The IP address of local network.                                                                         |
| Netmask                  | The netmask of local network.                                                                            |
| Area ID                  | The area ID of original LSA's router.                                                                    |
| <b>Area</b>              |                                                                                                          |
| Area ID                  | Set the ID of the OSPF area (IP address).                                                                |
| Area                     | Select from "Stub" and "NSSA".<br>The backbone area (area ID 0.0.0.0) cannot be set as "Stub" or "NSSA". |
| No Summary               | Forbid route summarization.                                                                              |
| Authentication           | Select authentication from "simple" and "md5".                                                           |

Table 3-2--7-7 OSPF Parameters

Area Advanced Options
⌵ Collapse

Area Range

| Area ID | IP | Netmask | No Advertise | Cost | Operation      |
|---------|----|---------|--------------|------|----------------|
|         |    |         |              |      | <span>+</span> |

Area Filter

| Area ID | Filter Type | ACL Name | Operation      |
|---------|-------------|----------|----------------|
|         |             |          | <span>+</span> |

Area Virtual Link

| Area ID | ABR Address | Authentication | Key ID | Key | Hello Interval | Dead Interval | Retransmit Interval | Transmit Delay | Operation      |
|---------|-------------|----------------|--------|-----|----------------|---------------|---------------------|----------------|----------------|
|         |             |                |        |     |                |               |                     |                | <span>+</span> |

Figure 3-2-7-8

| Area Advanced Options    |                                                                                         |
|--------------------------|-----------------------------------------------------------------------------------------|
| Item                     | Description                                                                             |
| <b>Area Range</b>        |                                                                                         |
| Area ID                  | The area ID of the interface when it runs OSPF (IP address).                            |
| IP Address               | Set the IP address.                                                                     |
| Netmask                  | Set the netmask.                                                                        |
| No Advertise             | Forbid the route information to be advertised among different areas.                    |
| Cost                     | Range: 0-16777215                                                                       |
| <b>Area Filter</b>       |                                                                                         |
| Area ID                  | Select an Area ID for Area Filter.                                                      |
| Filter Type              | Select from "import", "export", "filter-in", and "filter-out".                          |
| ACL Name                 | Enter an ACL name which is set on "Routing > Routing Filtering" webpage.                |
| <b>Area Virtual Link</b> |                                                                                         |
| Area ID                  | Set the ID number of OSPF area.                                                         |
| ABR Address              | ABR is the router connected to multiple outer areas.                                    |
| Authentication           | Select from "simple" and "md5".                                                         |
| Key ID                   | It only takes effect when MD5 is selected. Range 1-15.                                  |
| Key                      | The authentication key for OSPF packet interaction.                                     |
| Hello Interval           | Set the interval time for sending Hello packets through the interface. Range: 1-65535.  |
| Dead Interval            | The dead interval time for sending Hello packets through the interface. Range: 1-65535. |
| Retransmit Interval      | The retransmission interval time for re-sending LSA. Range: 1-65535.                    |
| Transmit Delay           | The delay time for LSA transmission. Range: 1-65535.                                    |

Table 3-2-7-8 OSPF Parameters

**Redistribution**

| Redistribution Type | Metric | Metric Type | Route Map | Operation                                                                           |
|---------------------|--------|-------------|-----------|-------------------------------------------------------------------------------------|
| connected           |        | 1           |           |  |
|                     |        |             |           |  |

Redistribution Advanced Options  Collapse

Always Redistribute Default Route ☐

Redistribute Default Route Metric

Redistribute Default Route Metric Type

**Distance Management**

| Area Type | Distance | Operation                                                                           |
|-----------|----------|-------------------------------------------------------------------------------------|
|           |          |  |

Figure 3-2-7-9

| Item                                   | Description                                                    |
|----------------------------------------|----------------------------------------------------------------|
| <b>Redistribution</b>                  |                                                                |
| Redistribution Type                    | Select from "connected", "static" and "rip".                   |
| Metric                                 | The metric of redistribution router. Range: 0-16777214.        |
| Metric Type                            | Select Metric type from "1" and "2".                           |
| Route Map                              | Mainly used to manage route for redistribution.                |
| <b>Redistribution Advanced Options</b> |                                                                |
| Always Redistribute Default Route      | Send redistribution default route after starting up.           |
| Redistribute Default Route Metric      | Send redistribution default route metric. Range: 0-16777214.   |
| Redistribute Default Route Metric Type | Select from "0", "1" and "2".                                  |
| <b>Distance Management</b>             |                                                                |
| Area Type                              | Select from "intra-area", "inter-area" and "external".         |
| Distance                               | Set the OSPF routing distance for area learning. Range: 1-255. |

Table 3-2-7-9 OSPF Parameters

### 3.2.7.5 Routing Filtering

The screenshot displays two configuration sections: 'Access Control List' and 'IP Prefix-List'.

**Access Control List:** This section has a table with columns: Name, Action, Match Any, IP Address, Netmask, and Operation. A single rule is shown with an empty Name field, 'deny' selected in the Action dropdown, the Match Any checkbox unchecked, empty IP Address and Netmask fields, and a blue 'X' icon in the Operation column. A blue '+' icon is at the bottom right.

**IP Prefix-List:** This section has a table with columns: Name, Sequence Number, Action, Match Any, IP Address, Netmask, GE Length, LE Length, and Operation. A single rule is shown with empty Name and Sequence Number fields, 'deny' selected in the Action dropdown, the Match Any checkbox unchecked, empty IP Address and Netmask fields, empty GE Length and LE Length fields, and a blue 'X' icon in the Operation column. A blue '+' icon is at the bottom right.

Figure 3-2-7-10

| Routing Filtering          |                                                                                                                           |
|----------------------------|---------------------------------------------------------------------------------------------------------------------------|
| Item                       | Description                                                                                                               |
| <b>Access Control List</b> |                                                                                                                           |
| Name                       | User-defined name, need to start with a letter. Only letters, digits and underline (_) are allowed.                       |
| Action                     | Select from "permit" and "deny".                                                                                          |
| Match Any                  | No need to set IP address and subnet mask.                                                                                |
| IP Address                 | User-defined.                                                                                                             |
| Netmask                    | User-defined.                                                                                                             |
| <b>IP Prefix-List</b>      |                                                                                                                           |
| Name                       | User-defined name, need to start with a letter. Only letters, digits and underline (_) are allowed.                       |
| Sequence Number            | A prefix name list can be matched with multiple rules. One rule is matched with one sequence number. Range: 1-4294967295. |
| Action                     | Select from "permit" and "deny".                                                                                          |
| Match Any                  | No need to set IP address, subnet mask, FE Length, and LE Length.                                                         |
| IP Address                 | User-defined.                                                                                                             |
| Netmask                    | User-defined.                                                                                                             |
| FE Length                  | Specify the minimum number of mask bits that must be matched. Range: 0-32.                                                |
| LE Length                  | Specify the maximum number of mask bits that must be matched. Range: 0-32.                                                |

Table 3-2-7-10 Routing Filtering Parameters

### 3.2.8 VRRP

The Virtual Router Redundancy Protocol (VRRP) is a computer networking protocol that provides automatic assignment of available Internet Protocol (IP) routers for participating hosts. This increases the availability and reliability of routing paths via automatic default gateway selections in an IP sub-network.

Increasing the number of exit gateway is a common method for improving system reliability. VRRP adds a group of routers that undertake gateway function into a backup group so as to form a virtual

router. The election mechanism of VRRP will decide which router undertakes the forwarding task, and the host in LAN is only required to configure the default gateway for the virtual router.

In VRRP, routers need to be aware of failures in the virtual master router. To achieve this, the virtual master router sends out multicast “alive” announcements to the virtual backup routers in the same VRRP group.

The VRRP router who has the highest number will become the virtual master router. The VRRP router number ranges from 1 to 255 and usually we use 255 for the highest priority and 100 for backup.

If the current virtual master router receives an announcement from a group member (Router ID) with a higher priority, then the latter will pre-empt and become the virtual master router.

VRRP has the following characteristics:

- The virtual router with an IP address is known as the Virtual IP address. For the host in LAN, it is only required to know the IP address of virtual router, and set it as the address of the next hop of the default route.
- The network Host communicates with the external network through this virtual router.
- A router will be selected from the set of routers based on its priority to undertake the gateway function. Other routers will be used as backup routers to perform the duties of gateway for the gateway router in the case of any malfunction, so as to guarantee uninterrupted communication between the host and external network.

When interface connected with the uplink is at the state of Down or Removed, the router actively lowers its priority so that priority of other routers in the backup group will be higher. Thus the router with the highest priority becomes the gateway for the transmission task.

The screenshot displays the VRRP configuration page. At the top, there is a 'VRRP' header. Below it, the 'VRRP Status' section shows the status as 'DISABLE'. The 'VRRP Settings' section contains various configuration options:

| Setting                    | Value                    |
|----------------------------|--------------------------|
| Enable                     | <input type="checkbox"/> |
| Interface                  | Bridge0                  |
| Virtual Router ID          | 1                        |
| Virtual IP                 |                          |
| Priority                   | 100                      |
| Advertisement Interval (s) | 1                        |
| Preemption Mode            | <input type="checkbox"/> |
| IPv4 Primary Server        | 8.8.8.8                  |
| IPv4 Secondary Server      | 223.5.5.5                |
| Interval                   | 300 s                    |
| Retry Interval             | 5 s                      |
| Timeout                    | 3 s                      |
| Max Ping Retries           | 3                        |

A 'Save' button is located at the bottom of the settings section.

Figure 3-2-8-1



| VRRP                       |                                                                                                                                                                                                                                                                                                                                                   |           |
|----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|
| Item                       | Description                                                                                                                                                                                                                                                                                                                                       | Default   |
| Enable                     | Enable or disable VRRP.                                                                                                                                                                                                                                                                                                                           | Disable   |
| Interface                  | Select the interface of Virtual Router.                                                                                                                                                                                                                                                                                                           | None      |
| Virtual Router ID          | User-defined Virtual Router ID. Range: 1-255.                                                                                                                                                                                                                                                                                                     | None      |
| Virtual IP                 | Set the IP address of Virtual Router.                                                                                                                                                                                                                                                                                                             | None      |
| Priority                   | The VRRP priority range is 1-254 (a bigger number indicates a higher priority). The router with higher priority will be more likely to become the gateway router.                                                                                                                                                                                 | 100       |
| Advertisement Interval (s) | Heartbeat package transmission time interval between routers in the virtual ip group. Range: 1-255.                                                                                                                                                                                                                                               | 1         |
| Preemption Mode            | If the router works in the preemption mode, once it finds that its own priority is higher than that of the current gateway router, it will send VRRP notification package, resulting in re-election of gateway router and eventually replacing the original gateway router. Accordingly, the original gateway router will become a Backup router. | Disable   |
| IPV4 Primary Server        | The router will send ICMP packet to the IP address or host name to determine whether the Internet connection is still available or not.                                                                                                                                                                                                           | 8.8.8.8   |
| IPV4 Secondary Server      | The router will try to ping the secondary server name if primary server is not available.                                                                                                                                                                                                                                                         | 223.5.5.5 |
| Interval                   | Time interval (in seconds) between two Pings.                                                                                                                                                                                                                                                                                                     | 300       |
| Retry Interval             | Set the ping retry interval. When ping failed, the router will ping again every retry interval.                                                                                                                                                                                                                                                   | 5         |
| Timeout                    | The maximum amount of time the router will wait for a response to a ping request. If it does not receive a response for the amount of time defined in this field, the ping request will be considered as failure.                                                                                                                                 | 3         |
| Max Ping Retries           | The retry times of the router sending ping request until determining that the connection has failed.                                                                                                                                                                                                                                              | 3         |

Table 3-2-8-1 VRRP Parameters

## Related Configuration Example

### [VRRP Application Example](#)

### 3.2.9 DDNS

Dynamic DNS (DDNS) is a method that automatically updates a name server in the Domain Name System, which allows user to alias a dynamic IP address to a static domain name.

DDNS serves as a client tool and needs to coordinate with DDNS server. Before starting configuration, user shall register on a website of proper domain name provider and apply for a domain name.

DDNS

DDNS Status

Status -

DDNS Method List

Enable ☒

Name

Interface 

SIM1-APN1

Interface IP -

Service Type 

DynDNS

Username

User ID

Password

Server

Server Path

Hostname

Reporting Interval 

43200

 s

Append IP ☐

Use HTTPS ☒

Figure 3-2-9-1

| DDNS               |                                                        |
|--------------------|--------------------------------------------------------|
| Item               | Description                                            |
| Enable             | Enable/disable DDNS.                                   |
| Name               | Give the DDNS a descriptive name.                      |
| Interface          | Set interface bundled with the DDNS.                   |
| Interface IP       | Display the IP address of the selected interface.      |
| Service Type       | Select the DDNS service provider.                      |
| Username           | Enter the username for DDNS register.                  |
| User ID            | Enter User ID of the custom DDNS server.               |
| Password           | Enter the password for DDNS register.                  |
| Server             | Enter the name of DDNS server.                         |
| Server Path        | By default the hostname is appended to the path.       |
| Hostname           | Enter the hostname for DDNS.                           |
| Reporting Interval | Set the IP reporting interval for the DDNS.            |
| Append IP          | Append your current IP to the DDNS server update path. |
| Use HTTPS          | Enable HTTPS for some DDNS providers.                  |

Table 3-2-9-1 DDNS Parameters

### 3.3 System

#### 3.3.1 General Settings

##### 3.3.1.1 General

General settings include system info and HTTPS certificates.

The screenshot shows the 'System' configuration page. Under the 'System' tab, there are three settings: 'Hostname' set to 'ROUTER', 'Web Login Timeout(s)' set to '1800', and 'Encrypting Cleartext Passwords' which is checked. Below this is the 'HTTPS Certificates' section. It has two rows: 'Certificate' and 'Key'. Each row has a text input field (containing 'https.crt' and 'https.key' respectively), followed by four buttons: 'Browse' (blue), 'Import' (grey), 'Export' (blue), and 'Delete' (blue). At the bottom of the form is a 'Save' button.

Figure 3-3-1-1

| General                        |                                                                                                                                                                                                                            |         |
|--------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| Item                           | Description                                                                                                                                                                                                                | Default |
| <b>System</b>                  |                                                                                                                                                                                                                            |         |
| Hostname                       | User-defined router name, needs to start with a letter.                                                                                                                                                                    | ROUTER  |
| Web Login Timeout (s)          | You need to log in again if it times out. Range: 100-3600.                                                                                                                                                                 | 1800    |
| Encrypting Cleartext Passwords | This function will encrypt all of cleartext passwords into ciphertext passwords.                                                                                                                                           | Enable  |
| <b>HTTPS Certificates</b>      |                                                                                                                                                                                                                            |         |
| Certificate                    | Click "Browse" button, choose certificate file on the PC, and then click "Import" button to upload the file into router. Click "Export" button will export the file to the PC. Click "Delete" button will delete the file. | --      |
| Key                            | Click "Browse" button, choose key file on the PC, and then click "Import" button to upload the file into router. Click "Export" button will export file to the PC. Click "Delete" button will delete the file.             | --      |

Table 3-3-1-1 General Setting Parameters

##### 3.3.1.2 System Time

This section explains how to set the system time including time zone and time synchronization type.

**Note:** to ensure that the router runs with the correct time, it's recommended that you set the system time when configuring the router.

**System Time Settings**

Current Time: 2025-12-26 13:49:01 Fri

Autp DST: ☒

Time Zone: 0 United Kingdom (London) ▼

Sync Type: Sync with NTP Server ▼

Primary NTP Server: pool.ntp.org ▼

Secondary NTP Server: ▼

**NTP Server**

Enable NTP Server: ☐

Save

Figure 3-3-1-2

| System Time              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|--------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item                     | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Current Time             | Show the current system time.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Autp DST                 | Enable to use the daylight saving time.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Time Zone                | Click the drop down list to select the time zone you are in.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Sync Type                | Click the drop down list to select the time synchronization type.<br><b>Sync with Browser:</b> Synchronize time with browser.<br><b>Sync with NTP Server:</b> Synchronize time with NTP Server.<br><b>Set up Manually:</b> configure the time manually.<br><b>GPS Time Synchronization:</b> Synchronize time with GPS per hour. This is only applicable with GPS version and ensure that GPS is enabled on <b>Service &gt; GPS &gt; GPS</b> .<br><b>Sync with Cellular Operator:</b> Synchronize time with cellular operator. This only works when the device has registered to cellular network. |
| Sync with Browser        | Synchronize time with browser.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Browser Time             | Show the current time of browser.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Set up Manually          | Manually configure the system time.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| GPS Time Synchronization | Synchronize time with GPS.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Primary NTP Server       | Enter primary NTP Server's IP address or domain name.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Secondary NTP Server     | Enter secondary NTP Server's IP address or domain name.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| NTP Server               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Enable NTP Server        | NTP client on the network can achieve time synchronization with router after this option is checked.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

Table 3-3-1-2 System Time Parameters

### 3.3.1.3 Email

SMTP, short for Simple Mail Transfer Protocol, is a TCP/IP protocol used in sending and receiving e-mail. This section describes how to configure email settings and add email groups for alarms and events.

SMTP Client Settings

Enable

☒

Sender's Email Address

SMTP Server Address

Username

Password

Port

Encryption

Test Email Setting

Recipient's Email address

Test

Figure 3-3-1-3

| Item                        | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>SMTP Client Settings</b> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Enable                      | Enable or disable SMTP client function.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Sender's Email Address      | Enter the sender's email account.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| SMTP Server Address         | Enter SMTP server's domain name.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Username                    | Enter the sender's email username.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Password                    | Enter the sender's email password.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Port                        | Enter SMTP server port. Range: 1-65535.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Encryption                  | <p>Select from: None, TLS/SSL, STARTTLS.</p> <p><b>None:</b> No encryption. The default port is 25.</p> <p><b>STARTTLS:</b> STARTTLS is a way to take an existing insecure connection and upgrade it to a secure connection by using SSL/TLS. The default port is 587.</p> <p><b>TLS/SSL:</b> SSL and TLS both provide a way to encrypt a communication channel between two computers (e.g. your computer and our server). TLS is the successor to SSL and the terms SSL and TLS are used interchangeably unless you're referring to a specific version of the protocol. The default port is 465.</p> |
| <b>Test Email Setting</b>   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Recipient's Email address   | Enter the recipient's email account. Click <b>Test</b> , the test email will be sent to this address.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

Table 3-3-1-3 SMTP Setting

Email List

| Recipient's Email address | Description          | Operation                        |
|---------------------------|----------------------|----------------------------------|
| <input type="text"/>      | <input type="text"/> | <input type="button" value="X"/> |
|                           |                      | <input type="button" value="+"/> |

Email Group List

| Group ID             | Description          | Recipient's Email address | Operation                        |
|----------------------|----------------------|---------------------------|----------------------------------|
| <input type="text"/> | <input type="text"/> | <input type="text"/>      | <input type="button" value="X"/> |
|                      |                      |                           | <input type="button" value="+"/> |

Figure 3-3-1-4

| Item                      | Description                               |
|---------------------------|-------------------------------------------|
| Email List                |                                           |
| Recipient's Email Address | Enter the recipient's Email address.      |
| Description               | The description of the Email address.     |
| Email Group List          |                                           |
| Group ID                  | Set number for email group. Range: 1-100. |
| Description               | The description of the Email group.       |
| Recipient's Email address | Select the Email addresses.               |

Table 3-3-1-4 Email Settings

Related Topics

[DI Setting](#)

[Events Setting](#)

3.3.1.4 Storage

You can view Micro SD card information on this page.

Micro SD

Status

Available

Storage (Capacity/Available)

7.2G/6.8G(1%)

Format

Figure 3-3-1-5

| Storage |                                                                          |
|---------|--------------------------------------------------------------------------|
| Item    | Description                                                              |
| Status  | Show the status of Micro SD card, such as "Available" or "Not Inserted". |

|                                 |                                          |
|---------------------------------|------------------------------------------|
| Storage<br>(Capacity/Available) | The total capacity of the Micro SD Card. |
| Format                          | Format the Micro SD card.                |

Table 3-3-1-5 Storage Information

### 3.3.2 Phone&SMS

#### 3.3.2.1 Phone

Phone settings involve in call/SMS trigger, SMS control and SMS alarm for events.

The screenshot displays two web-based configuration interfaces. The top interface, titled 'Phone Number List', features a table with columns for 'Number', 'Description', and 'Operation'. It contains two entries: one with the number '1908888888' and description 'test', and another with '8866222222' and description 'ttest'. Each entry has a delete icon (X) and a plus icon (+) for adding more. The bottom interface, titled 'Phone Group List', has columns for 'Group ID', 'Description', 'Number', and 'Operation'. It shows a single entry with Group ID '1', description 'test', and a dropdown menu for the number showing '1908888888,8866222222'. It also includes delete and add icons.

Figure 3-3-2-1

| Phone             |                                                              |
|-------------------|--------------------------------------------------------------|
| Item              | Description                                                  |
| Phone Number List |                                                              |
| Number            | Enter the telephone number. Digits, "+" and "-" are allowed. |
| Description       | The description of the telephone number.                     |
| Phone Group List  |                                                              |
| Group ID          | Set number for phone group. Range: 1-100.                    |
| Description       | The description of the phone group.                          |
| Number            | Select the phone numbers.                                    |

Table 3-3-2-1 Phone Settings

#### Related Topic

[Connect on Demand](#)

#### 3.3.2.2 SMS

SMS settings involve in remote SMS control, sending SMS and SMS receiving and sending status. Ensure the SMS center number is typed on **Network > Interface > Cellular** page before using SMS features.

Figure 3-3-2-2

| SMS Settings        |                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item                | Description                                                                                                                                                                                                                                                                                                                                                                                                |
| SMS Mode            | <p>Select SMS mode:</p> <p><b>Text:</b> Pure text mode, mainly used in Europe and America. Technically, it can also be used to send Short Messages in Chinese. When CLI commands will be sent to control the router, Text mode is recommended to choose.</p> <p><b>PDU:</b> It's the default encoding Mode for mobile phones, which conform to all mobile phones SMS format and can use any character.</p> |
| SMS Remote Control  | Enable/disable SMS Remote Control to send SMS to control the router.                                                                                                                                                                                                                                                                                                                                       |
| Authentication Type | <p>You can choose "phone number" or "password + phone number".</p> <p>Phone number: only the phone numbers on phone groups support remote control.</p> <p>Password + phone number: only the phone numbers on phone groups support remote control; besides, control SMS should be sent as format password+";"+command content.</p>                                                                          |
| Password            | Set password for authentication.                                                                                                                                                                                                                                                                                                                                                                           |
| Phone Group         | Select the Phone group which used for remote control. User can click the Phone Group and set phone number.                                                                                                                                                                                                                                                                                                 |

Table 3-3-2-2 SMS Remote Control Parameters



Figure 3-3-2-3

| SMS                 |                                      |
|---------------------|--------------------------------------|
| Item                | Description                          |
| <b>Send SMS</b>     |                                      |
| Phone Number        | Enter the number to receive the SMS. |
| Content             | SMS content.                         |
| <b>Inbox/Outbox</b> |                                      |
| Sender              | SMS sender from outside.             |
| Recipient           | SMS recipient which UR35 send to.    |
| From                | Select the start date.               |
| To                  | Select the end date.                 |
| Search              | Search for SMS record.               |
| Clear All           | Clear all SMS records in web GUI.    |

Table 3-3-2-3 SMS Settings

### 3.3.3 User Management

#### 3.3.3.1 Account

Here you can change the login username and password of the administrator.

**Note:** it is strongly recommended that you modify them for the sake of security.

The screenshot shows a web interface with two tabs: 'Account' and 'User Management'. The 'Account' tab is active, displaying a 'Change Account Info' section. This section contains four labeled input fields: 'Username' (with the text 'admin'), 'Old Password', 'New Password', and 'Confirm New Password'. Below these fields is a blue 'Save' button.

Figure 3-3-3-1

| Account              |                                                                                                                                                                      |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item                 | Description                                                                                                                                                          |
| Username             | Enter a new username. You can use characters such as a-z, 0-9, "_", "-". The first character can't be a digit.                                                       |
| Old Password         | Enter the old password.                                                                                                                                              |
| New Password         | Enter a new password. You can use any ASCII characters except blank. The password must contain at least one letter and one number, with a length of 5-31 characters. |
| Confirm New Password | Enter the new password again.                                                                                                                                        |

Table 3-3-3-1 Account Settings

### 3.3.3.2 User Management

This section describes how to create common user accounts. The common user permission includes Read-Only and Read-Write.

The screenshot shows the 'User Management' tab with a 'User List' section. It features a table with four columns: 'Username', 'Password', 'Permission', and 'Operation'. The 'Username' and 'Password' columns have input fields. The 'Permission' column has a dropdown menu currently showing 'Read-Only'. The 'Operation' column contains two icons: a blue 'X' and a blue '+'. Below the table is a light blue bar with a '+' icon.

Figure 3-3-3-2

| User Management |                                                                                                                                                                                                                                                      |
|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item            | Description                                                                                                                                                                                                                                          |
| Username        | Enter a new username. You can use characters such as a-z, 0-9, "_", "-". The first character can't be a digit.                                                                                                                                       |
| Password        | Set password. You can use any ASCII characters except blank. The password must contain at least one letter and one number, with a length of 5-31 characters.                                                                                         |
| Permission      | <p>Select user permission from "Read-Only" and "Read-Write".</p> <p><b>Read-Only:</b> users can only view the configuration of router in this level.</p> <p><b>Read-Write:</b> users can view and set the configuration of router in this level.</p> |

Table 3-3-3-2 User Management

### 3.3.4 AAA

AAA access control is used for visitors control and the available corresponding services once access is allowed. It adopts the same method to configure three independent safety functions. It provides modularization methods for following services:

- Authentication: verify if the user is qualified to access to the network.
- Authorization: authorize related services available for the user.
- Charging: record the utilization of network resources.

#### 3.3.4.1 Radius

Using UDP for its transport, Radius is generally applied in various network environments with higher requirements of security and permission of remote user access.

The screenshot shows a web interface for configuring AAA services. The 'Radius' tab is selected. The 'Radius Settings' section includes an 'Enable' checkbox, a 'Server IP Address' field, a 'Server Port' field with the value '1812', and a 'Shared Secret' field with a copy icon. A 'Save' button is located at the bottom left of the settings area.

Figure 3-3-4-1

| Radius            |                                                                                                     |
|-------------------|-----------------------------------------------------------------------------------------------------|
| Item              | Description                                                                                         |
| Enable            | Enable or disable Radius.                                                                           |
| Server IP Address | Fill in the Radius server IP address/domain name.                                                   |
| Server Port       | Fill in the Radius server port. Range: 1-65535.                                                     |
| Key               | Fill in the key consistent with that of Radius server in order to get connected with Radius server. |

Table 3-3-4-1 Radius Parameters

#### 3.3.4.2 TACACS+

Using TCP for its transport, TACACS+ is mainly used for authentication, authorization and charging of the access users and terminal users by adopting PPP and VPDN.

The screenshot shows the 'Tacacs+' configuration page. It includes a 'Save' button at the bottom left of the settings area.

Figure 3-3-4-2

| TACACS+           |                                                                                                       |
|-------------------|-------------------------------------------------------------------------------------------------------|
| Item              | Description                                                                                           |
| Enable            | Enable or disable TACACS+.                                                                            |
| Server IP Address | Fill in the TACACS+ server IP address/domain name.                                                    |
| Server Port       | Fill in the TACACS+ server port. Range: 1-65535.                                                      |
| Key               | Fill in the key consistent with that of TACACS+ server in order to get connected with TACACS+ server. |

Table 3-3-4-2 TACACS+ Parameters

### 3.3.4.3 LDAP

A common usage of LDAP is to provide a central place to store usernames and passwords. This allows many different applications and services to connect the LDAP server to validate users.

LDAP is based on a simpler subset of the standards contained within the [X.500](#) standard. Because of this relationship, LDAP is sometimes called X.500-lite as well.

The screenshot shows the 'LDAP' configuration page. It includes a 'Save' button at the bottom left of the settings area.

Figure 3-3-4-3

| LDAP              |                                                                            |
|-------------------|----------------------------------------------------------------------------|
| Item              | Description                                                                |
| Enable            | Enable or Disable LDAP.                                                    |
| Server IP Address | Fill in the LDAP server's IP address/domain name. The maximum count is 10. |
| Server Port       | Fill in the LDAP server's port. Range: 1-65535                             |
| Base DN           | The top of LDAP directory tree.                                            |
| Security          | Select secure method from "None", "StartTLS" and "SSL".                    |
| Username          | Enter the username to access the server.                                   |
| Password          | Enter the password to access the server.                                   |

Table 3-3-5-3 LDAP Parameters

### 3.3.4.4 Authentication

AAA supports the following authentication ways:

- None: uses no authentication, generally not recommended.
- Local: uses the local username database for authentication.
  - Advantages: rapidness, cost reduction.
  - Disadvantages: storage capacity limited by hardware.
- Remote: has user's information stored on authentication server. Radius, TACACS+ and LDAP supported for remote authentication.

When radius, TACACS+, and local are configured at the same time, the priority level is: 1 > 2 > 3.

| Service | 1      | 2      | 3      |
|---------|--------|--------|--------|
| Console | None ▼ | None ▼ | None ▼ |
| Web     | None ▼ | None ▼ | None ▼ |
| Telnet  | None ▼ | None ▼ | None ▼ |
| SSH     | None ▼ | None ▼ | None ▼ |

Save

Figure 3-3-4-4

| Authentication |                                           |
|----------------|-------------------------------------------|
| Item           | Description                               |
| Console        | Select authentication for Console access. |
| Web            | Select authentication for Web access.     |
| Telnet         | Select authentication for Telnet access.  |
| SSH            | Select authentication for SSH access.     |

Table 3-3-4-4 Authentication Parameters

### 3.3.5 Device Management

#### 3.3.5.1 Auto Provision

When Auto Provision is enabled and the device is connected to Internet, the device will receive the configuration profile to achieve initial configuration by Milesight Development Platform. This feature will work even the device does not configure to connect Milesight Development Platform.

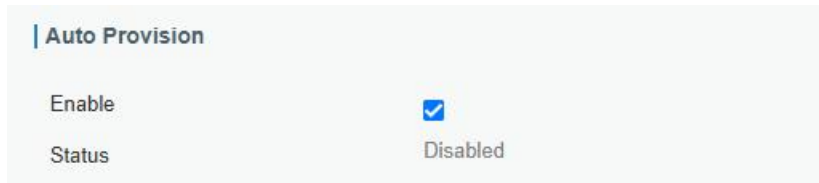


Figure 3-3-5-1

#### 3.3.5.2 Device Management

You can choose which platform you want to connect on this page so as to manage the router centrally and remotely: Milesight DeviceHub, Milesight DeviceHub 2.0, and Milesight Development Platform. For more details please refer to corresponding platform manuals.

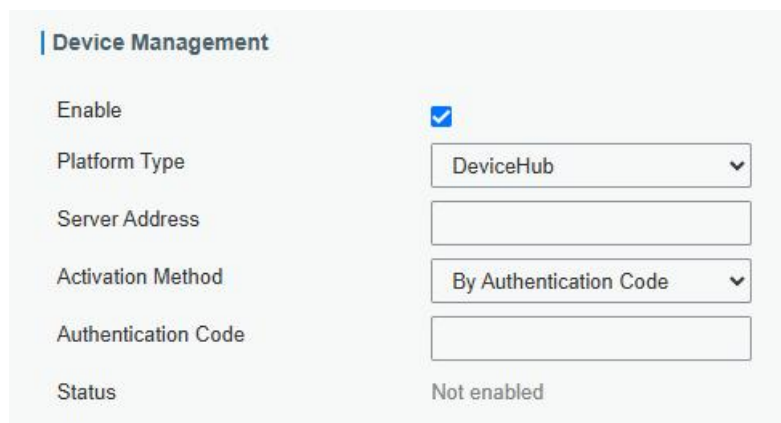


Figure 3-3-5-2

| Device Management |                                                                                                                  |
|-------------------|------------------------------------------------------------------------------------------------------------------|
| Item              | Description                                                                                                      |
| Enable            | Enable or disable to connect router to management platform.                                                      |
| Platform Type     | DeviceHub, DeviceHub 2.0, and Milesight Development Platform are optional.                                       |
| Status            | Show the connection status between the router and the platform.                                                  |
| DeviceHub         |                                                                                                                  |
| Server Address    | IP address or domain of the device management server.                                                            |
| Activation Method | Select activation method to connect the router to the DeviceHub server, options are "By Authentication Code" and |

|                     |                                                                |
|---------------------|----------------------------------------------------------------|
|                     | "By Account name".                                             |
| Authentication Code | Fill in the authentication code generated from the DeviceHub.  |
| Account name        | Fill in the registered DeviceHub account (email) and password. |
| Password            |                                                                |
| DeviceHub 2.0       |                                                                |
| Server Address      | IP address or domain of the device management server.          |

Table 3-3-5-1

### 3.3.5.3 Milesight VPN

You can connect the device to the Milesight VPN on this page so as to manage the router and connected devices centrally and remotely. For more details please refer to ***MilesightVPN User Guide***.

Figure 3-3-5-3

| Milesight VPN                 |                                                       |
|-------------------------------|-------------------------------------------------------|
| Item                          | Description                                           |
| <b>Milesight VPN Settings</b> |                                                       |
| Server                        | Enter the IP address or domain name of Milesight VPN. |
| Port                          | Enter the HTTPS port number.                          |

|                             |                                                                                             |
|-----------------------------|---------------------------------------------------------------------------------------------|
| Authorization code          | Enter the authorization code which generated by Milesight VPN.                              |
| Device Name                 | Enter the name of the device.                                                               |
| <b>Milesight VPN Status</b> |                                                                                             |
| Status                      | Show the connection information about whether the router is connected to the Milesight VPN. |
| Local IP                    | Show the virtual IP of the router.                                                          |
| Remote IP                   | Show the virtual IP of the Milesight VPN.                                                   |
| Duration                    | Show the information on how long the router has been connected to the Milesight VPN.        |

Table 3-3-5-2

### 3.3.6 Events

Event feature is capable of sending alerts by Email when certain system events occur.

#### 3.3.6.1 Events

You can view alarm messages on this page.

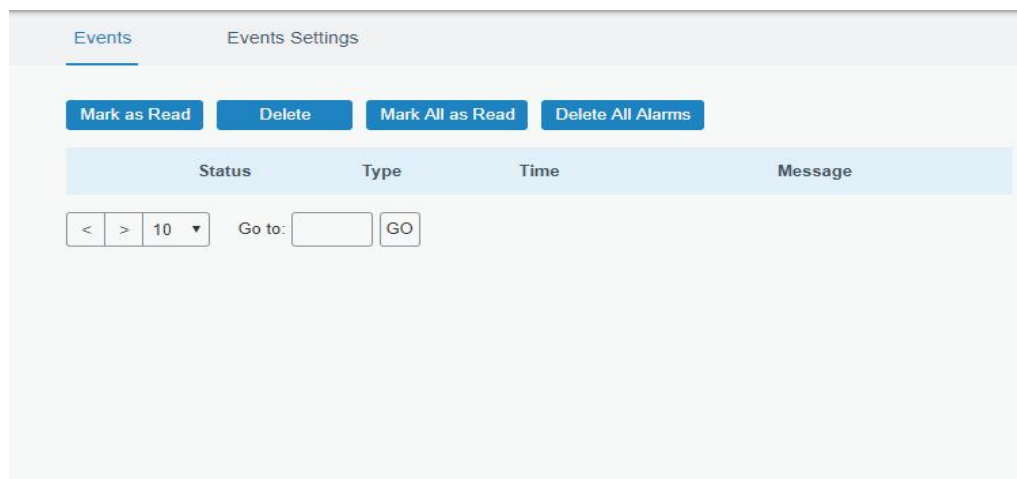


Figure 3-3-6-1

| Events            |                                                                           |
|-------------------|---------------------------------------------------------------------------|
| Item              | Description                                                               |
| Mark as Read      | Mark the selected event alarm as read.                                    |
| Delete            | Delete the selected event alarm.                                          |
| Mark All as Read  | Mark all event alarms as read.                                            |
| Delete All Alarms | Delete all event alarms.                                                  |
| Status            | Show the reading status of the event alarms, such as "Read" and "Unread". |
| Type              | Show the event type that should be alarmed.                               |
| Time              | Show the alarm time.                                                      |
| Message           | Show the alarm content.                                                   |

Table 3-3-6-1 Events Parameters



### 3.3.6.2 Events Settings

In this section, you can decide what events to record and whether you want to receive email and SMS notifications when any change occurs.

Enable

Enable

☒

Events Settings

Phone Group List

Email Group List

| Events                               | Record <input type="checkbox"/>     | Email <input type="checkbox"/><br>Email Group List | SMS <input type="checkbox"/><br>Phone Group List | SNMP <input type="checkbox"/> |
|--------------------------------------|-------------------------------------|----------------------------------------------------|--------------------------------------------------|-------------------------------|
| System Startup                       | <input checked="" type="checkbox"/> | <input type="checkbox"/>                           | <input type="checkbox"/>                         | <input type="checkbox"/>      |
| System Reboot                        | <input checked="" type="checkbox"/> | <input type="checkbox"/>                           | <input type="checkbox"/>                         | <input type="checkbox"/>      |
| System Time Update                   | <input checked="" type="checkbox"/> | <input type="checkbox"/>                           | <input type="checkbox"/>                         | <input type="checkbox"/>      |
| Cellular Up                          | <input checked="" type="checkbox"/> | <input type="checkbox"/>                           | <input type="checkbox"/>                         | <input type="checkbox"/>      |
| Cellular Down                        | <input checked="" type="checkbox"/> | <input type="checkbox"/>                           | <input type="checkbox"/>                         | <input type="checkbox"/>      |
| Weak Signal                          | <input checked="" type="checkbox"/> | <input type="checkbox"/>                           | <input type="checkbox"/>                         | <input type="checkbox"/>      |
| SIM Normal Signal                    | <input type="checkbox"/>            | <input type="checkbox"/>                           | <input type="checkbox"/>                         | <input type="checkbox"/>      |
| Cellular Data Stats Clear            | <input checked="" type="checkbox"/> | <input type="checkbox"/>                           | <input type="checkbox"/>                         | <input type="checkbox"/>      |
| Cellular Data Traffic is running out | <input checked="" type="checkbox"/> | <input type="checkbox"/>                           | <input type="checkbox"/>                         | <input type="checkbox"/>      |
| Cellular Data Traffic Overflow       | <input checked="" type="checkbox"/> | <input type="checkbox"/>                           | <input type="checkbox"/>                         | <input type="checkbox"/>      |
| WAN Up                               | <input checked="" type="checkbox"/> | <input type="checkbox"/>                           | <input type="checkbox"/>                         | <input type="checkbox"/>      |
| WAN Down                             | <input checked="" type="checkbox"/> | <input type="checkbox"/>                           | <input type="checkbox"/>                         | <input type="checkbox"/>      |

Figure 3-3-6-2

|             |                                     |                          |                          |                          |
|-------------|-------------------------------------|--------------------------|--------------------------|--------------------------|
| LAN Up      | <input type="checkbox"/>            | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| LAN Down    | <input type="checkbox"/>            | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| VPN Up      | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| VPN Down    | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Link switch | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| SIM Switch  | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |

Figure 3-3-6-3

| Event Settings   |                                          |
|------------------|------------------------------------------|
| Item             | Description                              |
| Enable           | Check to enable "Events Settings".       |
| Phone Group List | Select phone group to receive SMS alarm. |

|                                      |                                                                                                 |
|--------------------------------------|-------------------------------------------------------------------------------------------------|
| Email Group List                     | Select email group to receive alarm.                                                            |
| Record                               | The relevant content of event alarm will be recorded on "Event" page if this option is checked. |
| Email                                | The relevant content of event alarm will be sent out via email if this option is checked.       |
| Email Setting                        | Click and you will be redirected to the page "Email" to configure email group list.             |
| SMS                                  | The relevant content of event alarm will be sent out via SMS if this option is checked.         |
| SMS Setting                          | Click and you will be redirected to the page of "Phone" to configure phone group list.          |
| VPN Up                               | VPN is connected.                                                                               |
| VPN Down                             | VPN is disconnected.                                                                            |
| WAN Up                               | Ethernet cable is connected to WAN port.                                                        |
| WAN Down                             | Ethernet cable is disconnected to WAN port.                                                     |
| Link Switch                          | Switch to use other interface for Internet access.                                              |
| Weak Signal                          | The signal level of cellular is low (RSSI < 11 or ≥ 99).                                        |
| Cellular Up                          | Cellular network is connected.                                                                  |
| Cellular Down                        | Cellular network is disconnected.                                                               |
| Cellular Data Stats Clear            | Zero out the data usage of the main SIM card.                                                   |
| Cellular Data Traffic is running out | The main SIM card is reaching the data usage limit.                                             |
| Cellular Data Traffic Over Flow      | The main SIM card has exceeded the data usage plan.                                             |
| WLAN Up(AP)                          | The WLAN(AP) is enabled.                                                                        |
| WLAN Down(AP)                        | The WLAN(AP) has stopped working.                                                               |
| WLAN Up(Client)                      | The WLAN(Client) is enabled.                                                                    |
| WLAN Down(Client)                    | The WLAN(Client) has stopped working.                                                           |
| SIM Switch                           | The SIM card has been switched.                                                                 |

Table 3-3-6-2 Events Parameters

## Related Topics

[Email Setting](#)

The image shows a web interface for MQTT configuration. At the top, there is a section labeled 'MQTT' with an 'Enable' checkbox that is checked. Below this is a table with the following columns: Events, MQTT, Topic, Retain Flag, QoS, and Operation. The 'Events' column contains a dropdown menu with 'System Reboot, VPN Up' selected. The 'MQTT' column has a dropdown menu. The 'Topic' column has an empty text input field. The 'Retain Flag' column has an unchecked checkbox. The 'QoS' column has a dropdown menu with 'Qos 0' selected. The 'Operation' column has a blue 'X' icon and a blue '+' icon.

| Events                | MQTT | Topic | Retain Flag              | QoS   | Operation                                                         |
|-----------------------|------|-------|--------------------------|-------|-------------------------------------------------------------------|
| System Reboot, VPN Up |      |       | <input type="checkbox"/> | Qos 0 | <input type="button" value="X"/> <input type="button" value="+"/> |

Figure 3-3-6-4

| MQTT        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item        | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Enable      | If enabled, MQTT forwarding is performed when an event is triggered.                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Events      | Select the type of event that needs to be MQTT forwarded.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| MQTT        | Select the MQTT connection used for forwarding the current event type.                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Topic       | Define the topic name of the forwarding event, which is used by the router to forward data when the event is triggered.                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Retain Flag | Enable to set the latest message of this topic as retain message.                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| QoS         | <p><b>QoS 0</b> – Only Once<br/>This is the fastest method and requires only 1 message. It is also the most unreliable transfer mode.</p> <p><b>QoS 1</b> – At Least Once<br/>This level guarantees that the message will be delivered at least once, but may be delivered more than once.</p> <p><b>QoS 2</b> – Exactly Once<br/>QoS 2 is the highest level of service in MQTT. This level guarantees that each message is received only once by the intended recipients. QoS 2 is the safest and slowest quality of service level.</p> |

Table 3-3-6-3

### 3.4 Service

#### 3.4.1 I/O

##### 3.4.1.1 DI

This section explains how to configure monitoring condition on digital input, and take certain actions once the condition is reached.

**DI Setting**

Enable

☒

Mode

High Level

Duration(ms)

100

Action

☐ SMS
☐ Email
☐ DO
☐ Cellular UP
☐ MQTT
☐ SNMP

Figure 3-4-1-1

| DI            |                                                                                                                                                                                      |
|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item          | Description                                                                                                                                                                          |
| Enable        | Enable or disable DI.                                                                                                                                                                |
| Mode          | Options are High Level, Low Level, Counter and Level Change.                                                                                                                         |
| Duration (ms) | Set the duration of high/low level in digital input. Range: 1-10000.                                                                                                                 |
| Condition     | <p>Select the condition to trigger the counter.</p> <p><b>Low-&gt;High:</b> The counter value will increase by 1 if digital input's status changes from low level to high level.</p> |

|         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         | <b>High-&gt;Low:</b> The counter value will increase by 1 if digital input's status changes from high level to low level.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Counter | The system will take actions accordingly when the counter value reach the preset one, and then reset the counter value to 0. Range: 1-100.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Action  | <p>Select the corresponding actions that the system will take when digital input mode meets the preset condition or duration.</p> <p><b>SMS:</b> enable to send SMS alarms.</p> <p><b>Email:</b> enable to send Email alarms.</p> <p><b>DO:</b> control the DO status as settings on <b>Service &gt; I/O &gt; DO page</b>.</p> <p><b>Cellular UP:</b> Trigger the router to switch from offline to register to cellular network.</p> <p><b>MQTT:</b> enable to send message to MQTT broker. The MQTT connection is set up on <b>Service &gt; MQTT</b> page.</p> <p><b>SNMP:</b> enable to report DI events via SNMP Trap. The SNMP parameters is set up on <b>Service &gt; SNMP</b> page.</p> |

Table 3-4-1-1 DI Parameters

## Related Topics

[DO Setting](#)

[Email Setting](#)

[Connect on Demand](#)

### 3.4.1.2 DO

This section describes how to configure digital output mode.

Figure 3-4-1-2

| DO     |                                                                                                                                                                             |
|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item   | Description                                                                                                                                                                 |
| Enable | Enable or disable DO.                                                                                                                                                       |
| Mode   | <p>Select the working mode of DO.</p> <p><b>High Level:</b> trigger the DO to send high level signal.</p> <p><b>Low Level:</b> trigger the DO to send low level signal.</p> |

|                                |                                                                                                                       |
|--------------------------------|-----------------------------------------------------------------------------------------------------------------------|
|                                | <b>Pulse:</b> trigger the DO to send pulses.<br><b>Custom:</b> trigger the DO via SMS on the phone group.             |
| Initial Status                 | Select the initial status of DO when mode is Custom or Pulse. It is also the initial status when the router restarts. |
| Duration (*10ms)               | When mode is high level or low level, set duration of high/low level on digital output. Range: 1-10000.               |
| Duration of High Level (*10ms) | Set the duration of pulse's high level. Range: 1-10000.                                                               |
| Duration of Low Level (*10ms)  | Set the duration of pulse's low level. Range: 1-10000.                                                                |
| The Number of Pulse            | Set the quantity of pulse. Range: 1-100.                                                                              |
| Phone Group                    | Select phone group which will be used for I/O configuration. User can click the Phone Group and set phone number.     |

Table 3-4-1-2 DO Settings

## Related Topics

[DI Setting](#)

### 3.4.2 Serial Port

This section explains how to configure serial port parameters to achieve communication with serial terminals, and configure work mode to achieve communication with the remote data center, so as to achieve two-way communication between serial terminals and remote data center.

The screenshot displays the 'Serial Settings' configuration page for 'Serial1'. The page has a header with 'Serial1' and 'Serial 2' tabs. Below the header, the 'Serial Settings' section contains the following parameters:

- Enable:** A checkbox that is checked.
- Serial Type:** A dropdown menu set to 'RS232'.
- Baud Rate:** A dropdown menu set to '9600'.
- Data Bits:** A dropdown menu set to '8bits'.
- Stop Bits:** A dropdown menu set to '1bits'.
- Parity:** A dropdown menu set to 'None'.
- Software Flow Control:** A checkbox that is unchecked.
- Serial Mode:** A dropdown menu set to 'Modbus Master'.

At the bottom of the settings area, there is a blue button labeled 'Save & Apply'.

Figure 3-4-2-1

| Item                  | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Enable                | Enable or disable serial port function.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Serial Type           | Select the serial type as RS232 or RS485.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Baud Rate             | The range is 300-230400. Same with the baud rate of the connected terminal device.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Data Bits             | Options are 8 and 7. Same with the data bits of the connected terminal device.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Stop Bits             | Options are 1 and 2. Same with the stop bits of the connected terminal device.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Parity                | Options are None, Odd and Even. Same with the parity of the connected terminal device.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Software Flow Control | Enable or disable software flow control.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Serial Mode           | <p>Select work mode of the serial port.</p> <p><b>DTU Mode:</b> the serial port can establish communication with the remote server/client.</p> <p><b>GPS:</b> go to <b>Service &gt; GPS &gt; GPS Serial Forwarding</b> to configure basic parameters to send GPS data to serial port.</p> <p><b>Modbus Client:</b> go to <b>Service &gt; Modbus Client</b> to configure basic parameters and channels.</p> <p><b>Modbus Server:</b> go to <b>Service &gt; Modbus Server</b> to configure basic parameters.</p> <p><b>DLMS Connection:</b> go to <b>Service &gt; DLMS</b> to configure basic parameters.</p> |

Table 3-4-2-1 Serial Parameters

Serial Mode

DTU Mode

DTU Protocol

Transparent

Protocol

TCP

Keepalive Interval

75

s

Keepalive Retry Times

9

Packet Size

1024

Bytes

Serial Frame Interval

100

ms

Reconnect Interval

10

s

Specific Protocol

☐

Register String

Destination IP Address

| Server Address | Server Port | Status | Operation         |
|----------------|-------------|--------|-------------------|
|                |             |        | <a href="#">+</a> |

Figure 3-4-2-2

## DTU Mode

| Item                  | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Default |
|-----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| DTU Protocol          | <p>Select from below protocols:</p> <p><b>Transparent:</b> the router is used as TCP/UDP client and transmits data to server transparently.</p> <p><b>TCP server:</b> the router is used as TCP server to wait for polling data.</p> <p><b>UDP server:</b> the router is used as UDP server to wait for polling data.</p> <p><b>Modbus:</b> the router will be used as Modbus gateway, which can achieve conversion between Modbus RTU and Modbus TCP.</p> <p><b>MQTT:</b> the router will be used as MQTT client to forward data to MQTT broker or forward downlink to serial port.</p> | --      |
| <b>TCP/UDP Server</b> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |         |
| Listening port        | Set the router listening port. Range: 1-65535.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | 502     |
| Keepalive Interval    | After TCP connection is established, client will send heartbeat packet regularly by TCP to keep alive. The interval range is 1-3600s.                                                                                                                                                                                                                                                                                                                                                                                                                                                    | 75      |
| Keepalive Retry Times | When TCP heartbeat times out, router will resend heartbeat. After it reaches the preset retry times, TCP connection will be reestablished. The retry times range is 1-16.                                                                                                                                                                                                                                                                                                                                                                                                                | 9       |
| Packet Size           | Set the size of the serial data frame. Packet will be sent out when preset frame size is reached. The size range is 1-1024 bytes.                                                                                                                                                                                                                                                                                                                                                                                                                                                        | 1024    |
| Serial Frame Interval | <p>The interval that the router sends out real serial data stored in the buffer area to public network. The range is 10-65535 ms.</p> <p><b>Note:</b> data will be sent out to public network when real serial data size reaches the preset packet size, even though it's within the serial frame interval.</p>                                                                                                                                                                                                                                                                          | 100     |

Table 3-4-2-2 DTU Parameters

| Item                   | Description                                                                                                                                                                                                                                                                                                     | Default |
|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| <b>Transparent</b>     |                                                                                                                                                                                                                                                                                                                 |         |
| Protocol               | Select TCP or UDP protocol.                                                                                                                                                                                                                                                                                     | TCP     |
| Keepalive Interval (s) | After TCP client is connected with TCP server, the client will send heartbeat packet by TCP regularly to keep alive. The interval range is 1-3600 s.                                                                                                                                                            | 75      |
| Keepalive Retry Times  | When TCP heartbeat times out, the router will resend heartbeat. After it reaches the preset retry times, router will reconnect to TCP server. The range is 1-16.                                                                                                                                                | 9       |
| Packet Size            | Set the size of the serial data frame. Packet will be sent out when preset frame size is reached. The range is 1-1024 bytes.                                                                                                                                                                                    | 1024    |
| Serial Frame Interval  | <p>The interval that the router sends out real serial data stored in the buffer area to public network. The range is 10-65535 ms.</p> <p><b>Note:</b> data will be sent out to public network when real serial data size reaches the preset packet size, even though it's within the serial frame interval.</p> | 100     |
| Reconnect Interval     | After connection failure, router will reconnect to the server at the preset interval. The range is 10-60 s.                                                                                                                                                                                                     | 10      |

|                       |                                                                                                                                                                                                                                                                                                      |      |
|-----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|
| Specific Protocol     | By Specific Protocol, the router will be able to connect to the TCP2COM software.                                                                                                                                                                                                                    | --   |
| Heartbeat Interval    | By Specific Protocol, the router will send heartbeat packet to the server regularly to keep alive. The interval range is 1-3600 s.                                                                                                                                                                   | 30   |
| ID                    | Define unique ID of each router. No longer than 63 characters without space character.                                                                                                                                                                                                               | --   |
| Register String       | Define register string for connection with the server.                                                                                                                                                                                                                                               | Null |
| Server Address        | Fill in the TCP or UDP server address (IP/domain name).                                                                                                                                                                                                                                              | Null |
| Server Port           | Fill in the TCP or UDP server port. Range: 1-65535.                                                                                                                                                                                                                                                  | Null |
| Status                | Show the connection status between the router and the server.                                                                                                                                                                                                                                        | --   |
| <b>Modbus</b>         |                                                                                                                                                                                                                                                                                                      |      |
| Local Port            | Set the router listening port. Range: 1-65535.                                                                                                                                                                                                                                                       | 502  |
| Maximum TCP Clients   | Specify the maximum number of TCP clients allowed to connect the router which act as a TCP server.                                                                                                                                                                                                   | 32   |
| Connection Timeout    | If the TCP server does not receive any data from the slave device within the connection timeout period, the TCP connection will be broken.                                                                                                                                                           | 60   |
| Reading Interval      | Set the interval for reading remote channels. When a read cycle ends, the new read cycle begins until this interval expires. If it is set to 0, the device will restart the new read cycle after all channels have been read.                                                                        | 100  |
| Response Timeout      | Set the maximum response time that the router waits for the response to the command. If the device does not get a response after the maximum response time, it's determined that the command has timed out.                                                                                          | 3000 |
| Maximum Retries       | Set the maximum retry times after it fails to read.                                                                                                                                                                                                                                                  | 3    |
| <b>MQTT</b>           |                                                                                                                                                                                                                                                                                                      |      |
| Packet Size           | Set the size of the serial data frame. Packet will be sent out when preset frame size is reached. The range is 1-1024 bytes.                                                                                                                                                                         | 1024 |
| Serial Frame Interval | The interval that the router sends out real serial data stored in the buffer area to public network. The range is 10-65535 ms.<br><b>Note:</b> data will be sent out to public network when real serial data size reaches the preset packet size, even though it's within the serial frame interval. | 100  |
| MQTT Connection       | Select the MQTT connection to send serial port data, it's set up on <b>Service &gt; MQTT</b> page.                                                                                                                                                                                                   | Null |
| Type                  | Select Uplink or Downlink for this transparent mode. Every type supports to add 10 connections at most.                                                                                                                                                                                              | Null |
| Topic                 | Topic name used for publishing serial port data.                                                                                                                                                                                                                                                     | Null |
| Retain                | Enable to set the latest message of this topic as retain message.                                                                                                                                                                                                                                    | Null |
| QoS                   | QoS0, QoS1 or QoS2 are optional.                                                                                                                                                                                                                                                                     | Null |

Table 3-4-2-3 DTU Parameters



## Related Configuration Example

[DTU Application Example](#)

### 3.4.3 Modbus Server (Slave)

This section describes how to achieve I/O status via Modbus TCP, Modbus RTU and Modbus RTU over TCP.

#### 3.4.3.1 Modbus TCP

You can define the address of the DI and DO ports so as to poll DI's status and control DO's status via Modbus TCP protocol.

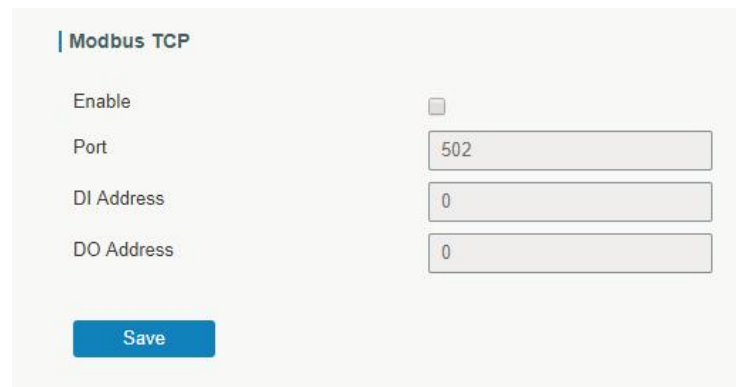


Figure 3-4-3-1

| Modbus TCP |                                                |         |
|------------|------------------------------------------------|---------|
| Item       | Description                                    | Default |
| Enable     | Enable/disable Modbus TCP.                     | Disable |
| Port       | Set the router listening port. Range: 1-65535. | 502     |
| DI Address | Define the address of DI, range: 0-255.        | 0       |
| DO Address | Define the address of DO, range: 0, 2-255.     | 0       |

Table 3-4-3-1 Modbus TCP Parameters

#### 3.4.3.2 Modbus RTU

You can define the address of the DI and DO ports so as to poll DI's status and control DO's status via Modbus RTU protocol.

**Modbus RTU**

Enable ☐

Serial Port serial 1

Server ID 1

DI Address 0

DO Address 0

**Save**

Figure 3-4-3-2

| Modbus RTU  |                                                                              |         |
|-------------|------------------------------------------------------------------------------|---------|
| Item        | Description                                                                  | Default |
| Enable      | Enable/disable Modbus RTU.                                                   | Disable |
| Serial Port | Select the corresponding serial port.                                        | serial  |
| Server ID   | Set server ID is used for distinguishing different devices on the same link. | 1       |
| DI Address  | Define the address of DI, range: 0-255.                                      | 0       |
| DO Address  | Define the address of DO, range: 0, 2-255.                                   | 0       |

Table 3-4-3-2 Modbus RTU Parameters

### 3.4.3.3 Modbus RTU Over TCP

You can define the address of the DI and DO ports so as to poll DI's status and control DO's status via Modbus RTU over TCP.

**Modbus RTU Over TCP**

Enable ☒

Server ID 1

Device ID

Reconnect Interval 10 s

DI Address 0

DO Address 0

Server List

| IP | Port | Status | Operation |
|----|------|--------|-----------|
| +  |      |        |           |

Figure 3-4-3-3

| Modbus RTU Over TCP |                                                                                                                |         |
|---------------------|----------------------------------------------------------------------------------------------------------------|---------|
| Item                | Description                                                                                                    | Default |
| Enable              | Enable/disable Modbus RTU over TCP function.                                                                   | Disable |
| Server ID           | Set server ID is used for distinguishing different devices on the same link.                                   | 1       |
| Device ID           | Set device ID. The server will get the device ID to the server for identifying identity so that the server can | --      |

|                       |                                                                                                         |    |
|-----------------------|---------------------------------------------------------------------------------------------------------|----|
|                       | manage multiple devices.                                                                                |    |
| Reconnection Interval | The reconnection interval when the device and the server fails to establish connection or disconnected. | 10 |
| DI Address            | Define the address of DI, range: 0-255.                                                                 | 0  |
| DO Address            | Define the address of DO, range: 0, 2-255.                                                              | 0  |
| <b>Server List</b>    |                                                                                                         |    |
| IP                    | Enter the IP address of the server.                                                                     |    |
| Port                  | Enter the port of the server.Range: 0-65535.                                                            |    |
| Status                | Show the connection status between the router and the server.                                           |    |

Table 3-4-3-3 Modbus RTU Over TCP Parameters

### 3.4.4 Modbus Client (Master)

UR35 router can be set as Modbus Client to poll the remote Modbus Server and send alarm according to the response.

#### 3.4.4.1 Modbus Client

**Modbus Client Setting**

Enable ☒

Read Interval  s

Max. Retries

Max. Response Time  ms

Execution Interval  ms

Channel Name

Figure 3-4-4-1

| Modbus Client         |                                                                                                                                                                                                                                                                                 |         |
|-----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| Item                  | Description                                                                                                                                                                                                                                                                     | Default |
| Enable                | Enable/disable Modbus client.                                                                                                                                                                                                                                                   | --      |
| Read Interval/s       | Set the interval for reading remote channels. When the read cycle ends, the commands which haven't been sent out will be discard, and the new read cycle begins. If it is set to 0, the device will restart the new read cycle after all channels have been read. Range: 0-600. | 300     |
| Max. Retries          | Set the maximum retry times after it fails to read, range: 0-5.                                                                                                                                                                                                                 | 3       |
| Max. Response Time/ms | Set the maximum response time that the router waits for the response to the command. If the device does not get a response after the maximum response time, it's determined that the command has timed out. Range: 10-1000.                                                     | 500     |

|                            |                                                              |    |
|----------------------------|--------------------------------------------------------------|----|
| Execution Interval/ms      | The execution interval between each command. Range: 10-1000. | 50 |
| Channel Name               | Select a readable channel form the channel list.             | -- |
| <b>Reset Modbus Client</b> |                                                              |    |
| Reset                      | Clear all configurations of the Modbus Client.               | -- |

Table 3-4-4-1

### 3.4.4.2 Channel Settings

On this page, you can add channels and configure the client parameters , so as to connect the router to the remote Modbus Server and execute the read/write function.

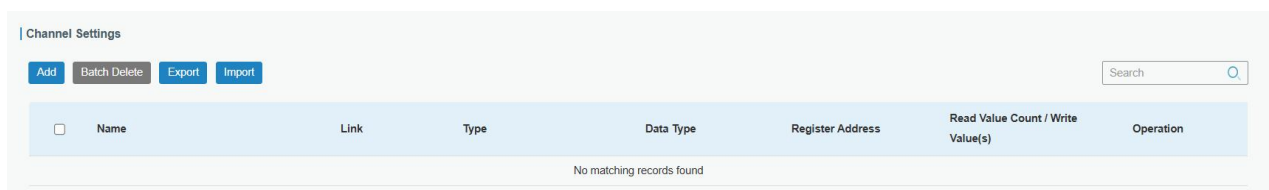


Figure 3-4-4-2

| Channel Setting |                                                   |
|-----------------|---------------------------------------------------|
| Item            | Description                                       |
| Add             | Add a single Modbus channel.                      |
| Batch Delete    | Delete multiple selected Modbus channels in bulk. |
| Export          | Export all added Modbus channels as a table.      |
| Import          | Batch-add Modbus channels using a CSV file.       |

Table 3-4-4-2

**Add**

Name

Link

Server ID

IP Address

Port

Type

Data Type

Sign ☐

Byte Order

Register Address

Write Value(s)

Read Value Count

Decimal Place

Test Connection

Figure 3-4-4-3

| Channel Setting |                                                                                                                                                                                                                              |
|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item            | Description                                                                                                                                                                                                                  |
| Name            | Set the name to identify the remote channel. It cannot be blank.                                                                                                                                                             |
| Server ID       | Set Modbus server ID.                                                                                                                                                                                                        |
| Address         | The starting address for Modbus reading.                                                                                                                                                                                     |
| Number          | The reading quantity from starting address.                                                                                                                                                                                  |
| Type            | Read command data type, options are Coil, Discrete, Holding Register (INT16), Input Register (INT16), Holding Register (INT32) and Holding Register (Float).                                                                 |
| Byte Order      | Order of storage or transmission of multibyte data.<br>Big-Endian: AB, ABCD; Little-Endian: BA, CDAB; Mixed-Endian: BADC, DCBA                                                                                               |
| Link            | Select serial port or TCP connection.<br><b>Serial Port:</b> the router communicates with devices via Modbus RTU protocol.<br><b>TCP:</b> the router communicates with devices via Modbus TCP protocol.                      |
| IP address      | When link is TCP, fill in the IP address of the remote Modbus TCP device.                                                                                                                                                    |
| Port            | When link is TCP, fill in the port of the remote Modbus TCP device.                                                                                                                                                          |
| Sign            | When type is holding register or input register, enable or disable to identify whether this channel is signed.                                                                                                               |
| Decimal Place   | When type is holding register or input register, indicate a dot in the read into the position of the channel. For example: read the channel value is 1234 and a Decimal Place is equal to 2, then the actual value is 12.34. |

Table 3-4-4-3

### 3.4.4.3 Alarm Settings

On this page, you can configure the alarm settings. If the read Modbus values meets the specified condition, the device performs a user-specified action, for example, sending an alarm content or a Modbus write request.

Figure 3-4-4-4

| Channel Setting |                                          |
|-----------------|------------------------------------------|
| Item            | Description                              |
| Add             | Add a single Alarm.                      |
| Batch Delete    | Delete multiple selected Alarms in bulk. |
| Export          | Export all added Alarms as a CSV file.   |
| Import          | Batch-add Alarms using a CSV file.       |

Table 3-4-4-5

Figure 3-4-4-5

| Add               |                                                                                                                      |
|-------------------|----------------------------------------------------------------------------------------------------------------------|
| Item              | Description                                                                                                          |
| Read Channel Name | Name of the channel to be read. Only channels configured with a read function code can be selected.                  |
| Condition         | The condition that triggers alert.                                                                                   |
| Min. Threshold    | Set the min. value to trigger the alert. When the actual value is less than this value, the alarm will be triggered. |
| Max.              | Set the max. value to trigger the alert. When the actual value is more than                                          |

|                    |                                                                                                                                                                                                                    |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Threshold          | this value, the alarm will be triggered.                                                                                                                                                                           |
| Alarm              | Select the alarm method as SMS or Email.                                                                                                                                                                           |
| SMS                | The preset alarm content will be sent to the specified phone number.                                                                                                                                               |
| Phone Group        | Select the phone group to receive the alarm SMS.                                                                                                                                                                   |
| Email Group        | Select the Email group to receive the alarm Email.                                                                                                                                                                 |
| Normal Content     | When the actual value is restored to the normal value from exceeding the threshold value, the router will automatically cancel the abnormal alarm and send the preset normal content to the specified phone group. |
| Abnormal Content   | When the actual value exceeds the preset threshold, the router will automatically trigger the alarm and send the preset abnormal content to the specified phone group.                                             |
| Continuous Alarm   | Once it is enabled, the same alarm will be continuously reported. Otherwise, the same alarm will be reported only one time.                                                                                        |
| Write Channel Name | Name of the channel to be written when an alarm is triggered. Only channels configured with a write function code can be selected.                                                                                 |

Table 3-4-4-5

TCP Forwarding

| Name | IP | Port | Operation |
|------|----|------|-----------|
| All  |    |      | ✕         |
|      |    |      | +         |

Figure 3-4-4-6

| TCP Forwarding |                                                                  |
|----------------|------------------------------------------------------------------|
| Item           | Description                                                      |
| Name           | The name of Modbus Client's channel.                             |
| IP             | The IP address of the server which the packets are forwarded to. |
| Port           | The port of the server's which the packets are forwarded to.     |

Table 3-4-4-6

### 3.4.4.4 Data Forwarding

UR35 router supports MQTT forwarding and TCP forwarding.

The MQTT forwarding function is used to transfer Modbus data (send requests, receive responses) over MQTT. When it is enabled, the router subscribes to a REQUEST topic and publishes on a RESPONSE topic on a specified MQTT broker. It translates received MQTT message payload to a Modbus request and relays it to the specified Modbus server.

MQTT Forwarding

| <input type="checkbox"/> | MQTT Connection           | Request Topic | Publish/Response Topic | QoS | Operation |
|--------------------------|---------------------------|---------------|------------------------|-----|-----------|
|                          | No matching records found |               |                        |     |           |

Figure 3-4-4-7

Add

MQTT Connection

Request Topic

Publish/Response Topic

Read Channel Name

QoS

Retain Flag

☐

Cancel

OK

Figure 3-4-4-8

| Add                    |                                                                                                       |
|------------------------|-------------------------------------------------------------------------------------------------------|
| Item                   | Description                                                                                           |
| MQTT Connections       | Select the MQTT connection to send Modbus channel data, it's set up on <b>Service &gt; MQTT</b> page. |
| Request Topic          | Topic name used for receiving Modbus channel data.                                                    |
| Publish/Response Topic | Topic name used for publishing Modbus channel data or responding to requests.                         |
| Read Channel Name      | Name of the channel to be read. Only channels configured with a read function code can be selected.   |
| QoS                    | QoS0, QoS1 or QoS2 are optional.                                                                      |
| Retain                 | Enable to set the latest message of this topic as retain message.                                     |

Table 3-4-4-7

When TCP forwarding is enabled, router reads the register data from the specified channel and forwards it to the designated TCP server.

TCP Forwarding

Add

Batch Delete

Export

Import

Search

☐

Name

IP

Port

Operation

No matching records found

Figure 3-4-4-9

Add

Name

IP

Please enter IP address

Port

Please enter port

Cancel

OK

Figure 3-4-4-10



| Add  |                                                                  |
|------|------------------------------------------------------------------|
| Item | Description                                                      |
| Name | The name of Modbus Client's channel.                             |
| IP   | The IP address of the server which the packets are forwarded to. |
| Port | The port of the server's which the packets are forwarded to.     |

Table 3-4-4-8

### 3.4.5 GPS (Only Applicable to GPS Version)

When you want to receive GPS data, you should enable GPS function on this page.




The screenshot shows a configuration interface with three tabs: 'GPS', 'GPS IP Forwarding', and 'GPS Serial Forwarding'. The 'GPS' tab is active. Below the tabs, there is an 'Enable' label followed by an unchecked checkbox. At the bottom, there is a blue 'Save' button.

Figure 3-4-5-1


#### 3.4.5.1 GPS IP Forwarding

GPS IP forwarding means that GPS data can be forwarded over the Internet.

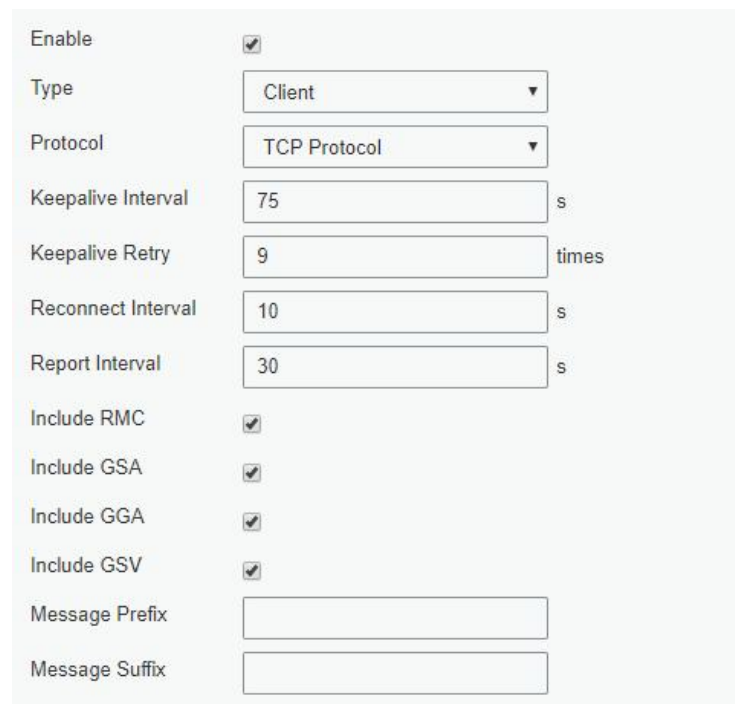

The screenshot shows the 'GPS IP Forwarding' configuration page. The 'Enable' checkbox is checked. Below it, there are several settings: 'Type' (Client), 'Protocol' (TCP Protocol), 'Keepalive Interval' (75 s), 'Keepalive Retry' (9 times), 'Reconnect Interval' (10 s), and 'Report Interval' (30 s). There are also checkboxes for 'Include RMC', 'Include GSA', 'Include GGA', and 'Include GSV', all of which are checked. At the bottom, there are input fields for 'Message Prefix' and 'Message Suffix'.

Figure 3-4-5-2

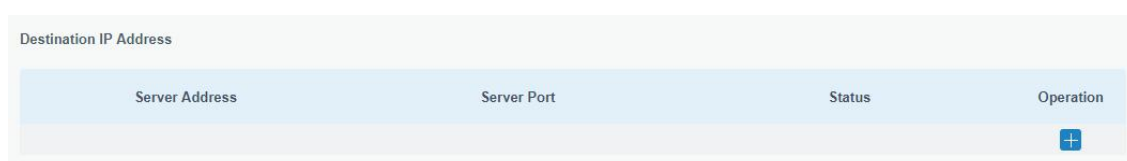

The screenshot shows a table titled 'Destination IP Address'. The table has four columns: 'Server Address', 'Server Port', 'Status', and 'Operation'. Below the table, there is a blue '+' button.

Figure 3-4-5-3

| GPS IP Forwarding      |                                                                                                                                                                  |         |
|------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| Item                   | Description                                                                                                                                                      | Default |
| Enable                 | Forward the GPS data to the client or server.                                                                                                                    | Disable |
| Type                   | Select connection type of the router as Client or Server.                                                                                                        | Client  |
| Protocol               | Select protocol of data transmission as TCP or UDP.                                                                                                              | TCP     |
| Keepalive Interval     | After it's connected with server/client, the router will send heartbeat packet regularly to the server/client to keep alive. The interval range is 1-3600 s.     | 75      |
| Keepalive Retry        | When TCP heartbeat times out, the router will resend heartbeat. After it reaches the preset retry times, router will reconnect to TCP server. The range is 1-16. | 9       |
| Local Port             | Set the router listening port. Range: 1-65535.                                                                                                                   |         |
| Reconnect Interval     | After connection failure, router will reconnect to the server at the preset interval. The range is 10-60 s.                                                      | 10      |
| Report Interval        | Router will send GPS data to the server/client at the preset interval. The range is 1-60 s.                                                                      | 30      |
| Include RMC            | RMC includes time, date, position, course and speed data.                                                                                                        | --      |
| Include GSA            | GSA includes GPS receiver operating mode, satellites used in the position solution, and DOP values.                                                              | --      |
| Include GGA            | GGA includes time, position and fix type data.                                                                                                                   | --      |
| Include GSV            | GSV includes the number, elevation, azimuth of GPS satellites and SNR values.                                                                                    | --      |
| Message Prefix         | Add a prefix to the GPS data.                                                                                                                                    | Null    |
| Message Suffix         | Add a suffix to the GPS data.                                                                                                                                    | Null    |
| Destination IP Address |                                                                                                                                                                  |         |
| Server Address         | Fill in the server address to receive GPS data (IP/domain name).                                                                                                 | --      |
| Server Port            | Fill in the port to receive GPS data. Range: 1-65535.                                                                                                            | --      |
| Status                 | Show the connection status between the router and the server.                                                                                                    | --      |

Table 3-4-5-1 GPS IP Forwarding Parameters

### 3.4.5.2 GPS Serial Forwarding

GPS IP forwarding means that GPS data can be forwarded to the serial port.

**GPS Serial Forwarding**

Enable ☒

Serial Type

Trap Interval

Include RMC ☒

Include GSA ☒

Include GGA ☒

Include GSV ☒

Figure 3-4-5-4

| GPS Serial Forwarding |                                                                                                                         |         |
|-----------------------|-------------------------------------------------------------------------------------------------------------------------|---------|
| Item                  | Description                                                                                                             | Default |
| Enable                | Forward the GPS data to the preset serial port.                                                                         | Disable |
| Serial Type           | Select the serial port to receive GPS data. Ensure that the serial port is enabled on <b>Service &gt; Serial Port</b> . | --      |
| Report Interval       | Router will forward the GPS data to the serial port at the preset interval. The range is 1-60 s.                        | 30      |
| Include RMC           | RMC includes time, date, position, course and speed data.                                                               | --      |
| Include GSA           | GSA includes GPS receiver operating mode, satellites used in the position solution, and DOP values.                     | --      |
| Include GGA           | GGA includes time, position and fix type data.                                                                          | --      |
| Include GSV           | GSV includes the number, elevation, azimuth of GPS satellites and SNR values.                                           | --      |

Table 3-4-5-2 GPS Serial Forwarding Parameters

### 3.4.5.3 GPS MQTT Forward

GPS MQTT forward means that GPS raw data can be forwarded to MQTT broker automatically.

Enable ☒

Trap Interval

Include RMC ☒

Include GSA ☒

Include GGA ☒

Include GSV ☒

**MQTT Forward**

| MQTT Connections              | Topic                         | Retain                   | QoS                                | Operation                                                                    |
|-------------------------------|-------------------------------|--------------------------|------------------------------------|------------------------------------------------------------------------------|
| <input type="text" value=""/> | <input type="text" value=""/> | <input type="checkbox"/> | <input type="text" value="QoS 0"/> | <input checked="" type="button" value="X"/> <input type="button" value="+"/> |

Figure 3-4-5-5

| GPS MQTT Forward |                                                                                                     |         |
|------------------|-----------------------------------------------------------------------------------------------------|---------|
| Item             | Description                                                                                         | Default |
| Enable           | Forward the GPS data to MQTT broker automatically.                                                  | Disable |
| Trap Interval    | The interval to locate and forward the GPS data to the MQTT broker. The range is 1-60 s.            | 30      |
| Include RMC      | RMC includes time, date, position, course and speed data.                                           | --      |
| Include GSA      | GSA includes GPS receiver operating mode, satellites used in the position solution, and DOP values. | --      |
| Include GGA      | GGA includes time, position and fix type data.                                                      | --      |
| Include GSV      | GSV includes the number, elevation, azimuth of GPS satellites and SNR values.                       | --      |
| MQTT Forward     |                                                                                                     |         |
| MQTT Connections | Select the MQTT connection to send GPS data, it's set up on <b>Service &gt; MQTT</b> page.          |         |
| Topic            | Topic name for publishing GPS raw data.                                                             |         |
| Retain           | Enable to set the latest message of this topic as retain message.                                   |         |
| QoS              | QoS0, QoS1 or QoS2 are optional.                                                                    |         |

Table 3-4-5-3 GPS MQTT Forward Parameters

### 3.4.6 MQTT

UR35 supports to work as MQTT client to forward data and router information to MQTT broker in two ways:

1. Users send requests to the router to enquire the router information;
2. The router publishes the data automatically.

| MQTT        |           |                    |              |                                                                                                                                                                             |
|-------------|-----------|--------------------|--------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Connections |           |                    |              |                                                                                                                                                                             |
| ID          | Name      | Address            | Status       | Operation                                                                                                                                                                   |
| 1           | mqtttest1 | 192.168.44.54:1883 | Connected    |   |
| 2           | 555       | 666:1883           | Disconnected |   |
|             |           |                    |              |                                                                                        |

Figure 3-4-6-1

MQTT

Status

Disable

General

Name

Enable

☒

Broker Address

Broker Port

1883

Client ID

24:e1:24:f2:63:10\_linyptjr

Connection Timeout(s)

30

Keep Alive Interval(s)

60

Auto Reconnect

☒

Reconnect Period

4

Clean Session

☐

User Credentials

Enable

☒

Username

Password

TLS

Enable

☒

Mode

CA signed server certificate ▼

Figure 3-4-6-2

**Last Will and Testament**

Enable ☒

Last-Will Topic

Last-Will QoS

Last-Will Retain ☐

Last-Will Payload

**Request and Response Topic**

| Data Type       | Topic                | Retain                   | QoS                                |
|-----------------|----------------------|--------------------------|------------------------------------|
| Status Request  | <input type="text"/> |                          | <input type="text" value="QoS 0"/> |
| Status Response | <input type="text"/> | <input type="checkbox"/> | <input type="text" value="QoS 0"/> |

**System Status Publish Topic**

| Data Type     | Topic                | Publish Interval(s)  | Retain                   | QoS                                |
|---------------|----------------------|----------------------|--------------------------|------------------------------------|
| System Info   | <input type="text"/> | <input type="text"/> | <input type="checkbox"/> | <input type="text" value="QoS 0"/> |
| System Status | <input type="text"/> | <input type="text"/> | <input type="checkbox"/> | <input type="text" value="QoS 0"/> |
| Cellular      | <input type="text"/> | <input type="text"/> | <input type="checkbox"/> | <input type="text" value="QoS 0"/> |
| Ethernet      | <input type="text"/> | <input type="text"/> | <input type="checkbox"/> | <input type="text" value="QoS 0"/> |
| GPS           | <input type="text"/> | <input type="text"/> | <input type="checkbox"/> | <input type="text" value="QoS 0"/> |

Figure 3-4-6-3

| MQTT Settings         |                                                                                                                                                                                         |
|-----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item                  | Description                                                                                                                                                                             |
| Status                | Show connection status between router and MQTT broker.                                                                                                                                  |
| <b>General</b>        |                                                                                                                                                                                         |
| Name                  | Customize a unique connection name. It is not allowed to change after save.                                                                                                             |
| Enable                | Enable or disable this MQTT connection.                                                                                                                                                 |
| Broker Address        | MQTT broker address to receive data.                                                                                                                                                    |
| Broker Port           | MQTT broker port to receive data.                                                                                                                                                       |
| Client ID             | Client ID is the unique identity of the client to the server. It must be unique when all clients are connected to the same server, and it is the key to handle messages at QoS 1 and 2. |
| Connection Timeout/s  | If the client does not get a response after the connection timeout, the connection will be considered as broken. The Range: 1-65535.                                                    |
| Keep Alive Interval/s | After the client is connected to the server, the client will send heartbeat packet to the server regularly to keep alive. Range: 1-65535.                                               |
| Auto                  | When connection is broken, try to reconnect the server automatically.                                                                                                                   |

|                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Reconnect                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Reconnect Period                   | When connection is broken, the period to reconnect the server periodically.                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Clean Session                      | When enabled, the connection will create a temporary session and all information will lose when the client is disconnected from broker; when disabled, the connection will create a persistent session that will remain and save offline messages until the session logs out overtime.                                                                                                                                                                                                                                              |
| <b>User Credentials</b>            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Enable                             | Enable user credentials.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Username                           | The username used for connecting to the MQTT broker.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Password                           | The password used for connecting to the MQTT broker.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>TLS</b>                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Enable                             | Enable the TLS encryption in MQTT communication.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Mode                               | Select from Self signed certificates, CA signed server certificate.<br><b>CA signed server certificate:</b> verify with the certificate issued by Certificate Authority (CA) that pre-loaded on the device.<br><b>Self signed certificates:</b> upload the custom CA certificates, client certificates and secret key for verification.                                                                                                                                                                                             |
| <b>Last Will and Testament</b>     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Enable                             | Last will message is automatically sent when the MQTT client is abnormally disconnected. It is usually used to send device status information or inform other devices or proxy servers of the device's offline status.                                                                                                                                                                                                                                                                                                              |
| Last-Will Topic                    | Customize the topic to receive last will messages.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Last-Will QoS                      | QoS0, QoS1 or QoS2 are optional.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Last-Will Retain                   | Enable to set last will message as retain message.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Last-Will Payload                  | Customize the last will message contents.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Request and Response Topic</b>  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Topic                              | The router supports to send requests to enquire router information.<br><b>Status Request:</b> users is able to send requests to this topic to enquire router information. Request format:<br><pre>{   "id": "1",   "status": "systeminfo",   "sn": "64E1213132456",   "need_response": 1    //1 means need response }</pre> The id is a random value, and the status can be set as 5 types: systeminfo, systemstatus, cellular, ethernet, gps.<br><b>Status Response:</b> users is able to subscribe this topic to get the replies. |
| Retain                             | Enable to set the latest message of this topic as retain message.                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| QoS                                | QoS0, QoS1 or QoS2 are optional.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>System Status Publish Topic</b> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |

|                      |                                                                                                                        |
|----------------------|------------------------------------------------------------------------------------------------------------------------|
| Data Type            | Data type sent to MQTT broker automatically. Note that the GPS in this page is not raw data but decoded location data. |
| Topic                | Topic name of the data type used for publishing.                                                                       |
| Publish Interval (s) | The interval to publish data to MQTT broker automatically.                                                             |
| Retain               | Enable to set the latest message of this topic as retain message.                                                      |
| QoS                  | QoS0, QoS1 or QoS2 are optional.                                                                                       |

Table 3-4-6-1 MQTT Parameters

### 3.4.7 SNMP

SNMP is widely used in network management for network monitoring. SNMP exposes management data with variables form in managed system. The system is organized in a management information base (MIB) which describes the system status and configuration. These variables can be remotely queried by managing applications.

Configuring SNMP in networking, NMS, and a management program of SNMP should be set up at the Manager.

Configuration steps are listed as below for achieving query from NMS:

1. Enable SNMP setting.
2. Download MIB file and load it into NMS.
3. Configure MIB View.
4. Configure VCAM.

#### Related Configuration Example

[SNMP Application Example](#)

#### 3.4.7.1 SNMP

UR35 supports SNMPv1, SNMPv2c and SNMPv3 version. SNMPv1 and SNMPv2c employ community name authentication. SNMPv3 employs authentication encryption by username and password.

The screenshot shows a web-based configuration interface for SNMP. At the top, there are five tabs: 'SNMP', 'MIB View', 'VACM', 'Trap', and 'MIB'. The 'SNMP' tab is selected and highlighted with a blue underline. Below the tabs, the section is titled 'SNMP Settings'. It contains several configuration items: 'Enable' with a checked checkbox, 'Port' with a text input field containing '161', 'SNMP Version' with a dropdown menu showing 'SNMPv2', 'Location Information' with a text input field containing '225\_location', and 'Contact Information' with a text input field containing '225\_Contact'. At the bottom left of the settings area is a blue 'Save' button.

Figure 3-4-7-1



| SNMP Settings        |                                                                     |
|----------------------|---------------------------------------------------------------------|
| Item                 | Description                                                         |
| Enable               | Enable or disable SNMP function.                                    |
| Port                 | Set SNMP listened port. Range: 1-65535.<br>The default port is 161. |
| SNMP Version         | Select SNMP version; support SNMP v1/v2c/v3.                        |
| Location Information | Fill in the location information.                                   |
| Contact Information  | Fill in the contact information.                                    |

Table 3-4-7-1 SNMP Parameters

### 3.4.7.2 MIB View

This section explains how to configure MIB view for the objects.

| View Name | View Filter | View OID      | Operation |
|-----------|-------------|---------------|-----------|
| All       | Included    | 1             | X         |
| system    | Included    | 1.3.6.1.2.1.1 | X         |
|           |             |               | +         |

Figure 3-4-7-2

| MIB View    |                                                            |
|-------------|------------------------------------------------------------|
| Item        | Description                                                |
| View Name   | Set MIB view's name.                                       |
| View Filter | Select from "Included" and "Excluded".                     |
| View OID    | Enter the OID number.                                      |
| Included    | You can query all nodes within the specified MIB node.     |
| Excluded    | You can query all nodes except for the specified MIB node. |

Table 3-4-7-2 MIB View Parameters

### 3.4.7.3 VACM

This section describes how to configure VACM parameters.

| Community | Permission | MIB View | Network   | Operation |
|-----------|------------|----------|-----------|-----------|
| private   | Read-Write | All      | 0.0.0.0/0 | X         |
| public    | Read-Write | All      | 0.0.0.0/0 | X         |
|           |            |          |           | +         |

Figure 3-4-7-3

| VACM                              |                                                                              |
|-----------------------------------|------------------------------------------------------------------------------|
| Item                              | Description                                                                  |
| <b>SNMP v1 &amp; v2 User List</b> |                                                                              |
| Community                         | Set the community name.                                                      |
| Permission                        | Select from "Read-Only" and "Read-Write".                                    |
| MIB View                          | Select an MIB view to set permissions from the MIB view list.                |
| Network                           | The IP address and bits of the external network accessing the MIB view.      |
| Read-Write                        | The permission of the specified MIB node is read and write.                  |
| Read-Only                         | The permission of the specified MIB node is read only.                       |
| <b>SNMP v3 User Group</b>         |                                                                              |
| Group Name                        | Set the name of SNMPv3 group.                                                |
| Security Level                    | Select from "NoAuth/NoPriv", "Auth/NoPriv", and "Auth/Priv".                 |
| Read-Only View                    | Select an MIB view to set permission as "Read-only" from the MIB view list.  |
| Read-Write View                   | Select an MIB view to set permission as "Read-write" from the MIB view list. |
| Inform View                       | Select an MIB view to set permission as "Inform" from the MIB view list.     |
| <b>SNMP v3 User List</b>          |                                                                              |
| Username                          | Set the name of SNMPv3 user.                                                 |
| Group Name                        | Select a user group to be configured from the user group.                    |
| Authentication                    | Select from "MD5", "SHA", and "None".                                        |
| Authentication Password           | The password should be filled in if authentication is "MD5" and "SHA".       |
| Encryption                        | Select from "AES", "DES", and "None".                                        |
| Encryption Password               | The password should be filled in if encryption is "AES" and "DES".           |

Table 3-4-7-3 VACM Parameters

### 3.4.7.4 Trap

This section explains how to enable network monitoring by SNMP trap.

Figure 3-4-7-4

| SNMP Trap      |                                                                                         |
|----------------|-----------------------------------------------------------------------------------------|
| Item           | Description                                                                             |
| Enable         | Enable or disable SNMP Trap function.                                                   |
| SNMP Version   | Select SNMP version; support SNMP v1/v2c/v3.                                            |
| Server Address | Fill in NMS's IP address or domain name.                                                |
| Port           | Fill in UDP port. Port range is 1-65535. The default port is 162.                       |
| Name           | Fill in the group name when using SNMP v1/v2c; fill in the username when using SNMP v3. |
| Auth/Priv Mode | Select from "NoAuth & No Priv", "Auth & NoPriv", and "Auth & Priv".                     |

Table 3-4-7-4 Trap Parameters

### 3.4.7.5 MIB

This section describes how to download MIB files. The last MIB file "LTE-ROUTER-MIB.txt" is for the UR35 router.

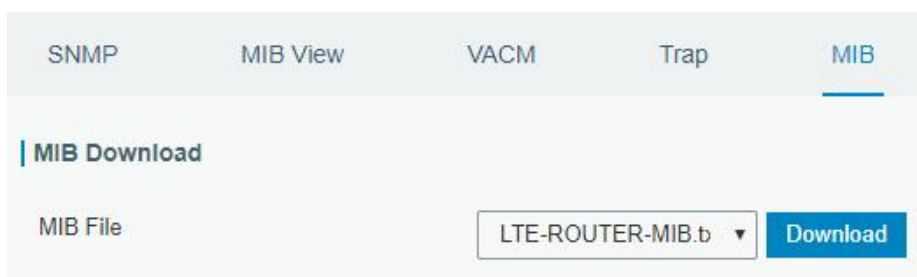


Figure 3-4-7-5

| MIB      |                                                         |
|----------|---------------------------------------------------------|
| Item     | Description                                             |
| MIB File | Select the MIB file you need.                           |
| Download | Click "Download" button to download the MIB file to PC. |

Table 3-4-7-5 MIB Download

### 3.4.8 TR069

Technical Report 069 (TR-069) is a technical specification of Broadband Forum that defines an application layer protocol for remote management and provisioning of customer-premises equipment (CPE) connected to an Internet Protocol (IP) network.

TR-069

TR-069

Enable ☒

Status

Last Inform -

ACS Setting

URL

ACS Username

ACS Password

CPE Setting

Enable Period Inform ☒

Period Inform Interval(s)

CPE Username

CPE Password

Save

Figure 3-4-8-1

| TR-069                     |                                                                                              |
|----------------------------|----------------------------------------------------------------------------------------------|
| Item                       | Description                                                                                  |
| Enable                     | Enable or disable TR069 feature.                                                             |
| Last Inform                | The last time the router informed to TR069 ACS.                                              |
| ACS Setting                |                                                                                              |
| URL                        | The URL of TR069 auto configuration server (ACS).                                            |
| ACS Username               | The username used by ACS to authenticate the CPE when it initiates a connection request.     |
| ACS Password               | The password used by ACS to authenticate the CPE when it initiates a connection request.     |
| CPE Setting                |                                                                                              |
| Enable Period Inform       | Enable or disable inform periodically.                                                       |
| Period Inform Interval (s) | The interval to report information to ACS, this should be less than the timeout of peer ACS. |
| CPE Username               | The username used by CPE to authenticate the ACS when it initiates a connection request.     |
| CPE Password               | The password used by CPE to authenticate the ACS when it initiates a connection request.     |

Table 3-4-8-1 TR069 Parameters

3.4.9 DLMS

UR35 supports periodically enquiring data from meters and uploading it to the platform.

3.4.9.1 Physical Device Settings

This section describes how to configure the defined data frame format and interactive command mode on the router to achieve mutual authentication with the meter, mode selection, and data read and write request reply.

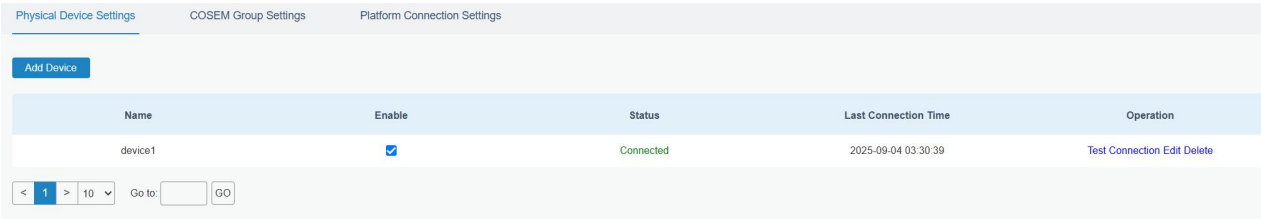


Figure 3-4-9-1

| Physical Device List |                                                                                                                                                                                                                                                                                               |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item                 | Description                                                                                                                                                                                                                                                                                   |
| Add Device           | Add a new physical device. The number of physical device is limited to 30.                                                                                                                                                                                                                    |
| Name                 | The name of the physical device.                                                                                                                                                                                                                                                              |
| Enable               | Enable/disable the physical device.                                                                                                                                                                                                                                                           |
| Status               | Displays the connection status of the physical device.                                                                                                                                                                                                                                        |
| Last Connection Time | Displays the last connection time of the physical device.                                                                                                                                                                                                                                     |
| Operation            | <b>Test Connection:</b> Tests whether the physical device can be accessed normally. The test result will be returned after completion.<br><b>Edit:</b> Edit the parameters of an added physical device.<br><b>Delete:</b> Delete the added physical device. Devices in use cannot be deleted. |

Table 3-4-9-1 Physical Device Setting

Add Device

Enable

☒

Serial

Device Name

Server Address

Logical Server Address

1

Client Address

16

Access security

None

Transport Security

None

OK

Cancel

Figure 3-4-9-2

| Add Device                   |                                                                                                                                                                                                                                                          |         |
|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| Item                         | Description                                                                                                                                                                                                                                              | Default |
| Enable                       | Enable/disable the physical device.                                                                                                                                                                                                                      | Enable  |
| Serial                       | Select the serial port where the physical device is connected.                                                                                                                                                                                           | --      |
| Device Name                  | The name of the physical device. This name is used in the COSEM group settings to reference the added physical device.                                                                                                                                   | --      |
| Server Address               | Enter the server address of the physical device. This information is usually provided in the physical device's user manual.                                                                                                                              | --      |
| Logical Server Address       | Enter the logical server address of the physical device. This information is usually provided in the physical device's user manual. The server address and logical server address of different physical devices cannot both be identical.                | 1       |
| Client Address               | According to standard definitions, the client address is related to user permissions. Each client address represents a different access security level. This information is usually provided in the physical device's user manual.                       | 16      |
| Access security              | Authentication allows the physical device (Server) to permit this device (Client) to access data with different permission levels. If set to None, no authentication will be performed, and only read access will be allowed.                            | None    |
| Password                     | Set the password for this device (Client) to access the physical device (Server).                                                                                                                                                                        | --      |
| Transport security           | Configure the transmission encryption method for this device (Client) when accessing the physical device (Server).                                                                                                                                       | None    |
| Invocation Counter OBIS Code | Used in specific connection security modes. It specifies the OBIS Code of the device's Invocation Counter. Each time encrypted communication is initiated, the device increments the Invocation Counter by one for comparison and security verification. | --      |
| Authentication Key           | Used in specific authentication and connection security modes. Set the authentication key of the physical device, usually provided in the physical device's user manual.                                                                                 | --      |
| Block Cipher Key             | Used in specific authentication and connection security modes. Set the block cipher key of the physical device, usually provided in the physical device's user manual.                                                                                   | --      |
| Dedicated Key                | A 16-octet value sent by the client to the server during connection establishment. The dedicated key may be regenerated randomly before each connection. Some                                                                                            | --      |

|  |                                                                |  |
|--|----------------------------------------------------------------|--|
|  | physical devices expect the dedicated key to be a fixed value. |  |
|--|----------------------------------------------------------------|--|

Table 3-4-9-2 Physical Device Parameters

### 3.4.9.2 COSEM Group Settings

COSEM groups are a convenient way to organize the OBIS codes that you want to send to the remote data collection server. You can add OBIS from different physical devices to the same COSEM group.

Figure 3-4-9-3

| COSEM Group List |                                                                                                                                                                                                                                                                            |
|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item             | Description                                                                                                                                                                                                                                                                |
| Add Group        | Add a new COSEM group. The number of COSEM groups is up to 10 and the COSEM objects is up to 30 in each group.                                                                                                                                                             |
| Name             | The name of the COSEM group.                                                                                                                                                                                                                                               |
| Enable           | Enable/disable the COSEM group.                                                                                                                                                                                                                                            |
| Operation        | <b>Test:</b> Test whether the COSEM group can successfully collect data. The test result will be returned after completion.<br><b>Edit:</b> Edit the parameters of the COSEM group.<br><b>Delete:</b> Delete the added COSEM group. COSEM groups in use cannot be deleted. |

Table 3-4-9-3 COSEM Group List

Figure 3-4-9-4

| Edit     |                                                                                                                                                   |         |
|----------|---------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| Item     | Description                                                                                                                                       | Default |
| Enable   | Enable/disable the COSEM group.                                                                                                                   | /       |
| Name     | The name of the COSEM group. This name is used in places such as platform connections to select the COSEM group for reporting.                    | /       |
| Interval | Read data from the COSEM group at the specified time interval. If the COSEM group is selected in a platform connection, the data will be reported | 60      |

|             |                                           |  |
|-------------|-------------------------------------------|--|
|             | immediately after reading.                |  |
| COSEM Value | Add a new COSEM Value to the COSEM group. |  |

Table 3-4-9-4 COSEM Group Parameters

**Single Add**

Enable ☒

COSEM Value Name

Physical Device

OBIS Code/Short Name

COSEM Class ID

Figure 3-4-9-5

| Item             | Description                                                                                                                                                                       |
|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| COSEM Value Name | Set the name of the COSEM Value.                                                                                                                                                  |
| Physical Device  | Select the physical device(s) associated with the COSEM Value. Multiple selections are allowed.                                                                                   |
| OBIS Code        | The OBIS Code value of the COSEM Value.                                                                                                                                           |
| COSEM Class ID   | The Class ID to which the COSEM Value belongs.                                                                                                                                    |
| Scan             | Scan the selected physical devices for OBIS objects they have in common. Click Apply to fill the parameters of the OBIS object into the corresponding configuration fields above. |

Table 3-4-9-5 COSEM Value Parameters

### 3.4.9.3 Platform Connection Settings

The router supports data reporting via MQTT or HTTP and data caching.

Physical Device Settings COSEM Group Settings Platform Connection Settings

| Name | Connection Type | Enable | Status | Operation |
|------|-----------------|--------|--------|-----------|
|------|-----------------|--------|--------|-----------|

Figure 3-4-9-6

| Platform Connection Settings |                                                                               |
|------------------------------|-------------------------------------------------------------------------------|
| Item                         | Description                                                                   |
| Add Connection               | Add a new platform connection. The number of connection platforms is up to 3. |
| Name                         | Set the name of the platform connection.                                      |
| Connection Type              | Set the connection type to MQTT or HTTP.                                      |
| Enable                       | Enable/disable the platform connection.                                       |
| Status                       | Show the status of platform connection.                                       |



|           |                                                                 |
|-----------|-----------------------------------------------------------------|
| Operation | You can edit the platform configuration or delete the platform. |
|-----------|-----------------------------------------------------------------|

Table 3-4-9-6 Platform Connection Settings

**Add Connection**

**Server Settings**

Enable ☒

Name

Connection Type

**Data Settings**

Format Type

Data Filtering

Invert ☐

Send as object ☐

Values

OK Cancel

Figure 3-4-9-7

| Add Connection  |                                                                                                                                                                                                                                                                                         |         |
|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| Item            | Description                                                                                                                                                                                                                                                                             |         |
| Server Settings |                                                                                                                                                                                                                                                                                         |         |
| Enable          | Enable/disable the platform connection.                                                                                                                                                                                                                                                 | Enable  |
| Name            | Set the name of the platform connection.                                                                                                                                                                                                                                                | /       |
| Connection Type | Set the connection type to MQTT or HTTP.                                                                                                                                                                                                                                                | /       |
| Server Address  | The HTTP server address to which the data will be sent.                                                                                                                                                                                                                                 | /       |
| HTTP Header     | Headers are name/value pairs that appear in both request and response messages. HTTP headers provide the web server with information about the type of browser making the request. The format must be [Key: Value], e.g., [Content-Type:application/json]. Up to 30 pairs can be added. | /       |
| Retry           | Whether to attempt resending when sending fails.                                                                                                                                                                                                                                        | Disable |
| Retry Count     | The number of resend attempts.                                                                                                                                                                                                                                                          | 3       |
| Retry Interval  | The time interval between each resend attempt.                                                                                                                                                                                                                                          | 10      |
| MQTT Connection | Select an MQTT connection that has already been added in <b>Service &gt; MQTT</b> .                                                                                                                                                                                                     | /       |
| Topic           | The MQTT topic for subscription or publication.                                                                                                                                                                                                                                         | /       |
| Retain          | Enable/disable the MQTT retained message flag. When enabled, a published message will be stored on the broker so that any client subscribing to the topic later can receive                                                                                                             | Disable |

|                         |                                                                                                                                                                                                                                                                                              |         |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
|                         | the message.                                                                                                                                                                                                                                                                                 |         |
| QoS                     | <b>QoS 0:</b> At most once delivery.<br><b>QoS 1:</b> At least once delivery, until a PUBACK is received from the service; may result in multiple retransmissions.<br><b>QoS 2:</b> Exactly once delivery; ensures each message is received only once, the safest but slowest service level. | Qos0    |
| <b>Data Settings</b>    |                                                                                                                                                                                                                                                                                              |         |
| Format Type             | Select the message format type used for sending data.<br><b>JSON:</b> Standard JSON format.<br><b>Custom:</b> Custom format, supports custom variables.                                                                                                                                      | JSON    |
| Data Filter             | Specify which COSEM group(s) to include in the transmitted COSEM data.<br><b>All:</b> All COSEM groups.<br><b>Custom:</b> Custom selection of COSEM groups.                                                                                                                                  | All     |
| COSEM Group             | Select the COSEM group whose data will be sent to the server.                                                                                                                                                                                                                                | /       |
| Invert                  | Reverse filtering. When selected, the system will send data from all COSEM groups except those selected above.                                                                                                                                                                               | Disable |
| Cache Segmented Sending | Specify whether multiple cached data segments that failed to send should be sent separately.                                                                                                                                                                                                 | Enable  |
| Values                  | Select which data to include in the reported JSON.                                                                                                                                                                                                                                           | /       |
| Format String           | Customize the reported content. Supports variables and text.                                                                                                                                                                                                                                 | /       |

Table 3-4-9-7 Platform Connection Parameters

## 3.5 Maintenance

This section describes system maintenance tools and management.

### 3.5.1 Tools

Troubleshooting tools includes ping, traceroute, packet analyzer and qxdmlog.

#### 3.5.1.1 Ping

Ping tool is engineered to ping outer network.

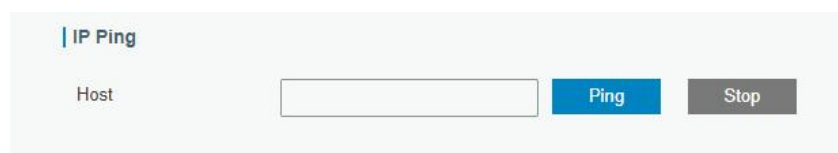


Figure 3-5-1-1

| PING |                                     |
|------|-------------------------------------|
| Item | Description                         |
| Host | Ping outer network from the router. |

Table 3-5-1-1 IP Ping Parameters

### 3.5.1.2 Traceroute

Traceroute tool is used for troubleshooting network routing failures.

The Traceroute tool interface features a title bar with the text "Traceroute". Below the title bar, there is a label "Host" followed by a text input field. To the right of the input field are two buttons: a blue "Trace" button and a grey "Stop" button.

Figure 3-5-1-2

| Traceroute |                                                 |
|------------|-------------------------------------------------|
| Item       | Description                                     |
| Host       | Address of the destination host to be detected. |

Table 3-5-1-2 Traceroute Parameters

### 3.5.1.3 Packet Analyzer

Packet Analyzer is used for capturing the packet of different interfaces.

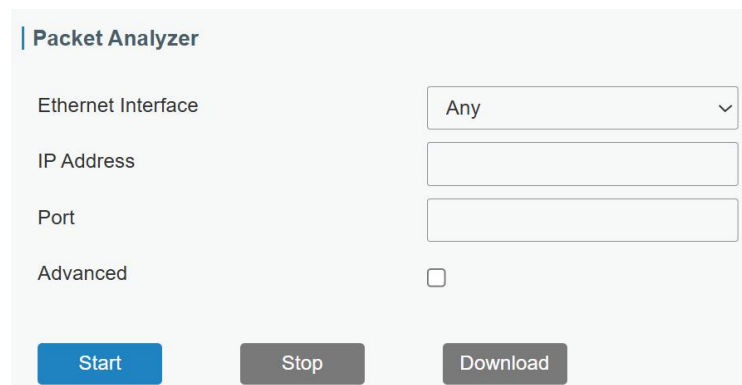
The Packet Analyzer tool interface has a title bar with the text "Packet Analyzer". Below the title bar, there are four labels: "Ethernet Interface", "IP Address", "Port", and "Advanced". The "Ethernet Interface" label is followed by a dropdown menu showing "Any". The "IP Address" and "Port" labels are followed by text input fields. The "Advanced" label is followed by a checkbox. At the bottom of the interface are three buttons: a blue "Start" button, a grey "Stop" button, and a grey "Download" button.

Figure 3-5-1-3

| Packet Analyzer    |                                                   |
|--------------------|---------------------------------------------------|
| Item               | Description                                       |
| Ethernet Interface | Select the interface to capture packages.         |
| IP Address         | Set the IP address that the router will capture.  |
| Port               | Set the port that the router will capture.        |
| Advanced           | Set the rules for sniffer. The format is tcpdump. |

Table 3-5-1-3 Packet Analyzer Parameters

### 3.5.1.4 Qxdmlog

This section allow collecting diagnostic logs via QXDM tool.

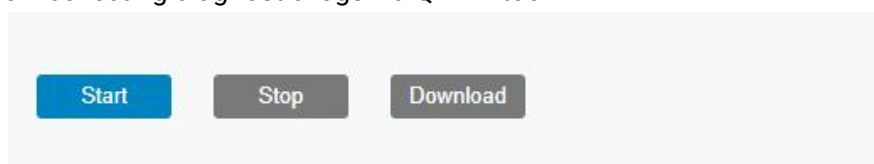
The Qxdmlog tool interface consists of three buttons arranged horizontally: a blue "Start" button, a grey "Stop" button, and a grey "Download" button.

Figure 3-5-1-4

### 3.5.2 Debugger

#### 3.5.2.1 Cellular Debugger

This section explains how to send AT commands to router and check cellular debug information.

Figure 3-5-2-1

| Cellular Debugger        |                                                               |
|--------------------------|---------------------------------------------------------------|
| Item                     | Description                                                   |
| Command                  | Enter the AT command that you want to send to cellular modem. |
| View Recent Logs (lines) | View the specified lines of the result.                       |
| Result                   | Show the response result from cellular modem.                 |

Table 3-5-2-1 Cellular Debugger Parameters

#### 3.5.2.2 Firewall Debugger

This section explains how to send commands to router and check firewall information.

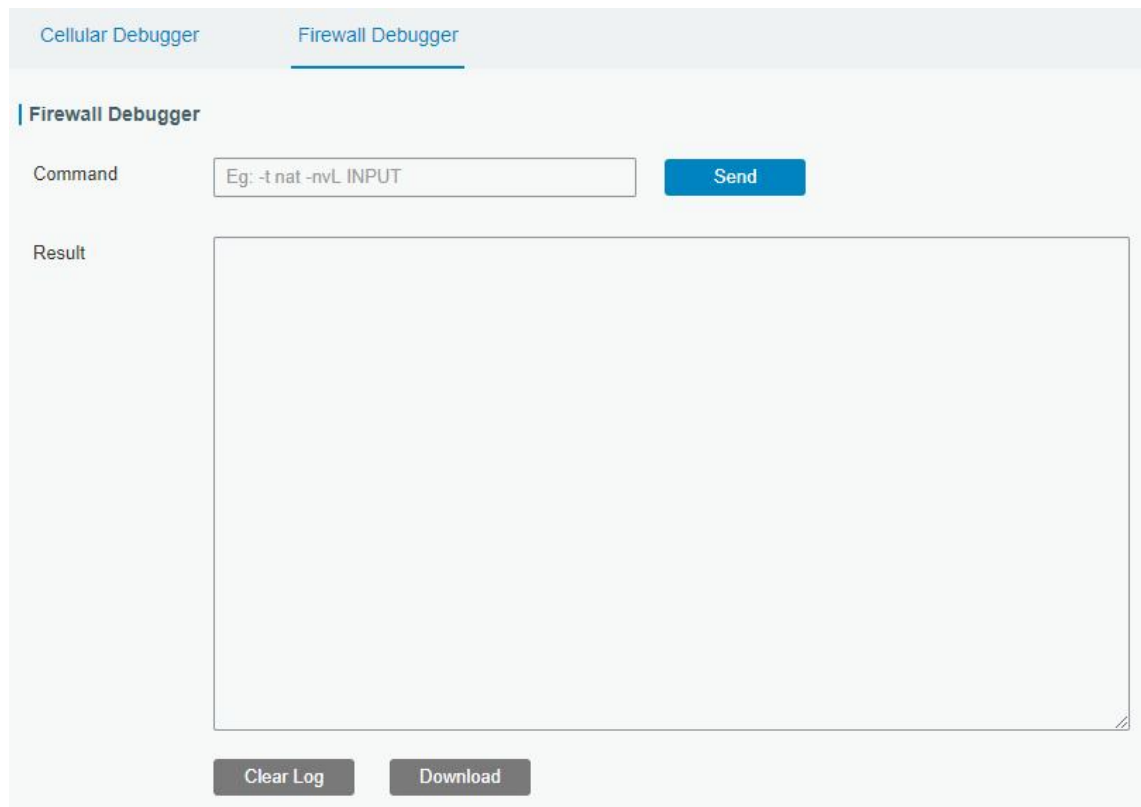


Figure 3-5-2-2

| Firewall Debugger |                                                                |
|-------------------|----------------------------------------------------------------|
| Item              | Description                                                    |
| Command           | Enter the AT command that you want to send to firewall module. |
| Result            | Show the response result from firewall module.                 |

Table 3-5-2-2 Firewall Debugger Parameters

### 3.5.3 Log

The system log contains a record of informational, error and warning events that indicates how the system processes. By reviewing the data contained in the log, an administrator or user troubleshooting the system can identify the cause of a problem or whether the system processes are loading successfully. Remote log server is feasible, and router will upload all system logs to remote log server such as Syslog Watcher.

#### 3.5.3.1 System Log

This section describes how to view the recent log on web.

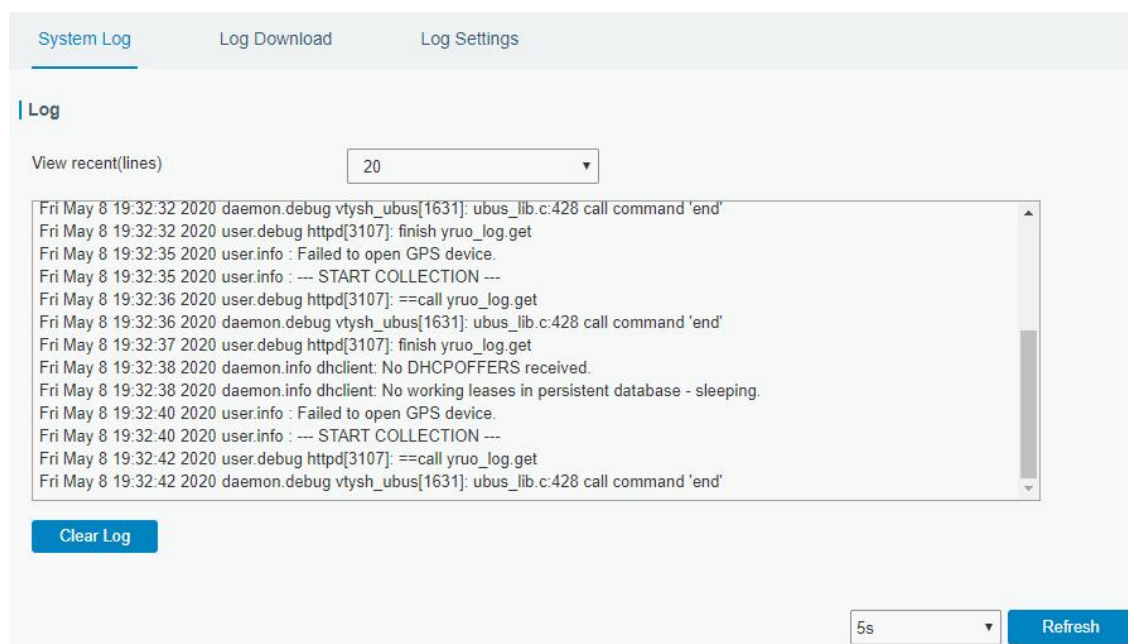


Figure 3-5-3-1

| System Log          |                                         |
|---------------------|-----------------------------------------|
| Item                | Description                             |
| View recent (lines) | View the specified lines of system log. |
| Clear Log           | Clear the current system log.           |

Table 3-5-3-1 System Log Parameter

### 3.5.3.2 Log Download

This section describes how to download log files.

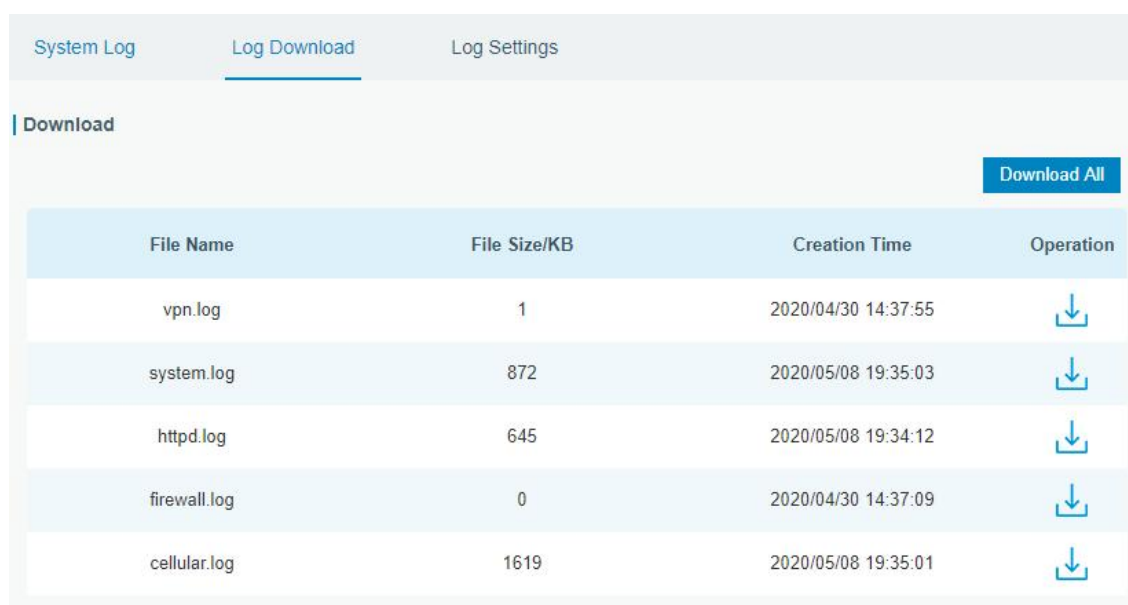


Figure 3-5-3-2

| Log Download  |                                      |
|---------------|--------------------------------------|
| Item          | Description                          |
| Download All  | Download all log files.              |
| File Name     | Show the name of log files.          |
| File Size/KB  | Show the size of log files.          |
| Creation Time | Show the creation time of log files. |
| Operation     | Click to download every log file.    |

Table 3-5-3-2 System Log Parameter

### 3.5.3.3 Log Settings

This section explains how to enable remote log server and local log setting.

Figure 3-5-3-3


| Log Settings             |                                                                                          |
|--------------------------|------------------------------------------------------------------------------------------|
| Item                     | Description                                                                              |
| <b>Remote Log Server</b> |                                                                                          |
| Enable                   | With “Remote Log Server” enabled, router will send all system logs to the remote server. |
| Syslog Server Address    | Fill in the remote system log server address (IP/domain name).                           |
| Port                     | Fill in the remote system log server port.                                               |
| <b>Local Log File</b>    |                                                                                          |
| Storage                  | User can store the log file in memory or TF card.                                        |
| Size                     | Set the size of the log file to be stored.                                               |
| Log Severity             | The list of severities follows the syslog protocol.                                      |

Table 3-5-3-3 Log Settings Parameters

### 3.5.4 Upgrade

This section describes how to upgrade the router firmware via web. Generally you don't need to do the firmware upgrade.

**Note:** any operation on web page is not allowed during firmware upgrade, otherwise the upgrade will be interrupted, or even the device will break down.

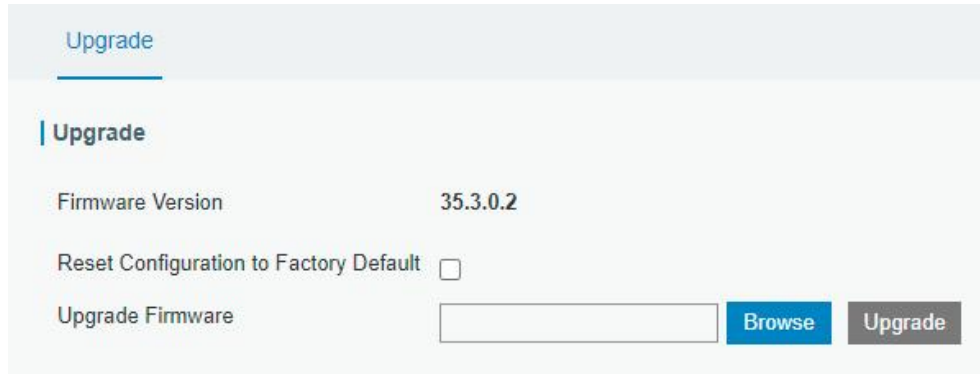

Upgrade

| Upgrade

Firmware Version 35.3.0.2

Reset Configuration to Factory Default ☐

Upgrade Firmware  Browse Upgrade

Figure 3-5-4-1

| Upgrade                                |                                                                                                 |
|----------------------------------------|-------------------------------------------------------------------------------------------------|
| Item                                   | Description                                                                                     |
| Firmware Version                       | Show the current firmware version.                                                              |
| Reset Configuration to Factory Default | When this option is checked, the router will be reset to factory defaults after upgrade.        |
| Upgrade Firmware                       | Click "Browse" button to select the new firmware file, and click "Upgrade" to upgrade firmware. |


Table 3-5-4-1 Upgrade Parameters

### Related Configuration Example

#### [Firmware Upgrade](#)

### 3.5.5 Backup and Restore

This section explains how to create a complete backup of the system configurations to a file, restore the config file to the router and reset to factory defaults.

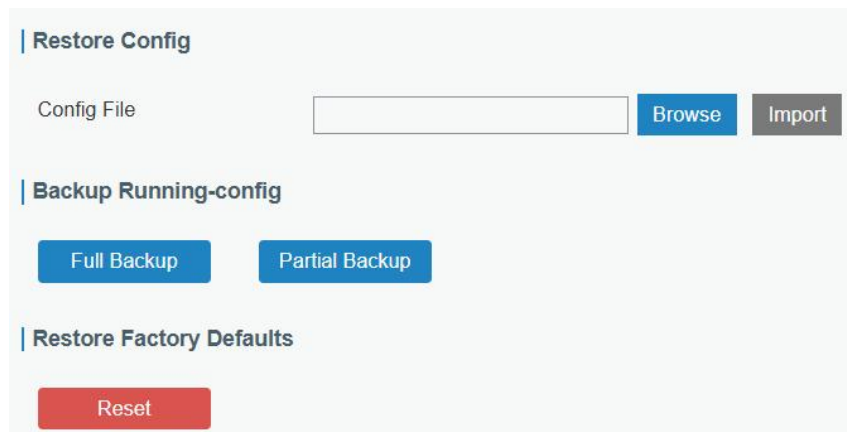

Restore Config

Config File  Browse Import

Backup Running-config

Full Backup Partial Backup

Restore Factory Defaults

Reset

Figure 3-5-5-1



| Backup and Restore |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item               | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Config File        | Click "Browse" button to select configuration file, and then click "Import" button to upload the configuration file to the router.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Full Backup        | Export the all configurations file to the PC.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Partial Backup     | Export all configurations except for the following pages to the PC.<br>Configurations not included in partial backup: <ul style="list-style-type: none"> <li>● Network → Interfaces → WAN: All configurations</li> <li>● Network → Interfaces → WLAN: Configurations when set to AP mode</li> <li>● System → User Management: All configurations</li> <li>● System → Device Management → Device Management: Configurations when DeviceHub is selected and activated via authorization code</li> <li>● System → Device Management → MilesightVPN: All configurations</li> <li>● APP → Python: All configurations</li> </ul> |
| Reset              | Click "Reset" button to reset factory default settings. Router will restart after reset process is done.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

Table 3-5-5-1 Backup and Restore Parameters

## Related Configuration Example

[Restore Factory Defaults](#)

### 3.5.6 Reboot

On this page you can reboot the router immediately or regularly. We strongly recommend clicking "Save" and "Apply" button before rebooting the router so as to avoid losing the new configuration.

Reboot

| Reboot Device

Reboot Now

| Schedule

Enable ☒

Cycles

Every Day

0

:

0

Save

Figure 3-5-6-1

| Reboot     |                                                   |
|------------|---------------------------------------------------|
| Item       | Description                                       |
| Reboot Now | Reboot the router immediately.                    |
| Schedule   |                                                   |
| Enable     | Reboot the router at a scheduled frequency.       |
| Cycles     | Select the date and time to execute the schedule. |

Table 3-5-2-1 Schedule Parameters

## 3.6 APP

### 3.6.1 Python

Python is an object-oriented programming language that has gained popularity because of its clear syntax and readability.

As an interpreted language, Python has a design philosophy that emphasizes code readability, notably using whitespace indentation to delimit code blocks rather than curly brackets or keywords, and a syntax that allows programmers to express concepts in fewer lines of code than it's used in other languages such as C++ or Java. The language provides constructs and intends to enable writing clear programs on both small and large scale.

Users can use Python to quickly generate the prototype of the program, which can be the final interface of the program, rewrite it with a more appropriate language, and then encapsulate the extended class library that Python can call.

This section describes how to view the relevant running status such as App-manager, SDK version, extended storage, etc. Also you can change the App-manager configuration, and import the Python App package from here.

#### 3.6.1.1 Python

Micro SD card must be installed for Python App.

|                   |                          |                                                                              |
|-------------------|--------------------------|------------------------------------------------------------------------------|
| Python            | AppManager Configuration | Python APP                                                                   |
| Python            |                          |                                                                              |
| AppManager Status | Uninstalled              |                                                                              |
| SDK Version       |                          |                                                                              |
| SDK Path          |                          |                                                                              |
| Available Storage | <input type="text"/>     |                                                                              |
| SDK Upload        | <input type="text"/>     | <input type="button" value="Browse"/> <input type="button" value="Install"/> |

Figure 3-6-1-1

| Item              | Description                                                                   |
|-------------------|-------------------------------------------------------------------------------|
| AppManager Status | Show AppManager's running status, like "Uninstalled", "Running" or "Stopped". |
| SDK Version       | Show the version of the installed SDK.                                        |
| SDK Path          | Show the SDK installation path.                                               |
| Available Storage | Select available storage such as Micro SD to install SDK.                     |
| SDK Upload        | Upload and install SDK for Python.                                            |
| Uninstall         | Uninstall SDK.                                                                |
| View              | View application status managed by AppManager.                                |

Table 3-6-1-1 Python Parameters

### 3.6.1.2 App Manager Configuration

Figure 3-6-1-2

| AppManager Configuration |                                                                                                                                              |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| Item                     | Description                                                                                                                                  |
| Enable                   | After enabling Python AppManager, user can click "View" button on the "Python" webpage to view the application status managed by AppManager. |
| App Management           |                                                                                                                                              |
| ID                       | Show the ID of the imported App.                                                                                                             |
| App Command              | Show the name of the imported App.                                                                                                           |
| Logfile Size(MB)         | User-defined Logfile size. Range: 1-50.                                                                                                      |
| Uninstall                | Uninstall APP.                                                                                                                               |
| App Status               |                                                                                                                                              |
| App Name                 | Show the name of the imported App.                                                                                                           |
| App Version              | Show the version of the imported App.                                                                                                        |
| SDK Version              | Show the SDK version which the imported App is based on.                                                                                     |

Table 3-6-1-2 APP Manager Parameters

### 3.6.1.3 Python App

Figure 3-6-1-3

| Python APP        |                                                 |
|-------------------|-------------------------------------------------|
| Item              | Description                                     |
| App Package       | Select App package and import.                  |
| App Name          | Select App to import configuration.             |
| App Configuration | Select configuration file and import.           |
| Debug File        | Export script file.                             |
| Debug Script      | Select Python script to be debugged and import. |

Table 3-6-1-3 APP Parameters

## Chapter 4 Application Examples

### 4.1 Network Connection

#### 4.1.1 Cellular Connection

The UR35 routers have two cellular interfaces, named SIM1 & SIM2. Only one cellular interface is active at one time. We are about to take an example of inserting a SIM card into SIM1 slot of the UR35 and configuring the router to get Internet access through cellular.

##### Configuration Steps

1. Ensure the SIM card is inserted well before powering on and all cellular antennas are connected to the correct connectors.
2. Go to **Network > Interface > Cellular > Cellular Setting** to configure the cellular info, then click **Save** and **Apply**.

Link Failover Cellular Port WAN Bridge Switch Loopback

SIM1 SIM Setting

| Interface Name | Status         | Network Type | IP | APN | Enable Status                       | Operation |
|----------------|----------------|--------------|----|-----|-------------------------------------|-----------|
| SIM1-APN1      | Connect Failed | Auto         | -  | -   | <input checked="" type="checkbox"/> |           |
| SIM1-APN2      | Connect Failed | Auto         | -  | 111 | <input checked="" type="checkbox"/> |           |
| SIM1-APN3      | Connect Failed | Auto         | -  | 22  | <input checked="" type="checkbox"/> |           |

SIM2 SIM Setting

| Interface Name | Status | Network Type | IP | APN | Enable Status            | Operation |
|----------------|--------|--------------|----|-----|--------------------------|-----------|
| SIM2-APN1      | -      | Auto         | -  | 33  | <input type="checkbox"/> |           |
| SIM2-APN2      | -      | Auto         | -  | 444 | <input type="checkbox"/> |           |
| SIM2-APN3      | -      | Auto         | -  | 555 | <input type="checkbox"/> |           |

3. Go to **Network > Interface > Link Failover** to enable correspond SIM and drag buttons to change link priority.

Link Failover Cellular Port WAN Bridge Switch Loopback

Link Priority

| Priority | Enable Rule                         | Link in use | Interface | Connection Type | IP             | Operation |
|----------|-------------------------------------|-------------|-----------|-----------------|----------------|-----------|
| 1        | <input checked="" type="checkbox"/> | ●           | SIM1-APN1 | DHCP            | -              |           |
| 2        | <input type="checkbox"/>            | ●           | SIM2-APN1 | DHCP            | -              |           |
| 3        | <input checked="" type="checkbox"/> | ●           | WAN       | Static          | 192.168.40.210 |           |
| 4        | <input checked="" type="checkbox"/> | ●           | SIM1-APN2 | DHCP            | -              |           |
| 5        | <input checked="" type="checkbox"/> | ●           | SIM1-APN3 | DHCP            | -              |           |

4. Click to configure ICMP ping detection information. When ping probe is enabled, the router will send ICMP packets to detection server to check if this link is valid. If no response and exceeding max retries, it will switch to the lower priority link.

**Note:** if you use private SIM card, please change a private server address or disable the ping probe.

### Ping Detection

|                       |                                                   |
|-----------------------|---------------------------------------------------|
| Enable                | <input checked="" type="checkbox"/>               |
| IPv4 Primary Server   | <input type="text" value="8.8.8.8"/>              |
| IPv4 Secondary Server | <input type="text" value="223.5.5.5"/>            |
| IPv6 Primary Server   | <input type="text" value="2001:4860:4860::8888"/> |
| IPv6 Secondary Server | <input type="text" value="2400:3200::1"/>         |
| Interval              | <input type="text" value="300"/> s                |
| Retry Interval        | <input type="text" value="5"/> s                  |
| Timeout               | <input type="text" value="3"/> s                  |
| Max Ping Retries      | <input type="text" value="3"/>                    |

5. Go to **Status > Cellular** to view the status of the cellular connection. If it shows Connected, SIM1 has dialed up successfully.

Overview

Cellular

Network

VPN

Routing

Host List

Modem

Model

EC200A

Version

EC200AEU HAR01A30M16\_01.300.01.300

Current SIM

SIM1

Signal Level

31asu (-51dBm)

Register Status

Not registered

IMEI

868291079054249

IMSI

-

ICCID

-

ISP

-

Network Type

-

Cellular Frequency Band

-

PLMN ID

-

LAC

-

Cell ID

-

RSRP

-75dbm

RSRQ

-

SINR

-

Data Usage Monthly

SIM-1

RX: 0.4 MiB TX: 0.0 MiB ALL: 0.4 MiB

SIM-2

RX: 0.0 MiB TX: 0.0 MiB ALL: 0.0 MiB

SIM1-APN1

Status

Disconnected

IPv4 Address

0.0.0.0/0

IPv4 Gateway

0.0.0.0

IPv4 DNS

0.0.0.0

Connection Duration

0 days, 00:00:00

SIM1-APN2

Status

Disconnected

IPv4 Address

0.0.0.0/0

IPv4 Gateway

0.0.0.0

IPv4 DNS

0.0.0.0

Connection Duration

0 days, 00:00:00

SIM1-APN3

Status

Disconnected

IPv4 Address

0.0.0.0/0

IPv4 Gateway

0.0.0.0

IPv4 DNS

0.0.0.0

Connection Duration

0 days, 00:00:00

## Related Topic

## Cellular Setting

## Cellular Status

### 4.1.2 Ethernet WAN Connection

UR35 supports to get Internet access via WAN port.

## Configuration Steps

1. Go to **Network > Interface > WAN** to select connection type and configure WAN parameters, then save all settings. The following examples of static IP type, DHCP Client type, and PPPoE type are listed for your reference.

The screenshot shows the 'WAN Settings' page for 'WAN\_1'. The left sidebar contains a menu with 'Status', 'Network', 'Interface' (selected), 'DHCP', 'Firewall', 'QoS', 'VPN', 'IP Passthrough', 'Routing', 'VRRP', 'DDNS', and 'System'. The top navigation bar includes 'Link Failover', 'Cellular', 'Port', 'WAN' (selected), 'Bridge', 'WLAN', and 'Switch'. The 'WAN Settings' section for 'WAN\_1' includes the following fields:

- Enable: ☒
- Port: WAN
- Connection Type: Static IP
- IPv4 Address: 192.168.44.52
- Netmask: 255.255.255.0
- IPv4 Gateway: 192.168.44.1
- IPv6 Address: fe80::26e1:24ff:fe4:1c1f
- Prefix Length: 64
- IPv6 Gateway:
- MTU: 1500
- IPv4 Primary DNS: 8.8.8.8

2. Go to **Network > Interface > Link Failover** to enable WAN and drag buttons to change link priority.

The screenshot shows the 'Link Priority' page under 'Link Failover'. The left sidebar is the same as the previous screenshot. The top navigation bar includes 'Link Failover' (selected), 'Cellular', 'Port', 'WAN', 'Bridge', 'Switch', and 'Loopback'. The 'Link Priority' section contains a table with the following data:

| Priority | Enable Rule                         | Link in use                          | Interface     | Connection Type | IP             | Operation |
|----------|-------------------------------------|--------------------------------------|---------------|-----------------|----------------|-----------|
| 1        | <input checked="" type="checkbox"/> | <span style="color: green;">●</span> | WAN           | Static IP       | 192.168.22.225 |           |
| 2        | <input checked="" type="checkbox"/> | <span style="color: gray;">●</span>  | Cellular-SIM1 | DHCP            | -              |           |
| 3        | <input checked="" type="checkbox"/> | <span style="color: gray;">●</span>  | Cellular-SIM2 | -               | -              |           |

## Related Topic

[WAN Setting](#)

[WAN Status](#)

## 4.2 Wi-Fi Application Example

### 4.2.1 AP Mode

UR35 supports to work as access point (AP) to provide network access to other devices.

## Configuration Steps

1. Go to **Network > Interface > WLAN** to select work mode as AP and define the wireless parameters as required, then save all settings.

| Link Failover     | Cellular                            | Port | WAN | Bridge | WLAN |
|-------------------|-------------------------------------|------|-----|--------|------|
| <b>WLAN</b>       |                                     |      |     |        |      |
| Enable            | <input checked="" type="checkbox"/> |      |     |        |      |
| Work Mode         | AP                                  |      |     |        |      |
| BSSID             | 24:e1:24:f0:2f:eb                   |      |     |        |      |
| Radio Type        | 802.11n(2.4GHz)                     |      |     |        |      |
| Channel           | Auto                                |      |     |        |      |
| Bandwidth         | 20MHz                               |      |     |        |      |
| SSID              | Router_F02FEB                       |      |     |        |      |
| Encryption Mode   | WPA-PSK/WPA2-PSK                    |      |     |        |      |
| Cipher            | Auto                                |      |     |        |      |
| Key               | *****                               |      |     |        |      |
| SSID Broadcast    | <input checked="" type="checkbox"/> |      |     |        |      |
| AP Isolation      | <input type="checkbox"/>            |      |     |        |      |
| Guest Mode        | <input type="checkbox"/>            |      |     |        |      |
| Max Client Number | 10                                  |      |     |        |      |

2. Use a smart phone to connect the access point of UR35. Go to **Status > WLAN**, and you can check the AP settings and information of the connected client/user.

| WLAN Status |         |      |               |             |               |
|-------------|---------|------|---------------|-------------|---------------|
| Name        | Status  | Type | SSID          | IP Address  | Netmask       |
| WLAN        | Running | AP   | Router_F02FEB | 192.168.1.1 | 255.255.255.0 |

| Associated Stations |                   |               |                     |
|---------------------|-------------------|---------------|---------------------|
| SSID                | MAC Address       | IP Address    | Connection Duration |
| Router_F02FEB       | 3c:cd:5d:47:10:8e | 192.168.1.191 | 18 seconds          |

#### 4.2.2 Client Mode

UR35 supports to work as Wi-Fi client to connect to an access point to get Internet access.

##### Configuration Steps

1. Go to **Network > Interface > WLAN**, click **Scan** to search for access points and click **Join Network**, then save the settings. For some access points, it is necessary to fill in the Wi-Fi password.



| Link Failover   | Cellular                            | Port | WAN | Bridge | WLAN |
|-----------------|-------------------------------------|------|-----|--------|------|
| <b>WLAN</b>     |                                     |      |     |        |      |
| Enable          | <input checked="" type="checkbox"/> |      |     |        |      |
| Work Mode       | Client                              |      |     |        | Scan |
| SSID            | WIFI TEST                           |      |     |        |      |
| BSSID           | 3c:cd:5d:47:10:8e                   |      |     |        |      |
| Encryption Mode | WPA2-PSK                            |      |     |        |      |
| Cipher          | AES                                 |      |     |        |      |
| Key             | *****                               |      |     |        |      |
| IP Setting      |                                     |      |     |        |      |
| Protocol        | DHCP Client                         |      |     |        |      |

2. Go to **Status > WLAN**, and you can check the connection status of the client.

Overview

Cellular

Network

WLAN

VPN

Routing

Host List

GPS

WLAN Status

| Name | Status    | Type   | SSID      | IP Address | Netmask |
|------|-----------|--------|-----------|------------|---------|
| WLAN | Connected | Client | WIFI TEST |            |         |

Associated Stations

| SSID      | MAC Address       | IP Address | Connection Duration |
|-----------|-------------------|------------|---------------------|
| WIFI TEST | 3c:cd:5d:47:10:8e |            | 1353 seconds        |

## Related Topic

[WLAN Setting](#)

[WLAN Status](#)

## 4.3 OpenVPN Client Application Example

UR35 routers can work as OpenVPN clients or OpenVPN servers. We are about to take an example of configuring an OpenVPN client to connect to OpenVPN cloudConnexa.

### Configuration Steps

1. Ensure the UR35 has gotten access to the Internet.
2. Log in to the cloudConnexa account, select the Network section, select the service depending on

your requirement, and follow the wizard to continue the settings.

### Select Network Scenarios

Please select all applicable scenarios for the network you are going to create.

**Remote Access**   
Connect your private resources to CloudConnexa. Provide remote access to your resources, which are hosted on IaaS Cloud, and on premises resources.  
[Read more](#)

**Site-to-site**   
Connect multiple private networks to CloudConnexa (site-to-site connectivity). This wizard will assist you in adding a single network. You can use this wizard to connect all of your networks.  
[Read more](#)

**Secure Internet Access**   
Provide secure access to public resources. Use this network as an Internet Gateway for all internet traffic or only for selected public resources. You can then apply whitelisting rules to your public resources.  
[Read more](#)

If you would like to connect a single server you can create a [host](#) and connect your server directly to CloudConnexa

Skip Wizard

Continue

3. Select the provider type as OpenWrt and download the OVPN file.

### Deploy Network Connector (connector01)

#### Connector Details

Name

connector01

Region



Singapore

Each Connector must be installed and connected to CloudConnexa. Select where you would like to deploy Network Connector.

OpenVPN Compatible Router : OpenWrt

#### 1 Download .ovpn Profile

Download OVPN Profile

#### 2 Use .ovpn Profile

Use .ovpn Profile on your router and connect it to CloudConnexa

[Read how to use .ovpn Profile and connect OpenWrt router to CloudConnexa](#)

4. If you need to access the terminal devices under subnet, it's necessary to add the route and IP service as LAN subnet of the router.

### Network Configuration

Selected Scenarios: Remote Access

#### Add route

Routes define public and private subnets that will be routed to this Network. Routes are pushed to the routing table of User Devices and Connectors, so that they can access IP Services.

No Route defined yet.

Add Route

#### Add IP Service

IP Services are defined as access to specific IP address ranges and protocols.

No IP Service defined yet.

Add IP Service

Define Network

Deploy Network Connector

connector01

Add Application

Add Routes and IP Services

Configure Access Group (Optional)

5. Go to **Network > VPN > OpenVPN Client**, select configuration method as File Configuration, then import the OVPN file.

**OpenVPN Client Settings**

OpenVPN Client\_1

Enable ☒

Configuration Method File Configuration

Configuration File openvpn\_1-custom.conf Browse Import Export Delete

6. Go to **Status > VPN** page to check if the client is connected.

Overview

Cellular

Network

WLAN

VPN

Routing

Host List

GPS

Clients

| Name      | Status       | Local IP    | Remote IP   |
|-----------|--------------|-------------|-------------|
| openvpn_1 | Connected    | 100.96.1.18 | 100.96.1.17 |
| ipsec_1   | Disconnected | -           | -           |

You can also check the connection status on CloudConnexa.

**CloudConnexa**

221028  
openvpn.com

Status

Users

Networks

Applications

IP Services

Connectors

**Networks**

Configure a Network to connect physical and virtual networks, including distributed networks.

Add Network

All Online Offline Online with Issues Filter

| Connection Status                          | Name             | Internet Access | Internet Gateway (Egress) | Applications | IP Services |
|--------------------------------------------|------------------|-----------------|---------------------------|--------------|-------------|
| <input type="checkbox"/> Offline           | Milesight device | Split Tunnel On | Off                       |              |             |
| <input checked="" type="checkbox"/> Online | test             | Split Tunnel On | Off                       |              | test        |

## Related Topic


[OpenVPN Client](#)

[VPN Status](#)

## 4.4 NAT Application Example



### Example

An UR35 router can access to the Internet via cellular and get a public IP address. LAN port is connected with an IP camera whose IP address is 192.168.23.165 and HTTP port is 80. This IP camera can be accessed by public IP address via the below port mapping settings.

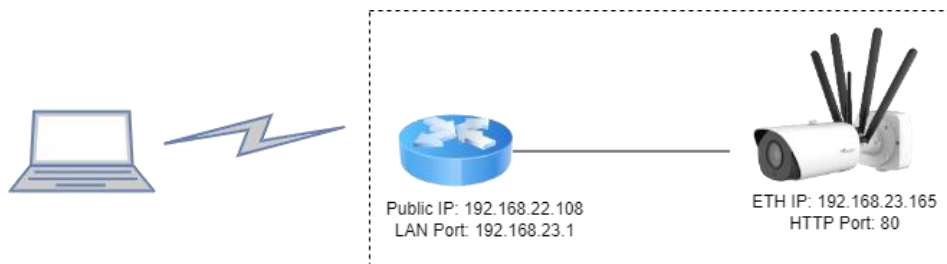

## Configuration Steps

Go to **Firewall > Port Mapping** and configure port mapping parameters as below. Source IP address 0.0.0.0/0 means all external addresses are allowed to access. After that, users can use public IP: external port to access the IP camera.

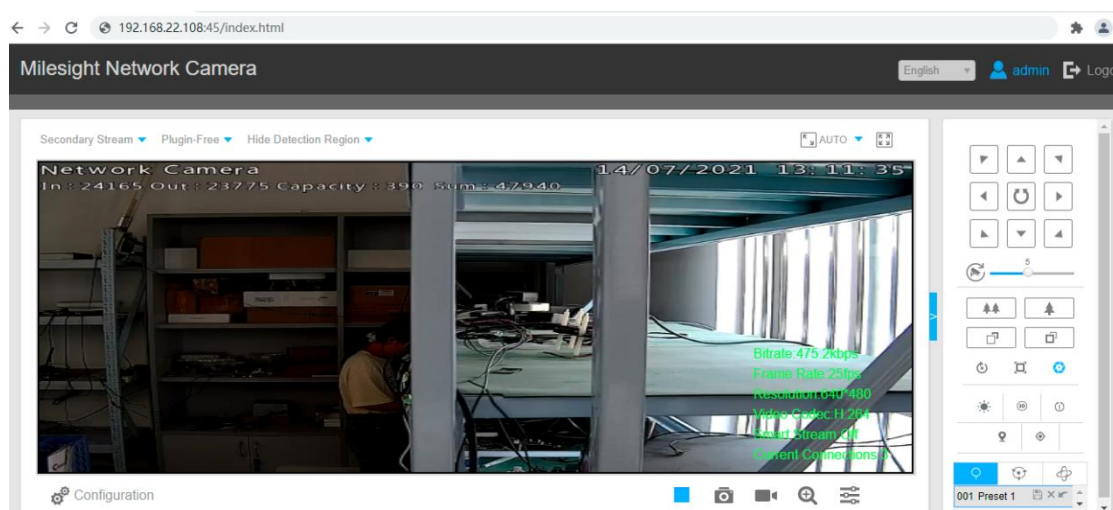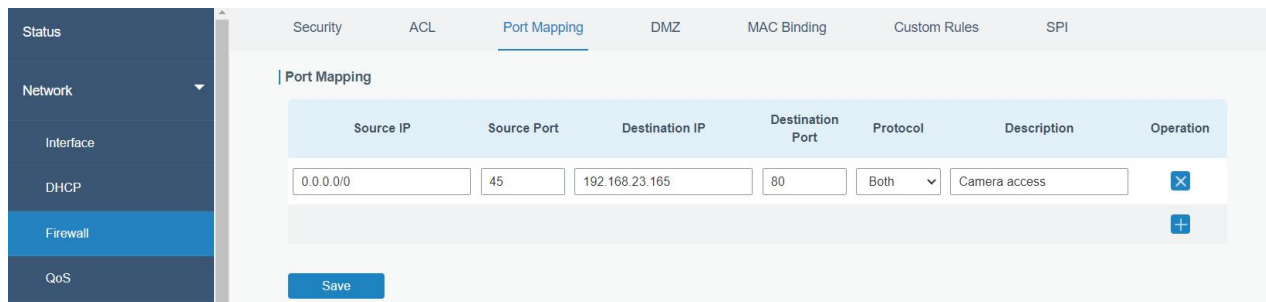


## Related Topic

[Port Mapping](#)

## 4.5 DTU Application Example

### Example

A PLC is connected with the UR35 via RS232 and need to forward the data to a remote TCP server transparently.

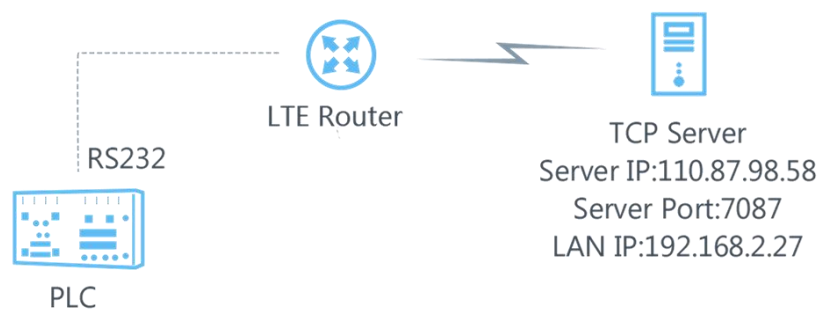

## Configuration Steps

1. Go to **Service > Serial Port > Serial1**, enable Serial 1 and configure serial port parameters. The serial port parameter shall be kept in consistency with those of PLC, as shown in figure below.

The screenshot shows the 'Serial Settings' configuration page for 'Serial1'. The left sidebar contains a menu with 'Serial Port' selected. The main area displays the following settings:

| Setting               | Value                               |
|-----------------------|-------------------------------------|
| Enable                | <input checked="" type="checkbox"/> |
| Serial Type           | RS232                               |
| Baud Rate             | 9600                                |
| Data Bits             | 8bits                               |
| Stop Bits             | 1bits                               |
| Parity                | None                                |
| Software Flow Control | <input type="checkbox"/>            |

2. Configure Serial Mode as DTU Mode, DTU protocol as Transparent and protocol as TCP.

The screenshot shows the 'DTU Mode' configuration page. The settings are as follows:

|                       |                          |
|-----------------------|--------------------------|
| Serial Mode           | DTU Mode                 |
| DTU Protocol          | Transparent              |
| Protocol              | TCP                      |
| Keepalive Interval    | 75 s                     |
| Keepalive Retry Times | 9                        |
| Packet Size           | 1024 Bytes               |
| Serial Frame Interval | 100 ms                   |
| Reconnect Interval    | 10 s                     |
| Specific Protocol     | <input type="checkbox"/> |
| Register String       |                          |

3. Configure TCP server IP and port.

The screenshot shows the 'Destination IP Address' configuration page. It features a table with columns for 'Server Address', 'Server Port', 'Status', and 'Operation'.


| Server Address | Server Port | Status | Operation                           |
|----------------|-------------|--------|-------------------------------------|
| 110.87.98.58   | 7087        |        | <input checked="" type="checkbox"/> |

Below the table, there is a 'Save' button and a '+' icon to add more entries.

4. Start TCP server on PC. Take **Netassist** test software as example. Make sure port mapping is already done.




5. Connect the UR35 to PC via RS232 for PLC simulation. Then start **sscom** software on the PC to test communication through serial port.

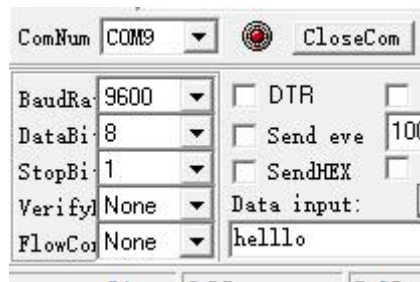


6. After connection is established between the UR35 and the TCP server, you can send data between sscom and Netassit.

#### **PC side**

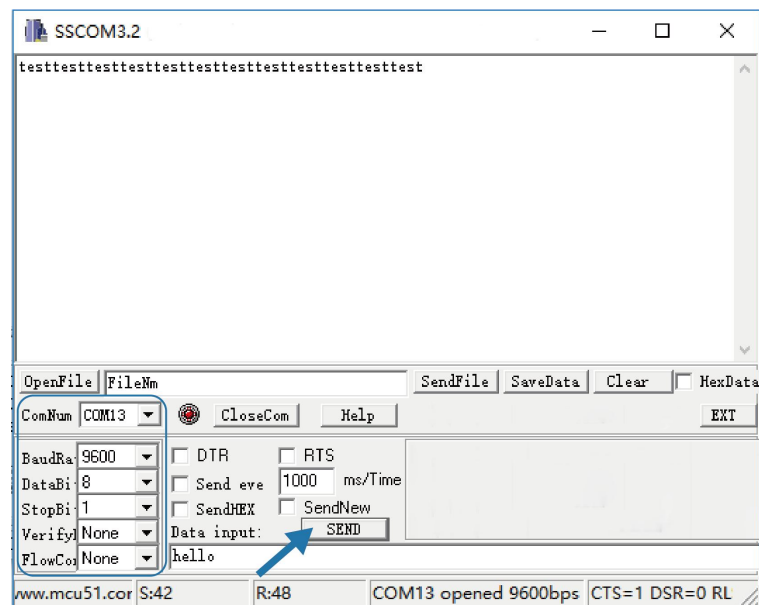

#### **TCP server side**

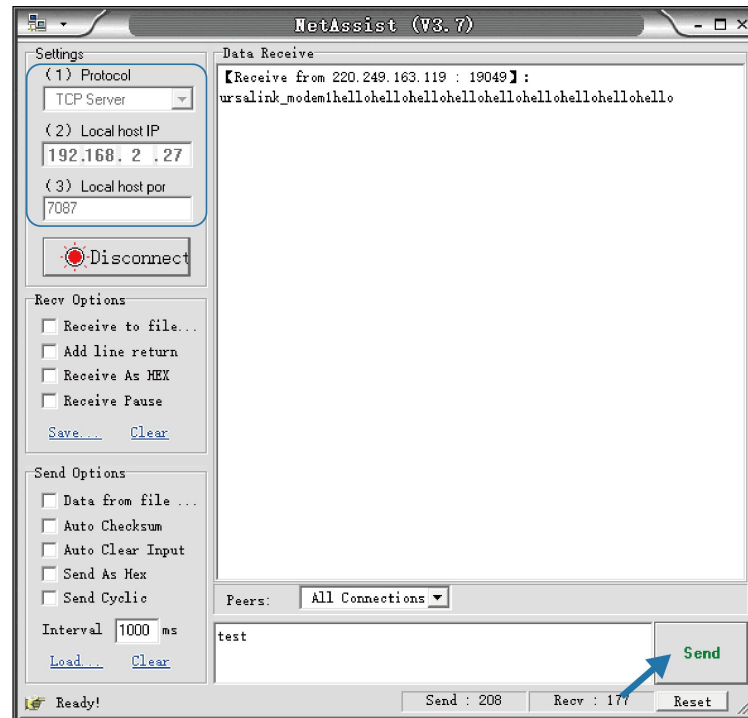

7. After serial communication test is done, you can connect PLC to RS232 port of the UR35 for test.


## Related Topic


[Serial Port](#)

## 4.6 Restore Factory Defaults


### Method 1:

Log in web interface, and go to **Maintenance > Backup and Restore**, click **Reset** button. You will be asked to confirm if you'd like to reset it to factory defaults. Then click **Reset** button.

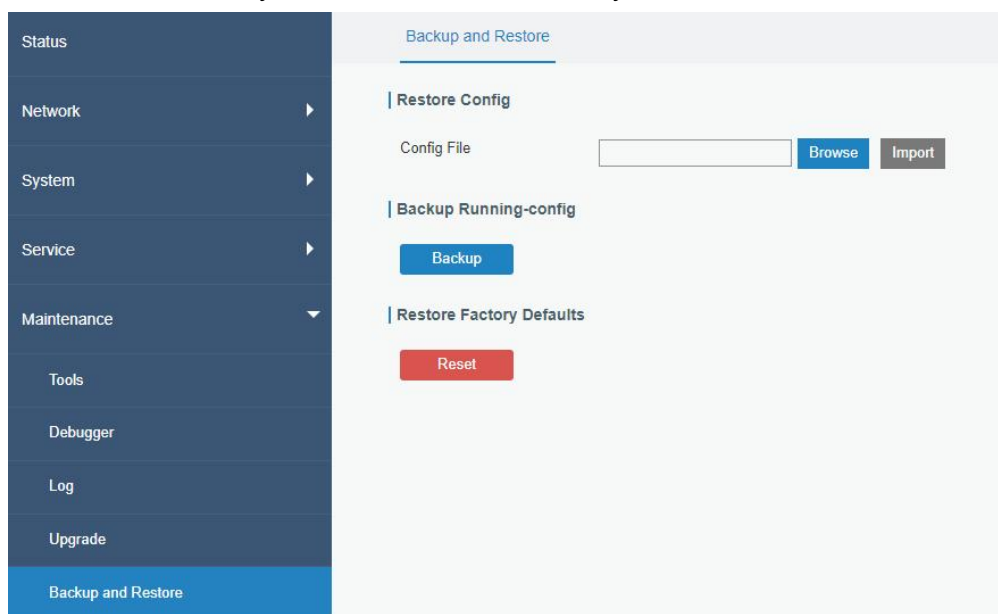

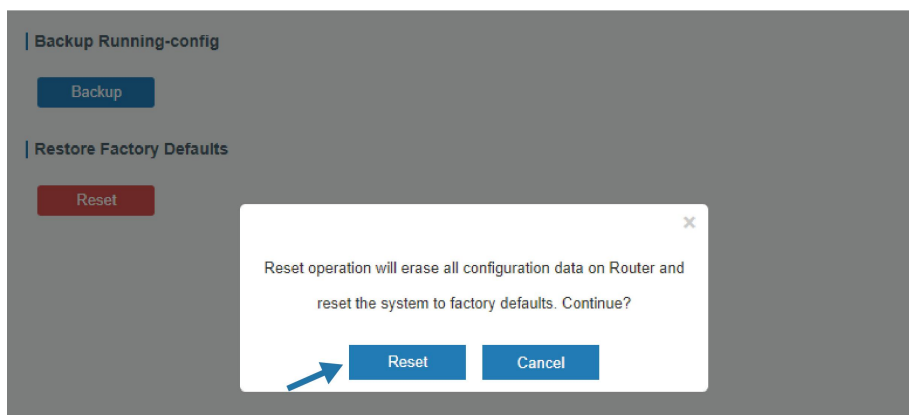

Then the router will reboot and restore to factory settings immediately.

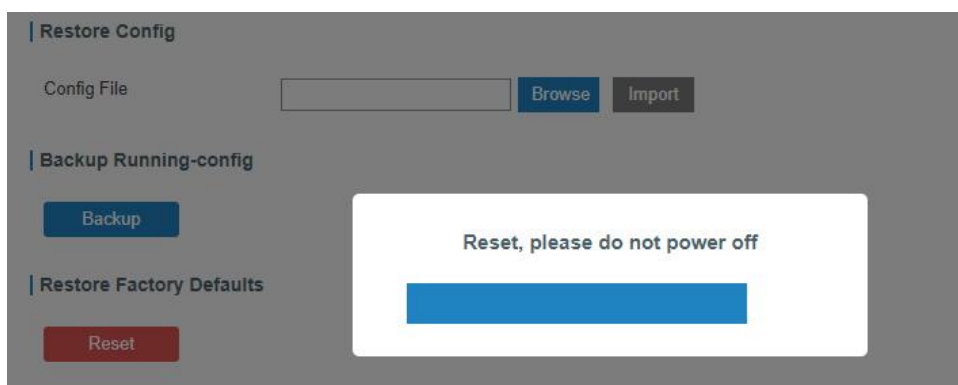

Please wait till the SYSTEM LED blinks slowly and login page pops up again, which means the router has already been reset to factory defaults successfully.

## Related Topic

[Restore Factory Defaults](#)

### Method 2:

Locate the reset button on the router, press and hold the reset button for more than 5s until the LED blinks.

## 4.7 Firmware Upgrade

It is suggested that you contact Milesight technical support first before you upgrade router firmware. After getting firmware file please refer to the following steps to complete the upgrade.

1. Go to **Maintenance > Upgrade**, click **Browse** and select the correct firmware file from the PC.
2. Click **Upgrade** and the router will check if the firmware file is correct. If it's correct, the firmware will be imported to the router, and then the router will start to upgrade.

**Note:** It is recommended to check the box of **Reset Configuration to Factory Default** before upgrade.



The screenshot shows the 'Upgrade' page of a Milesight device's web interface. It features a 'Firmware Version' field displaying '35.2.0.5'. Below it is a 'Reset Configuration to Factory Default' checkbox, which is currently unchecked. The 'Upgrade Firmware' section includes a text input field containing 'C:\fakepath\35.2.0.6.bin', followed by 'Browse' and 'Upgrade' buttons.

## Related Topic

[Upgrade](#)


## 4.8 SNMP Application Example

Before you configure SNMP parameters, please download the relevant MIB file from the UR35's WEB GUI first, and then upload it to any software or tool which supports standard SNMP protocol. Here we take ManageEngine MibBrowser Free Tool as an example to access the router to query cellular information.


1. Go to **Service > SNMP > MIB** and download the MIB file **LTE-ROUTER-MIB.txt** to PC.

The screenshot shows the 'MIB Download' page. It has tabs for 'SNMP', 'MIB View', 'VACM', 'Trap', and 'MIB', with 'MIB' being the active tab. Under the 'MIB Download' section, there is a 'MIB File' label, a dropdown menu showing 'LTE-ROUTER-MIB.tx', and a 'Download' button.

2. Start ManageEngine MibBrowser Free Tool on the PC. Click **File > Load MIB** on the menu bar. Then select **LTE-ROUTER-MIB.txt** file from PC and upload it to the software.

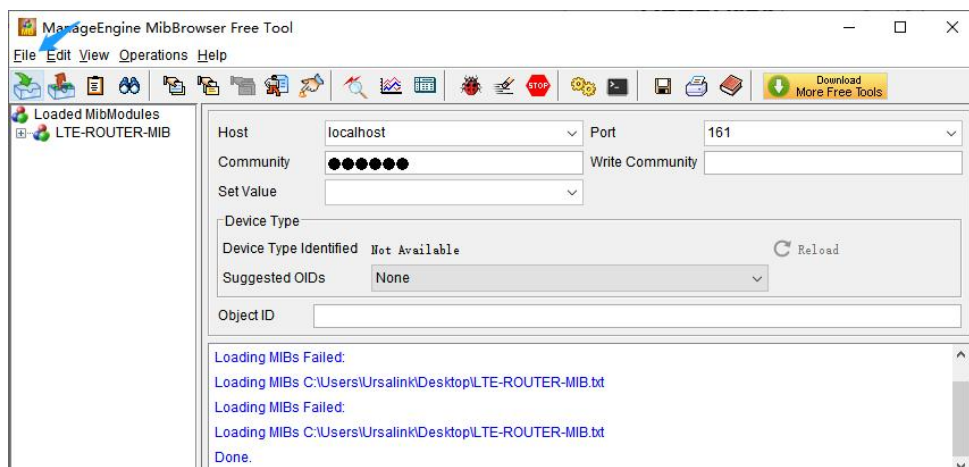

Click the “+” button beside LTE-ROUTER-MIB, which is under the **Loaded MibModules** menu, and find **usCellularinfo**. And then you will see the OID of cellular info is “.1.3.6.1.4.1.50234”, which will be filled in the MIB View settings.

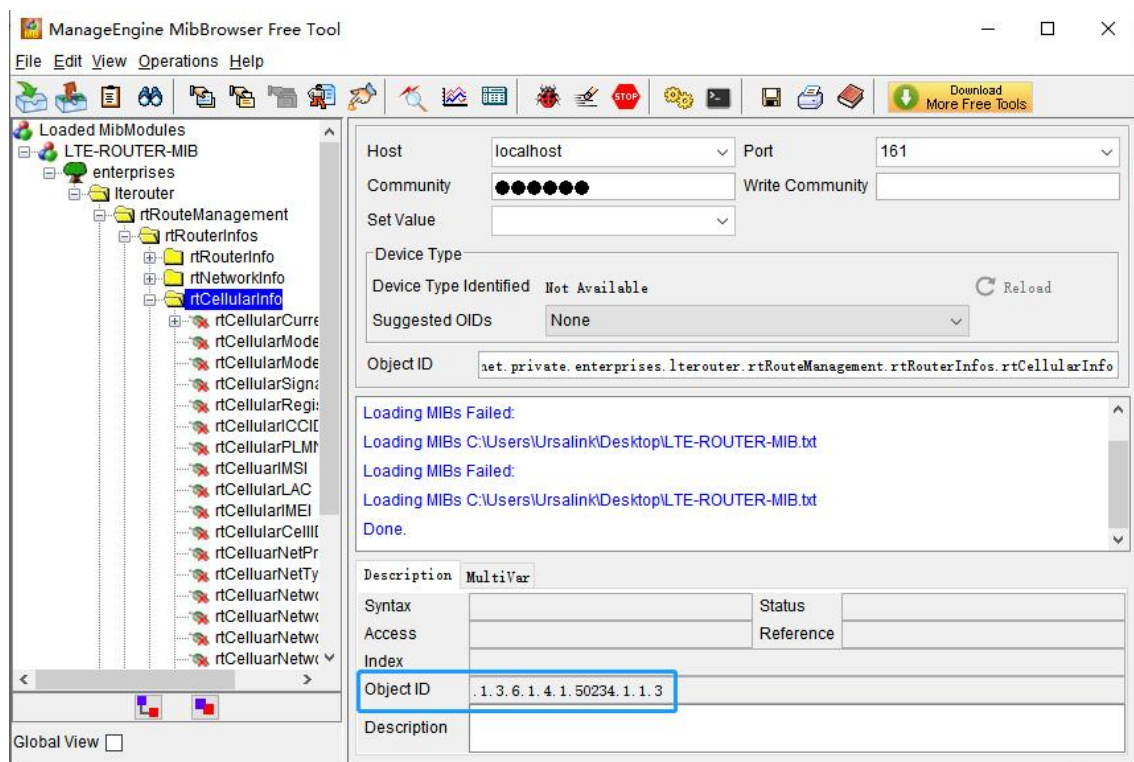

3. Go to **Service > SNMP > SNMP** to enable SNMP feature.

4. Click  to add a new MIB view and define the view to be accessed from the outside network. Then click “Save” button.

SNMP MIB View VACM Trap MIB

View List

| View Name | View Filter | View OID              | Operation                                                                           |
|-----------|-------------|-----------------------|-------------------------------------------------------------------------------------|
| cellular  | Included    | 1.3.6.1.4.1.50234.1.3 |  |
|           |             |                       |  |

Save

5. Click  to add a new VACM setting to define the access authority for the specified view from the specified outside network, then save all settings.

SNMP MIB View VACM Trap MIB

SNMP v1 & v2 User List

| Community | Permission | MIB View | Network   | Operation                                                                            |
|-----------|------------|----------|-----------|--------------------------------------------------------------------------------------|
| public    | Read-Write | cellular | 0.0.0.0/0 |   |
|           |            |          |           |  |

Save

6. Go to MibBrowser, enter host IP address, port and community. Right click **usCellular CurrentSim** and then click **GET**. Then you will get the current SIM info on the result box. You can get other cellular info in the same way.

ManageEngine MibBrowser Free Tool

File Edit View Operations Help

added MibModules

- LTE-ROUTER-MIB
- enterprises
- lterouter
  - rtRouteManagement
    - rtRouterInfos
      - rtRouterInfo
      - rtNetworkInfo
      - rtCellularInfo
        - rtCellularCurrentSim**
        - rtCellularModel
        - rtCellularModemStat
        - rtCellularSignal
        - rtCellularRegister
        - rtCellularCCID
        - rtCellularPLMNID
        - rtCellularMSI
        - rtCellularLAC
        - rtCellularIMEI
        - rtCellularCellID
        - rtCelluarNetProvider
        - rtCelluarNetType
        - rtCelluarNetworkStat
        - rtCelluarNetworkIP
        - rtCelluarNetworkNet
        - rtCelluarNetworkGat

Host: 192.168.22.225 Port: 161

Community: public Write Community

Set Value

Device Type

Device Type Identified: Not Available

Suggested OIDs: None

Object ID: .iso.org.dod.internet.private.enterprises.lterouter.rtRouteManagement.rtRouterIn

Loading MIBs Failed:

Loading MIBs C:\Users\Ursalink\Desktop\LTE-ROUTER-MIB.txt

Done.

Sent GET request to 192.168.22.225 : 161

rtCellularCurrentSim.0 Result

| Description | MultiVar                    |
|-------------|-----------------------------|
| Syntax      | OCTET STRING                |
| Access      | read-only                   |
| Status      | current                     |
| Reference   |                             |
| Index       |                             |
| Object ID   | 1.3.6.1.4.1.50234.1.1.3.1   |
| Description | "The current SIM card used" |

Global View ☐

## Related Topic

[SNMP](#)

## 4.9 VRRP Application Example

### Application Example

A Web server requires Internet access through the UR35 router. To avoid data loss caused by router breakdown, two UR35 routers can be deployed as VRRP backup group, so as to improve network reliability.


VRRP group:

WAN ports of the UR35 Router A and Router B are connected to the Internet via wired network. And LAN ports of them are connected to a switch.

Virtual IP is 192.168.1.254/24.

| Router | Virtual Router ID<br>(Same for A and B) | Port<br>connected<br>with switch | LAN<br>IP Address | Priority | Preemption<br>Mode |
|--------|-----------------------------------------|----------------------------------|-------------------|----------|--------------------|
| A      | 1                                       | LAN2                             | 192.168.1.1       | 110      | Enable             |
| B      | 1                                       | LAN2                             | 192.168.1.2       | 100      | Disable            |

Refer to the topological below.

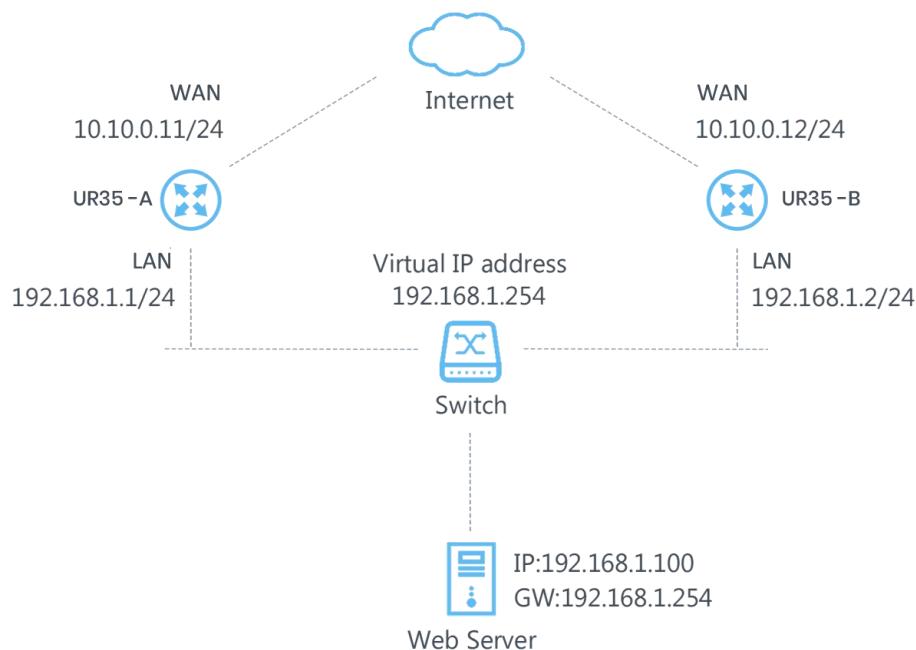

### Configuration Steps

#### Router A Configuration

1. Go to **Network > Interface > WAN** and configure wired WAN connection as below.

| Link Failover   | Cellular                            | Port | WAN | Bridge |
|-----------------|-------------------------------------|------|-----|--------|
| WAN_1           |                                     |      |     |        |
| Enable          | <input checked="" type="checkbox"/> |      |     |        |
| Port            | WAN                                 |      |     |        |
| Connection Type | Static IP ▼                         |      |     |        |
| IPv4 Address    | 10.10.0.11                          |      |     |        |
| Netmask         | 255.255.255.0                       |      |     |        |
| IPv4 Gateway    | 10.10.0.1                           |      |     |        |
| IPv6 Address    | fe80::26e1:24ff:fe0:3ee0            |      |     |        |
| Prefix-length   | 64                                  |      |     |        |
| IPv6 Gateway    |                                     |      |     |        |
| MTU             | 1500                                |      |     |        |
| Primary DNS     | 8.8.8.8                             |      |     |        |
| Secondary DNS   |                                     |      |     |        |
| Enable NAT      | <input checked="" type="checkbox"/> |      |     |        |

2. Go to **Network > VRRP > VRRP** and configure VRRP parameters as below.

| VRRP                       |                                     |
|----------------------------|-------------------------------------|
| <b>VRRP Status</b>         |                                     |
| Status                     | DISABLE                             |
| <b>VRRP Settings</b>       |                                     |
| Enable                     | <input checked="" type="checkbox"/> |
| Interface                  | Bridge0 ▼                           |
| Virtual Router ID          | 1                                   |
| Virtual IP                 | 192.168.1.254                       |
| Priority                   | 110                                 |
| Advertisement Interval (s) | 1                                   |
| Preemption Mode            | <input type="checkbox"/>            |
| IPv4 Primary Server        | 8.8.8.8                             |
| IPv4 Secondary Server      | 114.114.114.114                     |
| Interval                   | 300 s                               |
| Retry Interval             | 5 s                                 |
| Timeout                    | 3 s                                 |
| Max Ping Retries           | 3                                   |

### Router B Configuration

1. Go to **Network > Interface > WAN** and configure wired WAN connection as below.

|               |          |      |            |        |
|---------------|----------|------|------------|--------|
| Link Failover | Cellular | Port | <b>WAN</b> | Bridge |
|---------------|----------|------|------------|--------|

— WAN\_1

Enable

☒

Port

WAN

Connection Type

Static IP

IPv4 Address

10.10.0.12

Netmask

255.255.255.0

IPv4 Gateway

10.10.0.1

IPv6 Address

fe80::26e1:24ff:fe0:3ee0

Prefix-length

64

IPv6 Gateway

MTU

1500

Primary DNS

8.8.8.8

Secondary DNS

Enable NAT

☒

2. Go to **Network > VRRP > VRRP** and configure VRRP parameters as below.

|             |  |
|-------------|--|
| <b>VRRP</b> |  |
|-------------|--|

Status

DISABLE

VRRP Settings

Enable

☒

Interface

Bridge0

Virtual Router ID

1

Virtual IP

192.168.1.254

Priority

100

Advertisement Interval (s)

1

Preemption Mode

☐

IPv4 Primary Server

8.8.8.8

IPv4 Secondary Server

114.114.114.114

Interval

300

s

Retry Interval

5

s

Timeout

3

s

Max Ping Retries

3

Once you complete all configurations, click **Apply** button on the top-right corner to make changes take effect.

**Result:** normally, A is the master router, used as the default gateway. When the power of Router A is down or Router A suffers from failure, Router B will become the master router, used as the default gateway. With Preemption Mode enabled, Router A will be master and Router B will demote back to be the backup once Router A can access the Internet again.

## Related Topics

[VRRP Setting](#)

## 4.10 QoS Application Example

### Example

Configure the UR35 router to distribute local preference to different FTP download channels. The total download bandwidth is 75000 kbps.

**Note:** the “Total Download Bandwidth” should be less than the real maximum bandwidth of WAN or cellular interface.

| FTP Server IP & Port | Percent | Max Bandwidth(kbps) | Min Bandwidth(kbps) |
|----------------------|---------|---------------------|---------------------|
| 110.21.24.98:21      | 40%     | 30000               | 25000               |
| 110.32.91.44:21      | 60%     | 45000               | 40000               |

### Configuration Steps

1. Go to **Network > QoS > QoS(Download)** to enable QoS and set the total download bandwidth.

2. Click “+” to set up service classes.

**Note:** the percents must add up to 100%.

| Name | Percent(%) | Max BW(kbps) | Min BW(kbps) | Operation |
|------|------------|--------------|--------------|-----------|
| 1    | 40         | 30000        | 25000        | [X] [ + ] |
| 2    | 60         | 45000        | 40000        | [X] [ + ] |

3. Click “+” to set up service category rules.



| Service Category Rules |              |             |                |                  |          |                  |           |
|------------------------|--------------|-------------|----------------|------------------|----------|------------------|-----------|
| Name                   | Source IP    | Source Port | Destination IP | Destination Port | Protocol | Service Category | Operation |
| ftp1                   | 110.21.24.98 | 21          |                |                  | ANY      | 1                |           |
| ftp2                   | 110.32.91.44 | 21          |                |                  | ANY      | 2                |           |
|                        |              |             |                |                  |          |                  |           |

**Note:**

**IP/Port: null refers to any IP address/port.**

Click **Save** and **Apply** button.

**Related Topic**

[QoS Setting](#)

**4.11 DLMS Client Example**

UR35 routers can work as DLMS clients. We are about to take an example of configuring router to read data from meters and upload it to the platform.

**Configuration Steps**

1. Connect the meter to the serial port of the router.
2. Go to **Service > Serial Port > Serial2**, enable Serial2 and configure serial port parameters. The serial port parameters must be consistent with those of the DLMS meter. Then configure Serial Mode as DLMS Connection, and click "Navigate to the Services- DLMS page to configure".

Serial1

Serial 2

Serial Settings

Enable

☒

Serial Type

RS485

Baud Rate

9600

Data Bits

8bits

Stop Bits

1bits

Parity

None

Software Flow Control

☐

Serial Mode

DLMS Connect

[Navigate to the Services- DLMS page to configure.](#)

3. Jump to **DLMS > Physical Device Settings**, click "Add Device" to create a new DLMS physical device interface and configure device parameters as below.



**Edit device1**

|                        |                                     |
|------------------------|-------------------------------------|
| Enable                 | <input checked="" type="checkbox"/> |
| Serial                 | Serial2(RS485)                      |
| Device Name            | device1                             |
| Server Address         | 17                                  |
| Logical Server Address | 16                                  |
| Client Address         | 16                                  |
| Access security        | None                                |
| Transport Security     | None                                |
| Logical Name           | <input checked="" type="checkbox"/> |

OK Cancel

After configuring the DLMS physical device, press the "Test Connection" button to verify whether the configuration is correct. If the connection fails, an error message will be returned to prompt the user to reconnect or modify the configuration parameters.

Add Device

| Name    | Enable                              | Status    | Last Connection Time | Operation                                                                   |
|---------|-------------------------------------|-----------|----------------------|-----------------------------------------------------------------------------|
| device1 | <input checked="" type="checkbox"/> | Connected | 2025-09-05 07:26:35  | <a href="#">Test Connection</a> <a href="#">Edit</a> <a href="#">Delete</a> |

- Go to **DLMS > COSEM Group Settings**, click "Add Group" to create a new DLMS group and configure how frequently you want to read the data from the devices.

**Edit**

|             |                                     |
|-------------|-------------------------------------|
| Enable      | <input checked="" type="checkbox"/> |
| Name        | cosem1                              |
| Interval    | 20 s                                |
| COSEM Value | <a href="#">Single Add</a>          |

Click "Single Add" button, you can configure the COSEM value name and select the physical value device created earlier. Then click the "Scan" button, the COSEM object of the selected device will be displayed below. When you click the "Reapply" button, the OBIS Code and Class ID will be automatically filled in the above configuration items.


**Single Add**

|                  |                                     |
|------------------|-------------------------------------|
| Enable           | <input checked="" type="checkbox"/> |
| COSEM Value Name | 1                                   |
| Physical Device  | device1                             |
| OBIS Code        | 0.0.42.0.0.255                      |
| COSEM Class ID   | Data (ID:1)                         |

Scan


| OBIS Code      | COSEM Class ID | Apply   |
|----------------|----------------|---------|
| 0.0.42.0.0.255 | Data (ID:1)    | Reapply |
| 0.0.43.1.0.255 | Data (ID:1)    | Reapply |
| 0.0.43.1.1.255 | Data (ID:1)    | Reapply |
| 0.0.43.1.2.255 | Data (ID:1)    | Reapply |

Once all of the configuration is enabled and saved, we can re-open the COSEM group we have created, and press the TEST button.

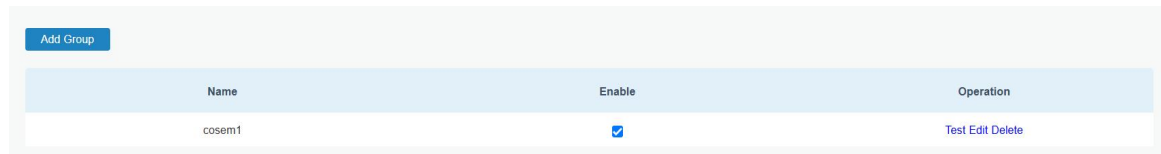

| Name   | Enable                              | Operation                                                        |
|--------|-------------------------------------|------------------------------------------------------------------|
| cosem1 | <input checked="" type="checkbox"/> | <a href="#">Test</a> <a href="#">Edit</a> <a href="#">Delete</a> |

5. Go to **DLMS > Platform Connection Settings**, click “Add Connection” to create a new platform connection and configure the parameters.

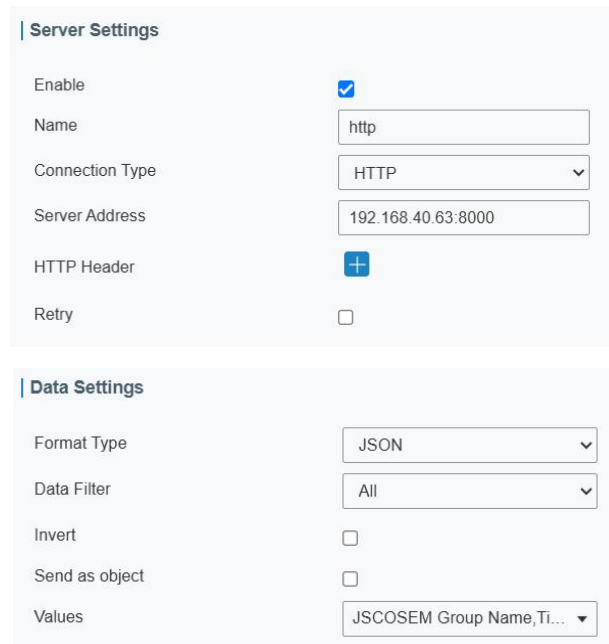

**Server Settings**

Enable ☒

Name

Connection Type

Server Address

HTTP Header

Retry ☐

**Data Settings**

Format Type


Data Filter

Invert ☐

Send as object ☐

Values

Check if the platform is connected.

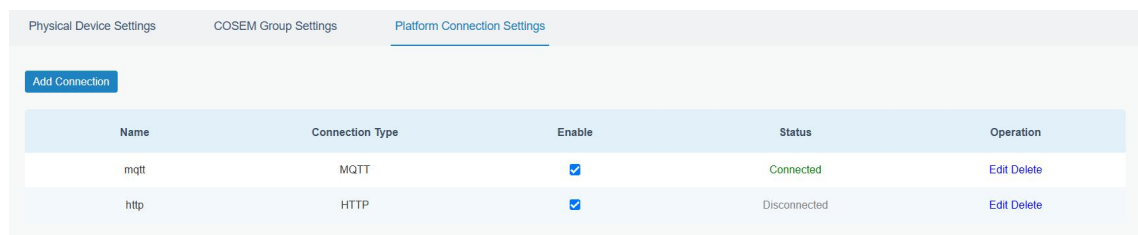

| Name | Connection Type | Enable                              | Status       | Operation                                   |
|------|-----------------|-------------------------------------|--------------|---------------------------------------------|
| mqtt | MQTT            | <input checked="" type="checkbox"/> | Connected    | <a href="#">Edit</a> <a href="#">Delete</a> |
| http | HTTP            | <input checked="" type="checkbox"/> | Disconnected | <a href="#">Edit</a> <a href="#">Delete</a> |

## Related Topic

[Serial Port](#)

**[END]**